

Backwash Flow Controller Disassembly

1. Remove clean-out plug and inspect the flow washer area (Figure 108).
2. Remove any foreign material lodged in or near the flow washer(s) (Figure 109).

NOTE AVOID USING A SHARP OBJECT WHICH MIGHT CUT OR DAMAGE THE RUBBER FLOW WASHER(S). SHOULD IT NOT BE POSSIBLE TO CLEAR THE CONTROLLER THROUGH THE CLEAN OUT PLUG, REMOVAL OF THE FLOW CONTROL NIPPLE WILL BE REQUIRED TO GAIN BETTER ACCESS TO THE FLOW WASHER AREA.

If removal of the Backwash Flow Control nipple is necessary, disconnect the flexible tubing from the compression fitting. Carefully separate the nipple from both the drain line and the Brunermatic valve (Figure 110). Inspect and clean flow washer(s) (Figure 111 and Figure 112).

Backwash Flow Controller Reassembly

1. When replacing the Backwash Flow Control nipple, make certain the compression fitting is downstream of the flow washer.
2. Connect the flexible tubing to the compression fitting located in the side of the Backwash Flow Control nipple.
3. Insert and tighten clean-out plug. (Figure 108)

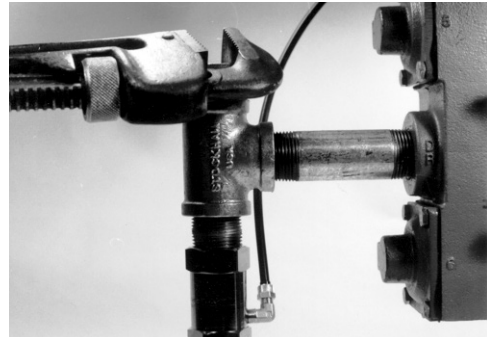


Figure 108.



Figure 109.

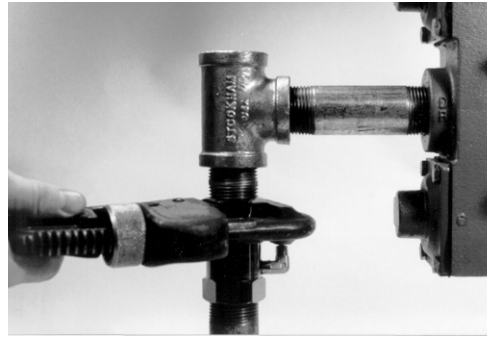


Figure 110.

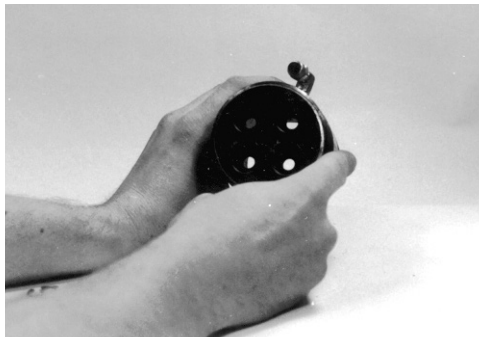


Figure 111.

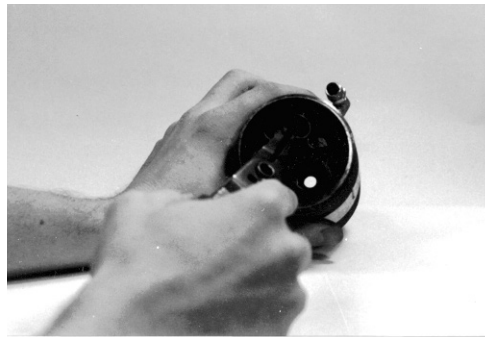


Figure 112.