



Water is Life Wichita

Project Manual Project Reference Code: WNW



Table of Contents

Project Team	3
Project Descriptions & Warranty	4
Material Specifications	5
Hardware List	6-7
Electronics Description	8
Electronics Troubleshooting	9
Electronics Parts List	10-11
Maintenance	12
Reference Image Descriptions	13
Reference Images	14-20
Engineered Drawing and Wiring Diagram	21
Timer Instructions	23



Project Team

Artist

Joseph O'Connell
joconnell@creativemachines.com

Creative Machines Team

Creative Machines

4141 E. Irvington Rd.
Tucson, AZ 85714
T: 520.294.0939
www.creativemachines.com

Project Manager

Alexandra Kirschbaum
akirschbaum@creativemachines.com

Designer

Ellie Franzen
efranzen@creativemachines.com

Electronics Manager

Jon Katz
jstkatz@creativemachines.com

Production Manager

Lloyd Matthews
lmatthews@creativemachines.com

Fabrication Lead

Angela Fimbres
afimbres@creativemachines.com

Structural Engineer

Schneider Structural Engineers
Ron Schneider, P.E., S.E.
435 East 9th Street
Tucson, AZ 85705
rschneider@sastructural.com

Nine dot Arts

Grant Adams
Curator
Direct: 720-689-3075
Office: 303-999-0383
grant@ninedotarts.com

Project Description + Warranty

Artist Statement

Water Is Life Wichita

The sculpture *Water is Life Wichita* celebrates the essential role water plays in the life of Wichita. From a distance the sculpture is a large water drop made of marine-grade stainless steel with a dull rubbed finish. Cutouts in the surface of the drop depict water above and below the earth's surface as well as plants and animals that rely on water. As evening comes every day, the sculpture is lit from within by a point-source light fixture that casts illuminated shadows on the ground nearby. A button allows visitors to change the color.

Location & Placement

City of Wichita Northwest Water Facility
2120 N Hoover Rd
Wichita, KS 67212

Dimensions & Shape

60" tall teardrop

Warranty

Creative Machines warrants all parts and workmanship in connection with the Services/Work against defects for one year after Acceptance and agrees to promptly replace and install, or cause any manufacturer to replace and install, all defective parts and repair all defects of workmanship, as necessary to give effect to said Warranty. The warranty will extend from 12/13/23 (installation) through 12/13/24. The Public Artwork will be constructed to meet or exceed industry standards for durability and access for maintenance and repair. Those portions of the Public Artwork that are designed for interaction with the public shall be included in this Warranty to withstand normal appropriate use by the public. Under this warranty, Creative Machines will only

repair rust that causes structural damage to the piece.

Owner agrees that once Acceptance has occurred and the Work is owned by Owner, Owner shall take the first steps in diagnosis and replacement following procedures outlined in the Public Artwork Documentation and other suggestions provided by Creative Machines. If such steps are insufficient to fix the Work then Creative Machines will fix the Work at its expense during the Warranty period. Creative Machines will not reimburse Owner for fixing Public Artwork unless Creative Machines has been consulted first and agreed to cover these costs.

Beyond the Warranty period, Creative Machines will provide technical advice via phone and email for life at an hourly rate or fixed fee. Creative Machines will supply replacement parts and subassemblies for the cost of time, materials and shipping.

This Warranty does not cover damages caused by vandalism, Acts of God, or damage by Owner's staff members.

Material Specifications

1. Item: Stainless Steel Teardrop Sculpture

Source: Creative Machines

Specifications: 11 gauge, 316 marine grade stainless steel

2. Item: Custom Base Plate

Source: Creative Machines

Specifications: 1/4" 316 marine grade stainless steel

3. Item: Hardware

Source: Various

Specifications: See detail drawings and Hardware List for more information


4. Item: Electronics Components

Source: Various




Specifications: See Electronics Parts List for more information



Hardware List

Source	Photograph	Details
McMaster-Carr (562) 692-5911 http://www.mcmaster.com		Description: Super-Corrosion Resistant 316 Stainless Steel Hex Head Nut 1/2", 13 thread Material: 316 Stainless Steel Use: Attachment of sculpture to base CM Reference: Stainless steel nuts (base), McMaster #95005A135
McMaster-Carr (562) 692-5911 http://www.mcmaster.com		Description: Super-Corrosion Resistant 316 Stainless Steel Hex Head Screw 1/2", 13 thread Material: 316 Stainless Steel Use: Attachment of sculpture to base CM Reference: Stainless steel bolts (base), McMaster #93190A714
McMaster-Carr (562) 692-5911 http://www.mcmaster.com		Description: Super-Corrosion-Resistant Threaded Rod, 1/2"-13 Thread Size, 1 Foot Long Material: 316 Stainless Steel Use: Anchor bolts for sculpture CM Reference: Anchors, McMaster #94400A350
McMaster-Carr (562) 692-5911 http://www.mcmaster.com		Description: Super-Corrosion-Resistant Extra-Wide Hex Nut for High-Pressure 1/2" 13 thread Material: 316 Stainless Steel Use: Nuts for anchor bolts CM Reference: Anchor nuts, McMaster #97619A440

Hardware List (continued)

Source	Photograph	Details
<p>McMaster-Carr (562) 692-5911 http://www.mcmaster.com</p>		<p>Description: Stainless Steel Washer for 1/2" Screw Size, 0.531" ID, 1.25" OD Material: 316 Stainless Steel Use: Washers for anchor nuts CM Reference: Anchor washers, McMaster #90107A033</p>
<p>Stud Welding Products, Inc. (562) 923-7883 (STUD) http://www.studweldprod.com</p>		<p>Description: Non-Flanged Capacitor Discharge Studs (Stainless Steel) Material: Stainless Steel Use: Attachment of conduit, electronics equipment on interior of sculpture CM Reference: Studs</p>
<p>McMaster-Carr (562) 692-5911 http://www.mcmaster.com</p>		<p>Description: Passivated 18-8 Stainless Steel Phillips Flat Head Screw M6 x 1 mm Thread, 16 mm Long Material: Passivated 18-8 Stainless Steel Use: Securing button plate to sculpture CM Reference: Button plate fasteners, McMaster # 92010A426</p>

Electronics Description

Synopsis

Refer to the electrical diagram for details. The sculpture has two, waterproof, point-source LED fixtures installed on the interior and a single waterproof button installed on the side inside a junction box. 4-pole M12 cables connect the light to the button junction box.

Warnings

Do not use the equipment other than as intended. Do not climb on the equipment. Hazardous voltages exist inside the electrical enclosure installed in the building. Only qualified personnel should open the electrical enclosure.

Daily Startup / Shutdown

There is no typical daily startup or shutdown procedure. An astronomical timer (Honeywell RPLS740B1008) toggles power to the system at preset times (typically on near sunset and off near sunrise).

User Operation

After powering on the sculpture, the lighting starts with a blue color. The color will change automatically to a random color roughly every 5 minutes.

A button is installed on the side of the sculpture that users can press to change the color of the lights. When the button is held down, the lights will cycle slowly through different colors. The color shown when the button is released will remain shown for approximately 5 minutes, followed by a return to the random color selection changing roughly every 5 minutes.

In addition to changing colors periodically, the light output will oscillate slightly around a center hue value to give a more dynamic feel to the sculptures.

The timer can be re-programmed so that the lights turn on/off at different times using the instructions included in this manual, or the manufacturer-supplied instructions.

Electronics Maintenance

Only qualified electricians should provide maintenance work on the installed lighting system. No regular maintenance work is required for the electronics.

Electronics

Troubleshooting

All components are designed to be field replaceable by a qualified electrician. Ensure power to enclosure and/or sculpture is turned OFF before checking or servicing electrical connections. All work should be done by a qualified electrician.

Symptom	Possible Cause	Resolution
Lights do not turn on as expected	Faulty timer function	Refer to the operation manual for the timer to check function. Only an electrician should modify the timer. Only an electrician should modify timer hardware.
	Loss of power to electrical enclosure	Have an electrician confirm power is being delivered to electrical enclosure.
	Bad connection between timer and terminal block	Have an electrician check the electrical connections from to and from the timer.
Lights do not turn off as expected	Faulty timer function	Refer to the operation manual for the timer to check function. Only an electrician should modify the timer. Only an electrician should modify timer hardware.
Lights are 'flashing' or powering on/off sporadically	Bad connection/ Power supply failure	Check the electrical connections in the junction box inside the sculpture. Have an electrician check electrical connections in the electrical enclosure then check power supply function, replace as needed.
Lights do not show the full range of colors	Possible problem with light fixture	Contact Creative Machines for additional guidance.
Lights do not change color when button is pressed	Possible faulty button	Contact Creative Machines for additional guidance
	Possible problem with light fixture	Contact Creative Machines for additional guidance

Electronics Parts List

Source

Creative Machines

(520) 294-0939

<http://www.mcmaster.com>

Photograph



Details

Manufacturer: Creative Machines

Part Number: KSP G2

Description: Point Source LED Light Fixture

Allied Electronics

(866) 433-5722

<http://www.alliedelec.com>



Manufacturer: Meanwell

Part Number: HLG-80h-24

Description: 24V, 100W DC power supply

Amazon

<http://www.amazon.com>



Manufacturer: Honeywell

Part Number: RPLS740B1008

Description: Astronomical Timer Switch

Automation Direct

(800) 633-0405

<http://www.automationdirect.com>



Manufacturer: Hubbell-Wiegmann

Part Number: N1C121406

Description: Electrical enclosure for power supplies and timer

Electronics Parts List (continued)

Source

Allied Products

(866) 433-5722

<http://www.alliedelec.com>

Photograph



Details

Manufacturer: ITW Switches

Part Number: 58-M-A12B24

Description: Button

McMaster-Carr

(562) 692-5911

<http://www.mcmaster.com>



Manufacturer: 3M

Part Number: Schotchlok IDC 314

Description: Waterproof splice

Artwork Maintenance

Routine Maintenance

Stainless steel art requires very little maintenance. This sculpture may need periodic washing. If heavy cleaning is required, use a mild soap and water solution. A careful maintenance person can complete this work.

Avoid harsh cleaners when cleaning, as they may react with the metal. It is best to clean stainless steel with either a soft cloth or a soft brush to avoid scratching the finish. Water spots are common on stainless steel and can be removed with rubbing alcohol or glass cleaner. If more difficult or excessive water spots develop, use white vinegar and a non-scouring pad to remove the spots. As soon as the vinegar is applied, keep the area damp for a few moments then wipe dry with a clean cloth.

Stainless steel cleaning wipes can be used to reduce the appearance of fingerprints but must be used on the entire sculpture to maintain the appearance. This work should only be performed as necessary.

It is common to have sculptures impacted by nature, such as by birds or surrounding trees. The heavier debris can change the appearance of the outer oxidized layer of metal. If this occurs, it will be necessary to

use more aggressive cleaning techniques such as sanding and the use of acids. For sanding heavier stains and scratches, the use of a dual action random orbiting palm sander with 80 grit sandpaper is very effective, but it is important to note that the area sanded will appear lighter in color due to the fact that the old oxide layer has been removed. Over time this oxide layer will redevelop and begin to match the surrounding area but will still be noticeable unless the entire plane or surface has been sanded or “feathered” to match. Products such as CitraSurf 77 Plus can be used in an area where rust occurs. This acid should be used with caution due to its etching capabilities, and you should always read the product directions and MSDS. It can be applied to weld beads, panels, or hardware etc. to passivate the affected area. After application, rinse with clean water to neutralize the acid so unwanted staining or excessive etching does not occur. Avoid using harsh chemicals on or around any electronics within the sculpture because this may weaken or damage components.

For graffiti or staining to the sculptures, artwork can be cleaned using soapy water or Tagaway Graffiti Removal Products.

Due to the sculpture’s location near the parking area and building entry, once a year

it is suggested that the sculpture is cleaned to remove any superficial rusting or abrasions caused by salted roadway or sidewalk during the winter.

Cyclic Maintenance

In ten years, the LED lighting will likely need to be removed and updated. At that time, we grant permission to update the lights using the latest LED lighting technology as long as the colors and programming are maintained. Contact Creative Machines for more information and pricing or replacement parts.

Conservation

Contact Creative Machines to do conservation work. A skilled metal works or art fabrication/refurbishing company could complete any structural repairs.


Reference Image Descriptions

See images on the following pages

1. Sculpture during fabrication
2. Sculpture during fabrication
3. Sculpture during fabrication
4. Button plate
5. Base plate
6. Sculpture during fabrication
7. Sculpture during fabrication
8. Electronics installation
9. Electronics installation
10. Junction box
11. KSP LEDs
12. Electrical system
13. Installing button
14. Button electronics
15. Button electronics
16. Button electronics
17. Electronics installation
18. Completed sculpture
19. Completed sculpture
20. Completed sculpture
21. Completed sculpture
22. Sculpture installed
23. Sculpture installed
24. Sculpture installed
25. Sculpture installed
26. Sculpture installed
27. Sculpture installed
28. Sculpture installed






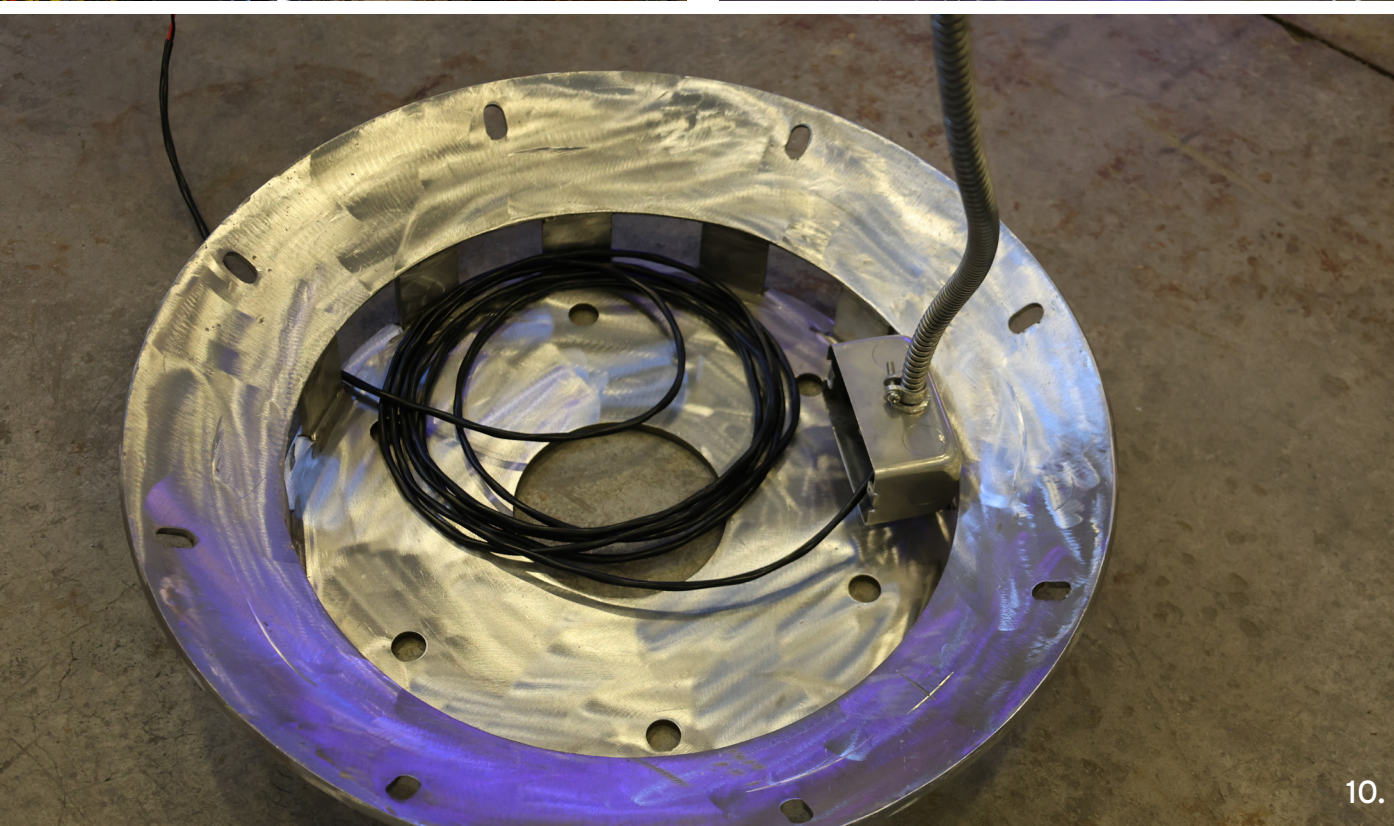




13.

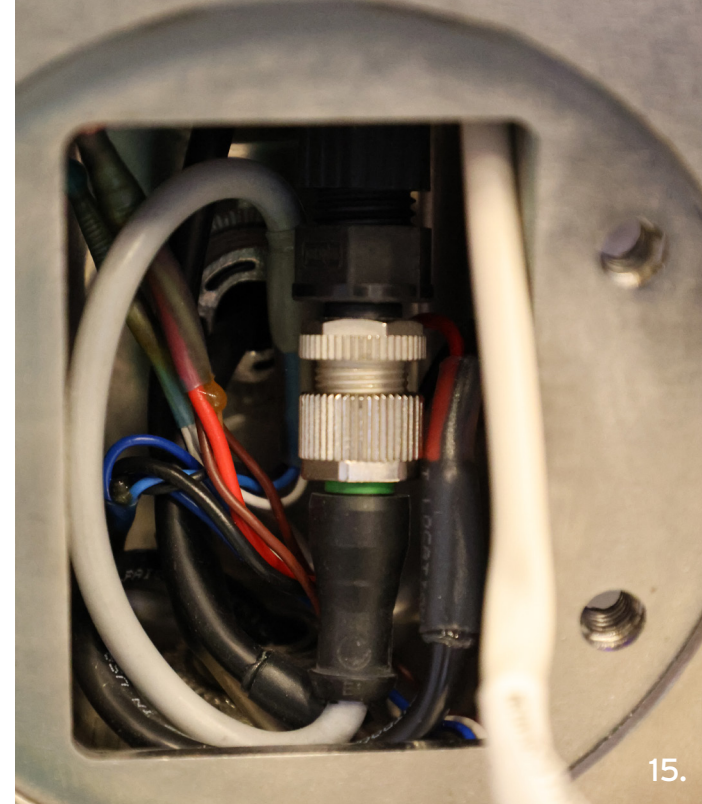



15.



14.

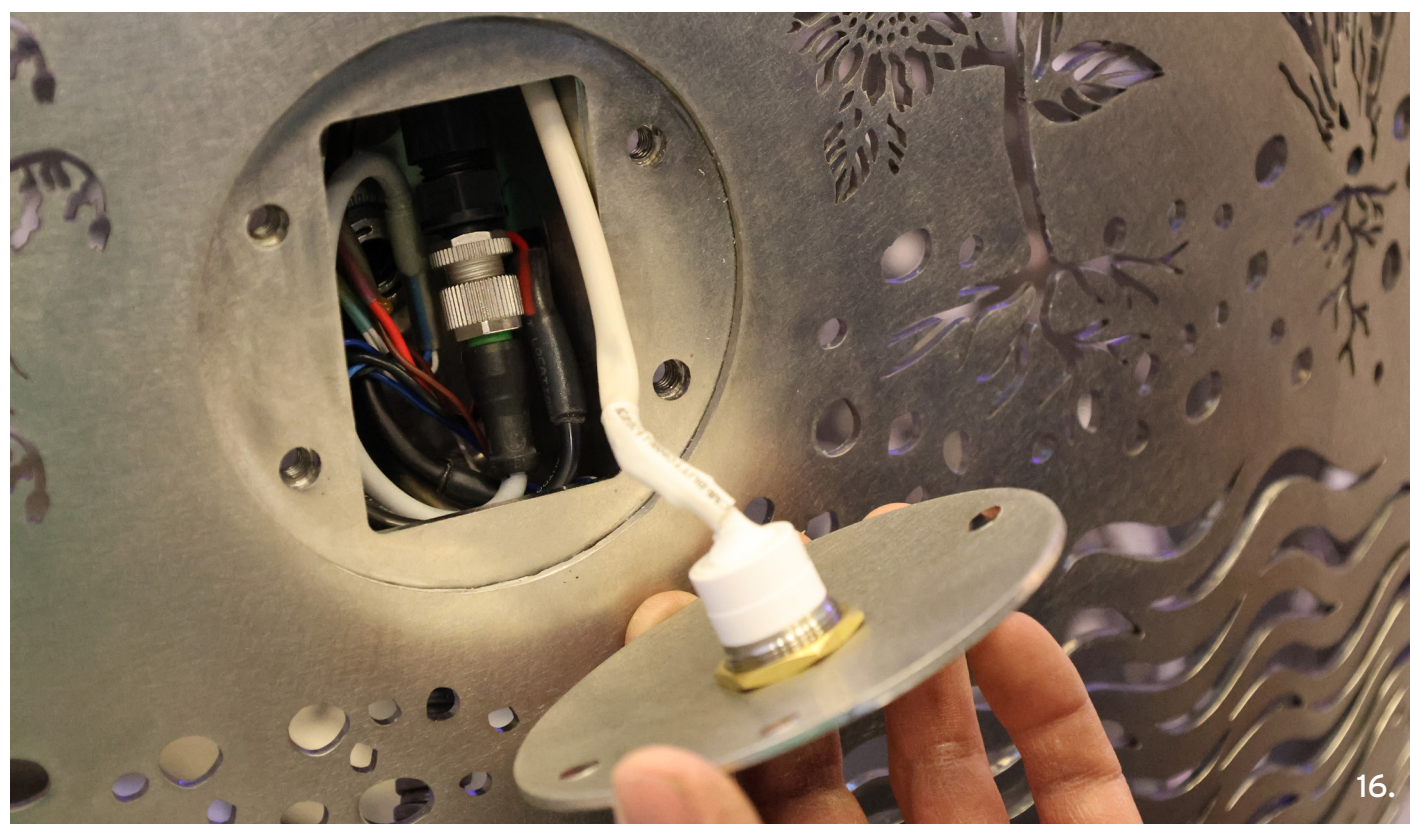

16.

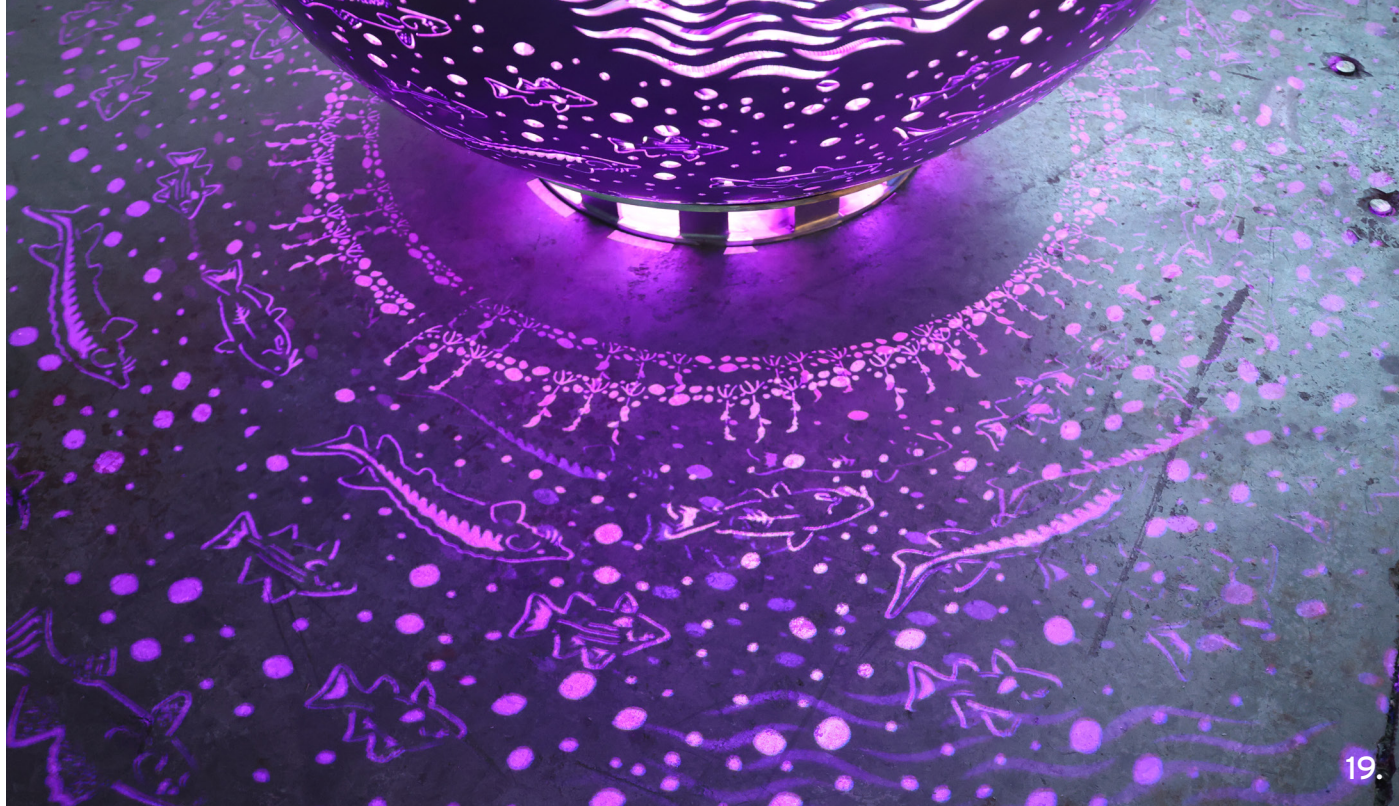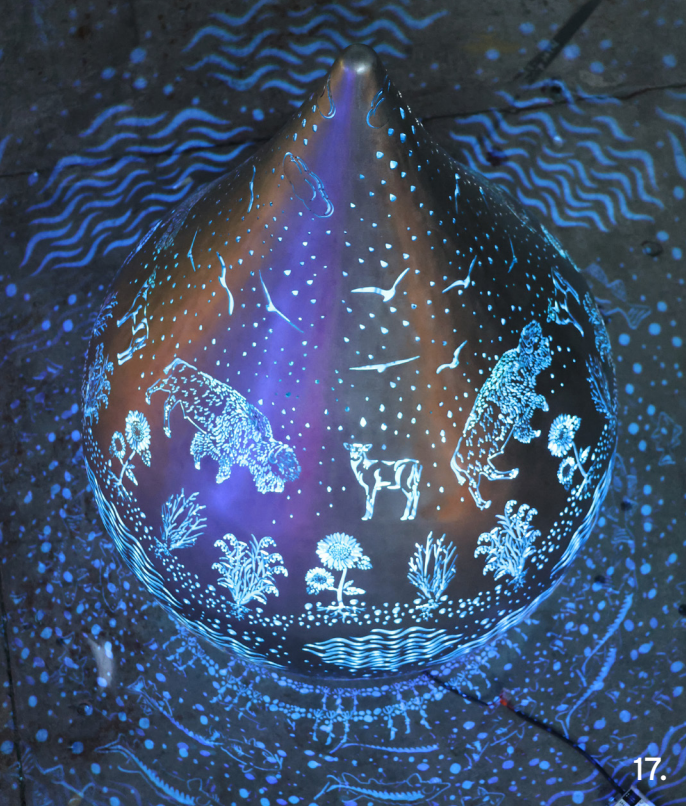



21.



23.








22.




24.



REV	DESCRIPTION	DATE
A	INITIAL RELEASE	4.24.23
B	UPDATED LOADS AND NOTES	5.26.23

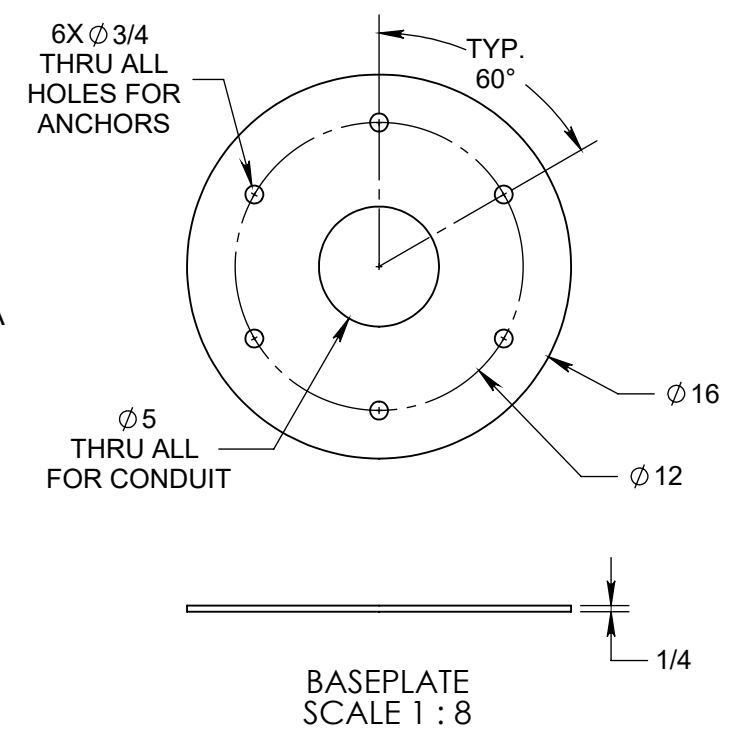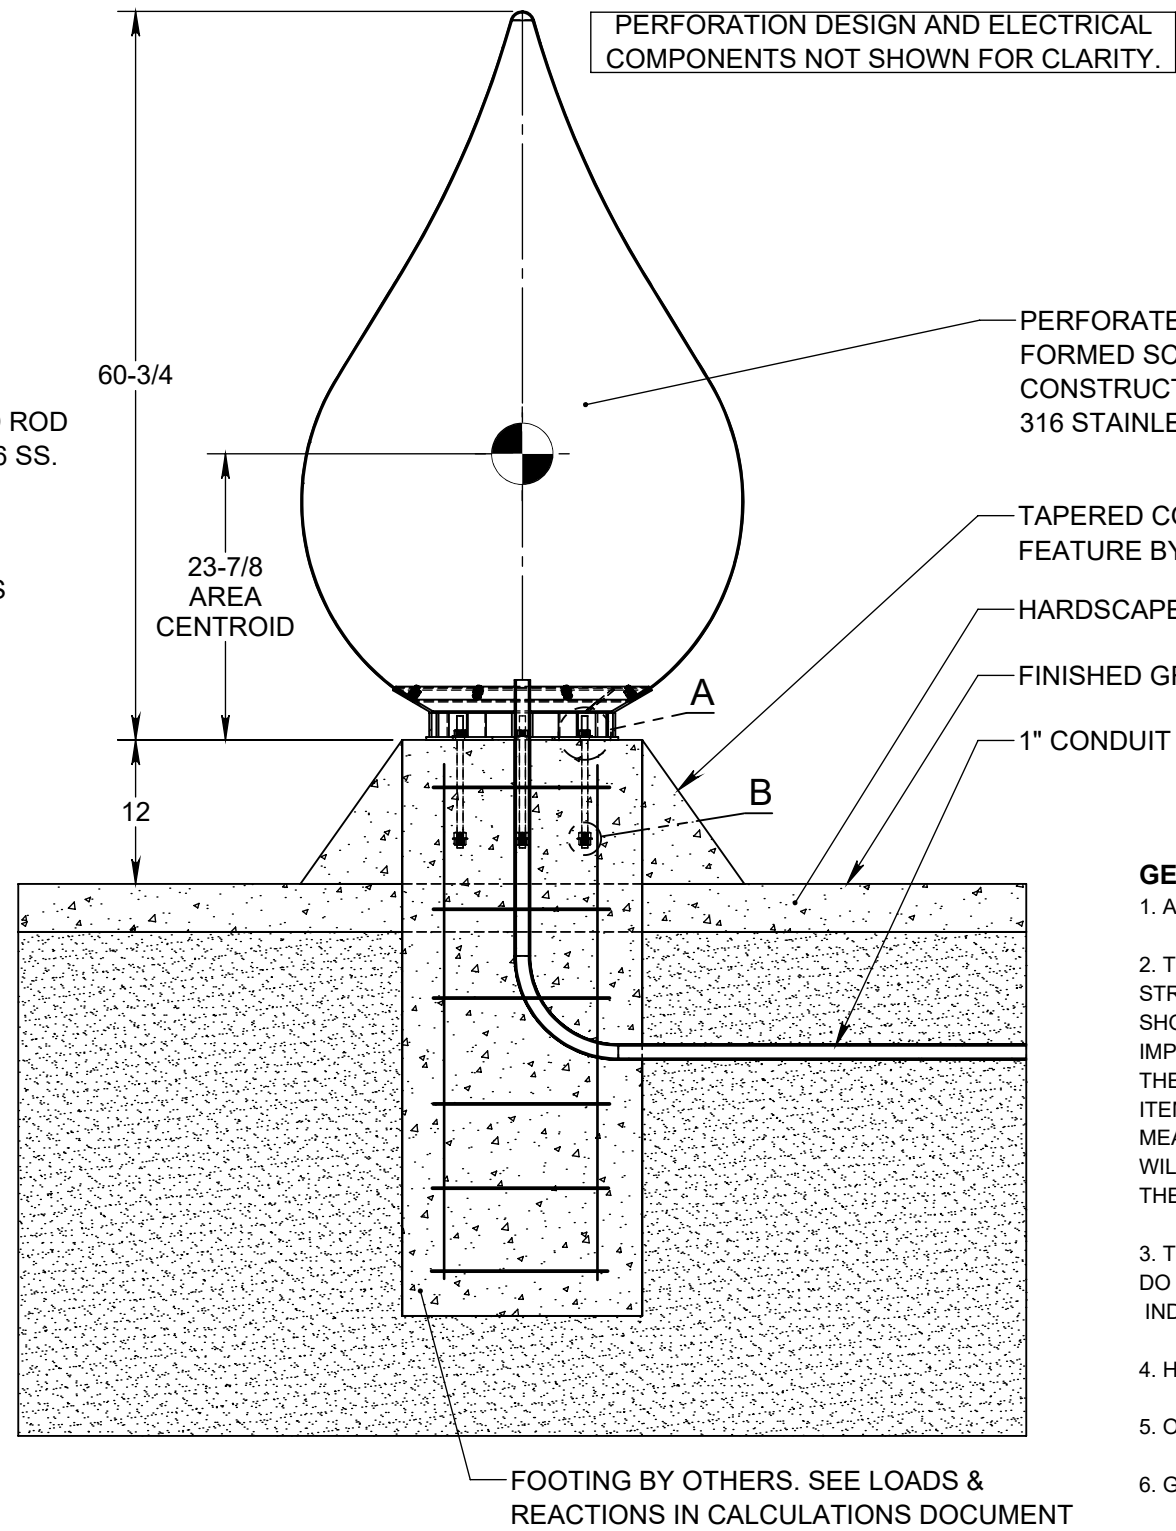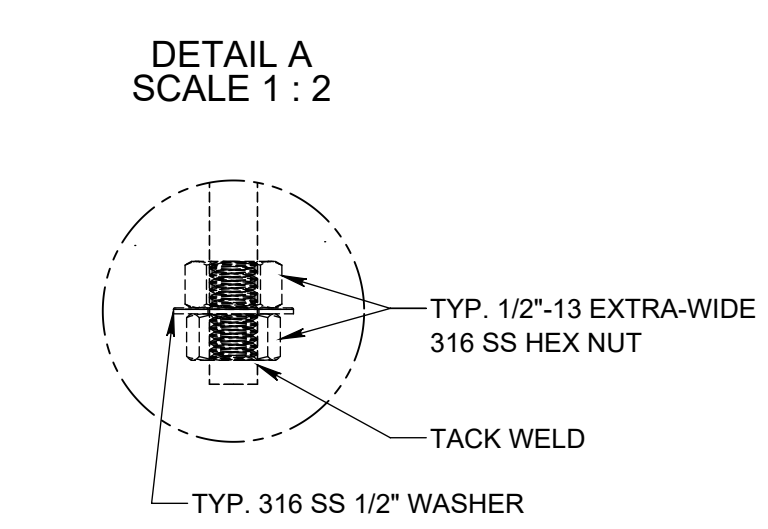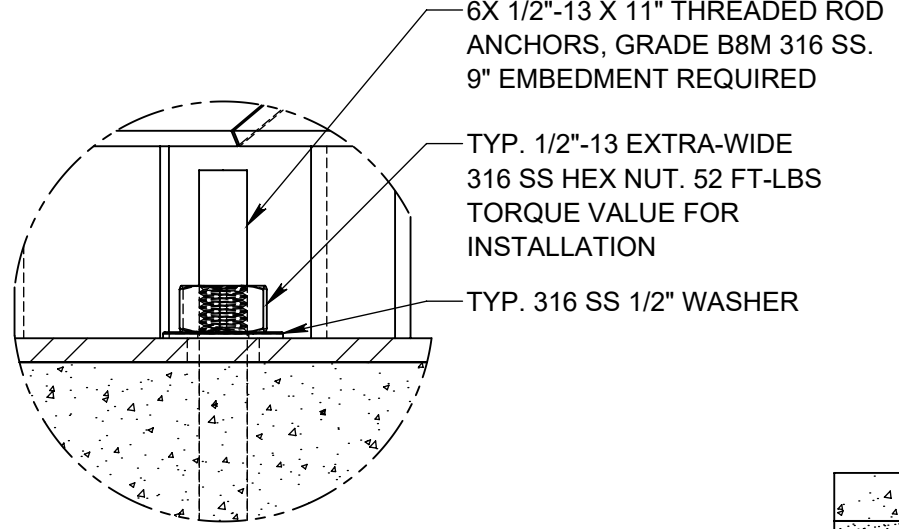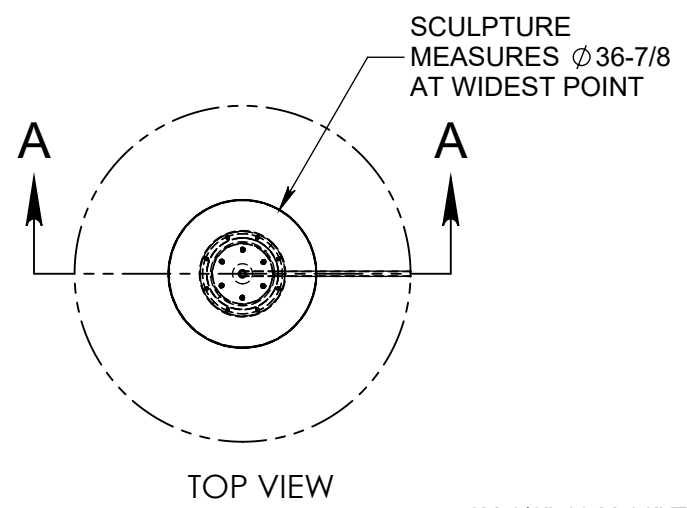


- GENERAL STRUCTURAL NOTES:**
- ALL WORK SHALL CONFORM TO 2018 IBC. $\triangle B$
 - THE CONTRACTOR SHALL TAKE ALL MEASURES NECESSARY TO PROTECT THE STRUCTURE DURING CONSTRUCTION INCLUDING, BUT NOT LIMITED TO, BRACING, SHORING, ETC. THE CONTRACTOR SHALL BE RESPONSIBLE FOR THE DESIGN AND IMPLEMENTATION OF ALL SCAFFOLDING, BRACING, AND SHORING. OBSERVATION VISITS TO THE SITE BY THE STRUCTURAL ENGINEER SHALL NOT INCLUDE INSPECTION OF THE ABOVE ITEMS. THE STRUCTURAL ENGINEER WILL NOT BE RESPONSIBLE FOR THE CONTRACTOR'S MEANS, METHODS, TECHNIQUES, SEQUENCES OR PROCEDURES OF CONSTRUCTION. NOR WILL THE STRUCTURAL ENGINEER BE RESPONSIBLE FOR CONSTRUCTION SITE SAFETY, OR THE SAFETY PRECAUTIONS AND THE PROGRAMS INCIDENT THERETO.
 - THE CONTRACT STRUCTURAL DRAWINGS REPRESENT THE FINISHED STRUCTURE. THEY DO NOT INDICATE THE METHOD OF CONSTRUCTION.
 - HORIZONTAL WIND LOAD (ANY DIRECTION) - 350 LBS $\triangle B$
 - OVERTURNING WIND LOAD (ANY DIRECTION) - 1200 FT-LBS $\triangle B$
 - GRAVITY DEAD LOAD - 200 LBS $\triangle B$
 - GRAVITY LIVE LOAD - 300 LBS $\triangle B$

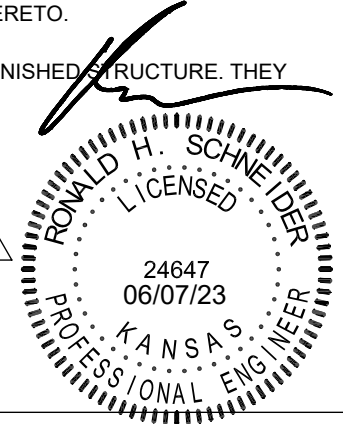


- NOTES:**
- MATERIAL: 316 STAINLESS STEEL.
 - SCULPTURE AND BASEPLATE WEIGH: 195 LBS.
 - SURFACE AREA EXPOSURE TO WIND LOAD: 9.4 SQ FT.
 - INSTALLATION SITE: N. HOOVER RD & W. ZOO BLVD, WICHITA, KS.
 - LOW VOLTAGE JUNCTION BOXES AND LIGHT FIXTURE TO BE INSTALLED INSIDE OF SCULPTURE.

<p>UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE IN INCHES AND ARE AFTER APPLIED FINISHES</p> <p>LINEAR TOLERANCES: 1 PLACE: \pm .03 2 PLACES: \pm .01 3 PLACES: \pm .005</p> <p>FRACTIONS: \pm 1/16 ANGLES: \pm 0°30'0"</p> <p>DIAMETRICAL & RADIAL TOLERANCES: 1 PLACE: \pm .03 2 PLACES: \pm .01 3 PLACES: \pm .005</p> <p>ALL PARTS TO BE FREE OF BURRS & SHARP EDGES</p>	<p>PROPRIETARY RIGHTS are included in all the information disclosed herein. This information is submitted in confidence, and neither this document nor the information disclosed herein shall be reproduced or transferred to any other document, nor shall it be used or disclosed to any persons for manufacturing or any other reasons except as specifically authorized in writing by Creative Machines Inc.</p> <p>© 2021 Creative Machines Inc.</p>	<p>DESIGNER: AB</p>	<p>CREATIVE MACHINES INC. 4141 E IRVINGTON RD., TUCSON, AZ 85714</p>	<p>PROJECT: WNW</p>	<p>DATE: 4.24.23</p>	<p>SHEET: 1 OF 1</p>	<p>SCALE: 1:16</p>	<p>SIZE: B</p>	<p>DRAWING NO: WNW01-0900</p>	<p>REV: B</p>
		<p>PROJECT: WNW</p>								

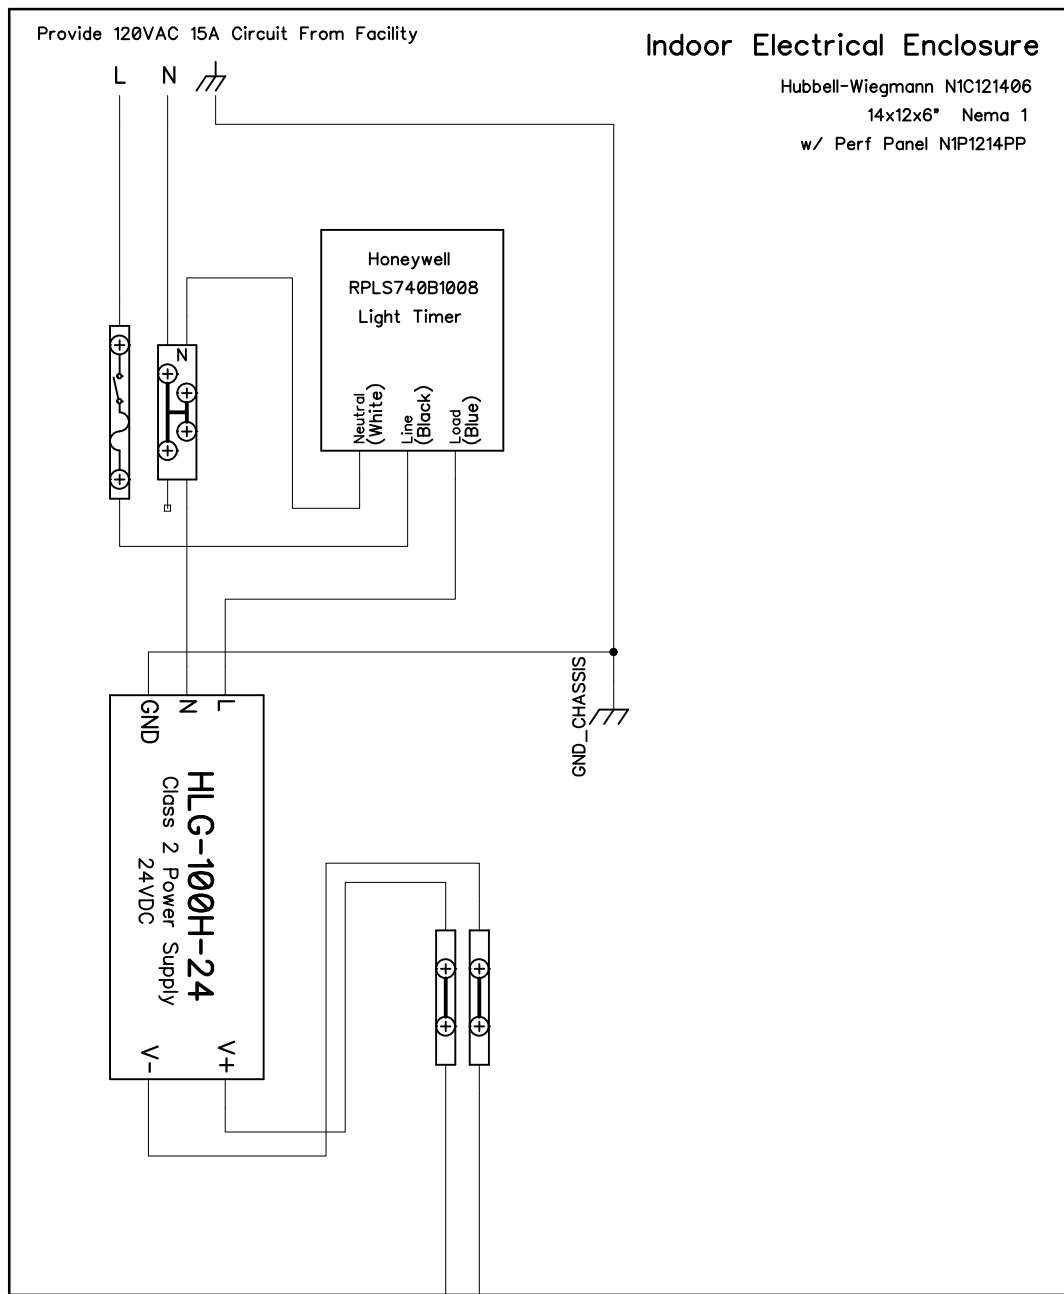

Provide 3/4" Conduit with (2) 14AWG THWN
Leave 3' service loop at indoor side and 5' at sculpture side

Red
Black

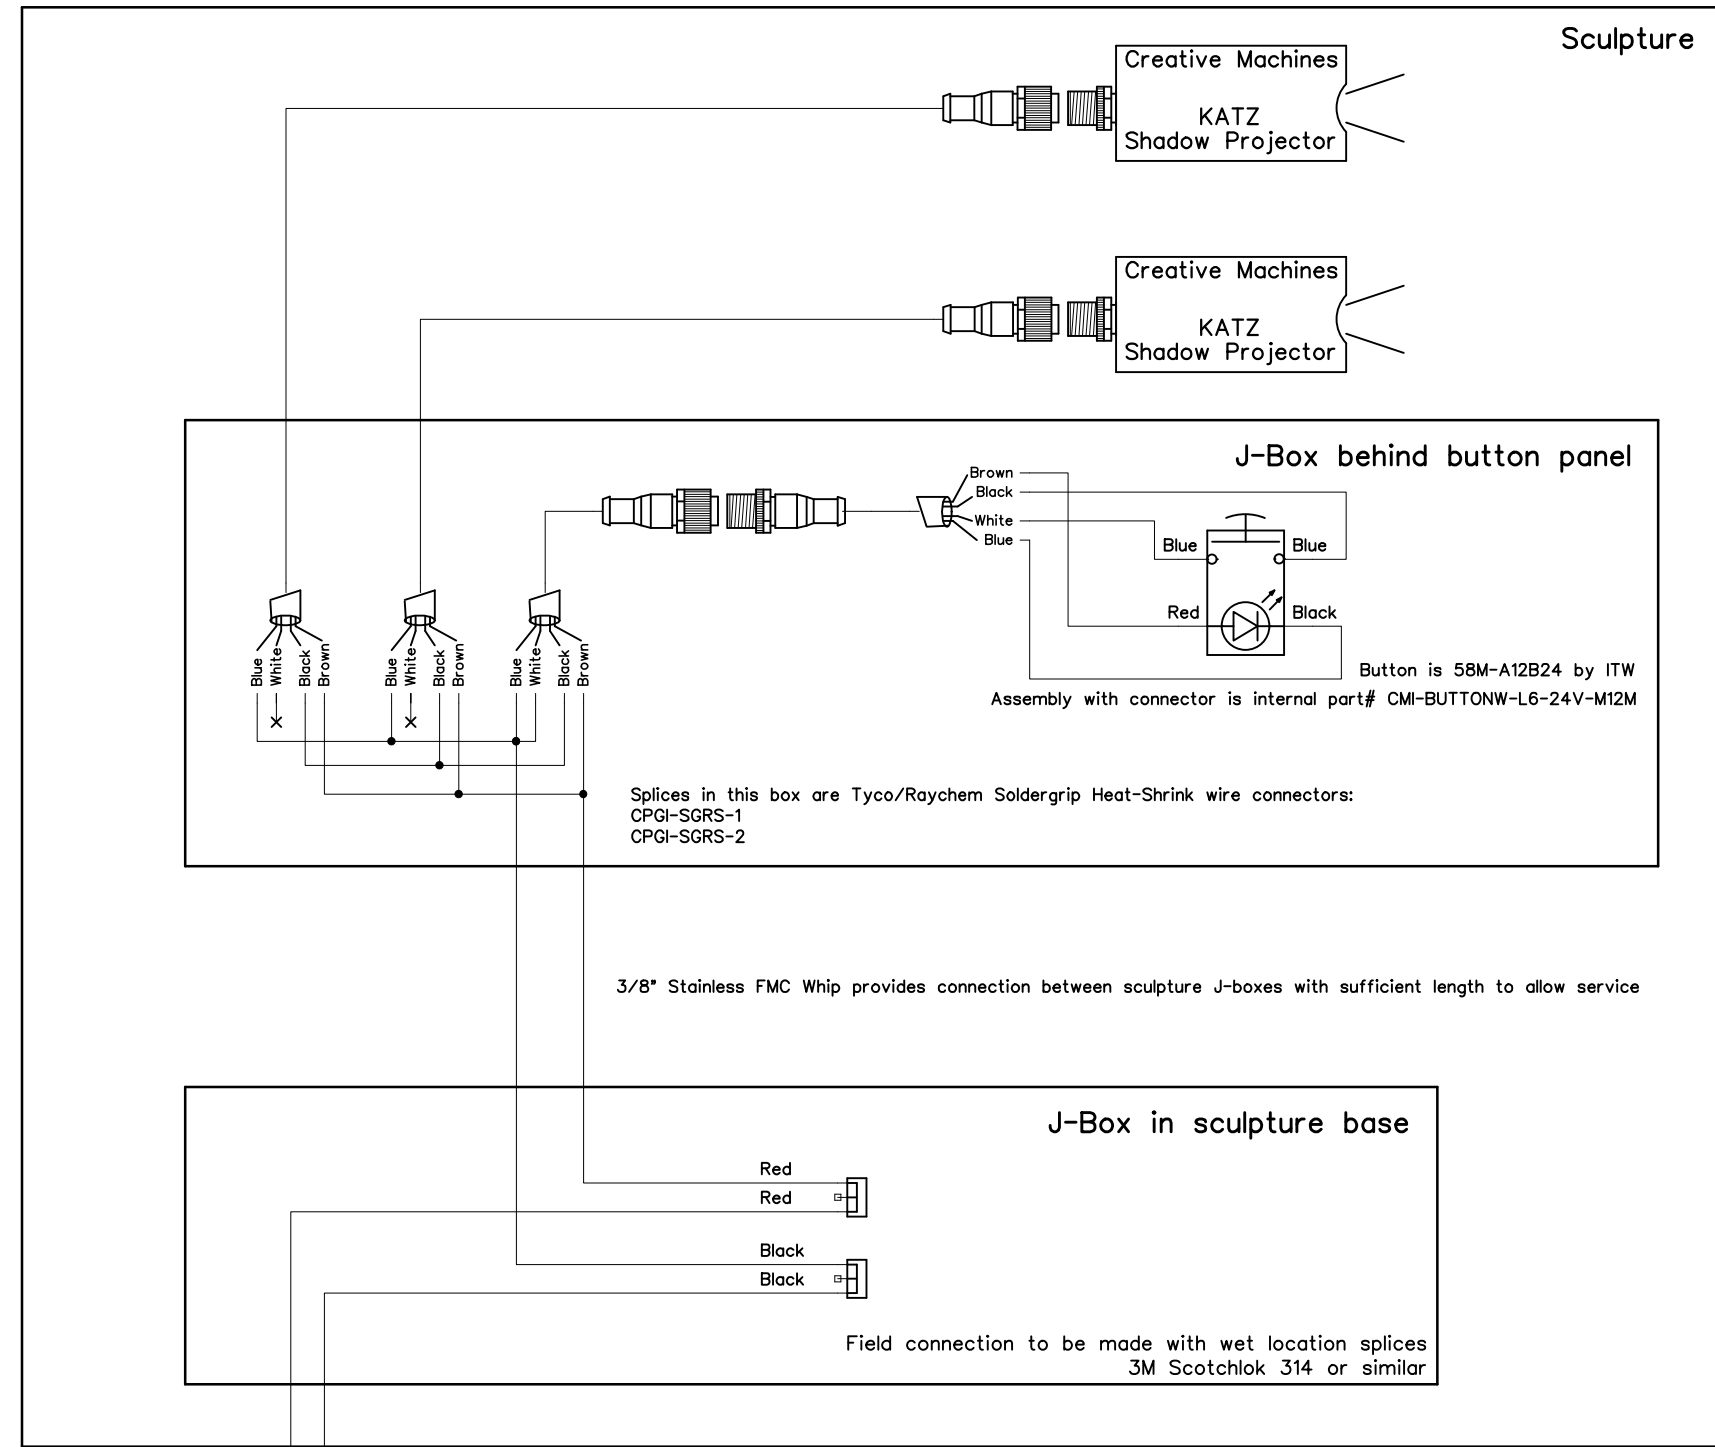

Notes:
Enclosure mounted in Electrical Room
Circuit identified as 100-PNL-0150:083

Designed by	File name		
Jonathan Katz	WNW Electrical Diagram		
PROPRIETARY RIGHTS are included in all the information disclosed herein. This information is submitted in confidence, and neither this document nor the information disclosed herein shall be reproduced or transferred to any other document, nor shall it be used or disclosed to any other document, nor shall it be used or disclosed to any persons for manufacturing or any other reasons except as specifically authorized in writing by Creative Machines Inc.	Date	Scale	
	06/20/2023	N/A	
Creative Machines Inc.	Edition	Sheet	
0	1/1		



RPLS740B / RPLS741B
7-Day / Solar Programmable Timer
for Lights and Motors

7-Day/Solar Programmable Timer

FOR SECURITY, CONVENIENCE AND ENERGY SAVINGS



RPLS740B (white)

 


RPLS741B (light almond)

KEY FEATURES

- For use with lights and motors up to 1800 W, ¼ HP on 120V
- No minimum wattage required
- Large screen with easy-to-read backlit display
- 7-day programming (up to 7 on and 7 off times per week) and sunrise/sunset activation
- Random mode turns lights on/off at random for added security when away from home
- Automatic Daylight Savings – no need to ever reprogram
- Simple to use – easy 3-button interface for easy operation and programming
- Sleek design mounts flush with wall plate
- Single pole installation (requires neutral wire)
- Manual override enables load to be turned on/off without affecting programming
- Programming protected during power outages
- Can also be used like a conventional on/off switch

* **Does not include wallplate**



Single pole



CFL compatible



Designed in Canada. Made in China.

Automation and Control Solutions

Honeywell

1985 Douglas Drive North

Golden Valley, MN 55422-3992

800-468-1502

yourhome.honeywell.com

67-6522 CB
March 2011

© 2011 Honeywell International Inc.

SPECIFICATIONS

MODEL

RPLS740B

Unit



Qty.	1
Dim. WxHxD (in.)	6.7 x 9.1 x 1.9
Carton Wt. (lbs.)	0.83
Cu. Ft	0.07

MODEL

RPLS741B

Unit



Qty.	1
Dim. WxHxD (in.)	6.7 x 9.1 x 1.9
Carton Wt. (lbs.)	0.83
Cu. Ft	0.07

Retail Package

Qty.	5
Dim. WxHxD (in.)	8.7 x 14.6 x 9.8
Carton Wt. (lbs.)	4.13
Cu. Ft	0.72

RPLS740B1008



RPLS741B1007



Honeywell

1 Applications


The RPLS740B/RPLS741B programmable wall switch has been designed to control lights and motors:

Load types	Maximum load	Examples
Lights and resistive loads (except tungsten)	1800 W (15 A @ 120 V)	<ul style="list-style-type: none"> fluorescent lights compact fluorescent lights (CFL) electronic ballasts sodium lamps block heaters
Tungsten lights	1440 W (12 A @ 120 V)	<ul style="list-style-type: none"> incandescent lights halogen lights
Motors	3/4 hp	<ul style="list-style-type: none"> pool filter pumps fans

2 Installation

NOTE: This switch cannot be used if there is no neutral wire (white wires joint together) inside the electrical box.

- 1 Cut power at the circuit breaker to avoid electric shock.
- 2 Remove the existing switch.
- 3 Install the new switch (see the appropriate section below).
- 4 Apply power at the circuit breaker.

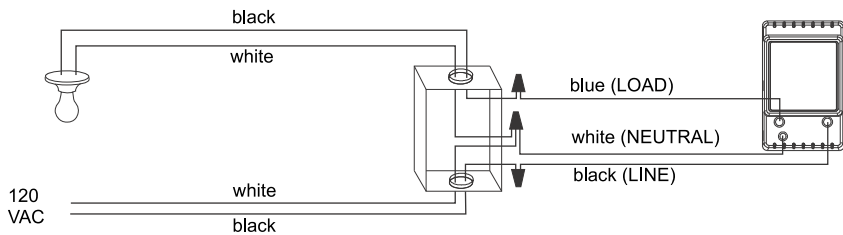


3 Quick Start-up

Set the time and date before using the timer for the first time.

The RPLS740B/RPLS741B will turn the lights on at sunset and turn them off at 11:00 pm by default. If these settings are appropriate for you, you only need to set the time and date (see shaded zone in the menu flowchart sheet). If the switch's sunset time does not correspond to the actual sunset time, see sections 5.3.3 and 5.3.4.

4 Operation

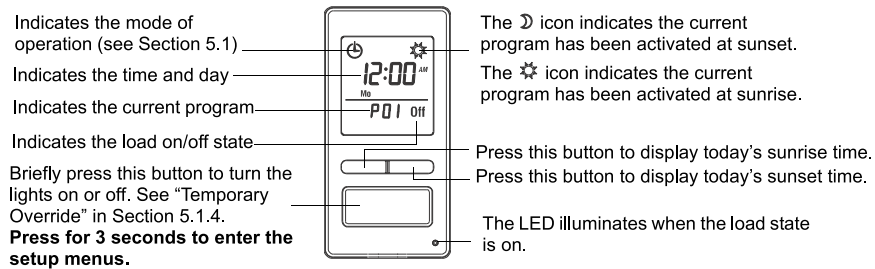

5 Setup Menus

Press the main button for 3 seconds to enter the setup menus. Refer to the menu flowchart sheet on how to navigate the menus.

5.1 Mode Menu

You can use the Mode menu to select one of the three modes of operation (see sections 5.1.1 to 5.1.3).

5.1.1 Manual Mode

In Manual mode, the RPLS740B/RPLS741B operates like a regular switch. To turn the lights on or off, briefly press the main button. The lightning bolt icon appears when the switch is in Manual mode.



5.1.2 Automatic Mode

In Automatic mode, the RPLS740B/RPLS741B turns the lights on or off according to the set programs (see Section 5.4). The clock icon as well as the current program number are displayed.



5.1.3 Random Mode

In Random mode, the RPLS740B/RPLS741B has no specific times to turn the lights on or off. This mode is designed to give the impression the house is occupied during your absence. It is similar to the Automatic mode except there is no fixed program. The programs are automatically set to different times by the RPLS740B/RPLS741B every day. The house icon appears when the switch is in Random mode.



The first "On" program occurs at sunset. Each "On" program lasts between 1 hour and 1 hour and 30 minutes; each "Off" program lasts between 15 and 30 minutes. The last "Off" program occurs between 10:30 pm and midnight.

5.1.4 Temporary Override

When the RPLS740B/RPLS741B is in Automatic or Random mode, you can press the main button at any time to override the default state for the current program. The lights will turn off if they are on and vice versa. The icon (On or Off) of the new state flashes to indicate that the state is temporary. The new state is maintained until you press the main button again or till the next "On" or "Off" program.

5.2 Time Menu

The time display flashes on the screen when the time has not yet been set or after a 4-hour power outage. Use the Time menu to select the time format (12-hour or 24-hour) and to set the clock and date.

NOTE: The date is used to determine the sunset and sunrise times.

5.3 Configuration Menu (Conf)

Use the Configuration menu to set the following parameters (see sections 5.3.1 to 5.3.4).

5.3.1 Backlight mode (SCRN)

The screen is lit at high intensity for 8 seconds when you press any button. The rest of the time, depending on the backlight mode selected, the screen behaves as follows:

Scrn Off: The screen is not lit.

Scrn On HI: The screen is lit at high intensity.

Scrn On LO: The screen is lit at low intensity (default mode).

5.3.2 Automatic Daylight Savings Time Changeover (DLS)

When automatic daylight savings time changeover is on (DLS On), the RPLS740B/RPLS741B changes to daylight savings time (summer time) at 2:00 am on the second Sunday of March and changes back to normal time (winter time) at 2:00 am on the first Sunday of November. This function is enabled (DLS On) by default.

5.3.3 Latitude and Longitude Coordinates (LAT and LONG)

The coordinates are used to turn the lights on at sunset and off at sunrise. The latitude is set to +45 and longitude to -75 by default. These settings provide approximate sunset and sunrise times for most North American cities. To obtain your city's coordinates (or those of a nearby city), see the coordinates table. You can

also obtain this information at www.geonames.org or with a Global Positioning System (GPS) device. The accuracy of the sunset and sunrise times depends on the accuracy of the coordinates you enter for your city.

NOTE: Enter a negative value for a south latitude or a west longitude.

5.3.4 Correction Factor (ADJ)

If your city's time zone is based on political or economic boundaries instead of its coordinates, your lights might switch on or off too early or too late with respect to sunrise and sunset. In this case, apply a correction factor (+1 or -1 hour; refer to addendum). Otherwise, leave it at 0 (default value).


5.4 Program Menu (Prog)

Use the Program menu to set the programs; i.e. the times you want the lights to turn On or Off when the switch is in Automatic mode. To set a program, proceed as follows:

- ❶ Select a program number (see section 5.4.1)
- ❷ Set the day(s) of the program (see section 5.4.2)
- ❸ Set the program start time (see section 5.4.3)

5.4.1 Selecting a program number

You can set up to 7 "On" programs ("P01 On" to "P07 On") and 7 "Off" programs ("P01 Off" to "P07 Off"). For example, select an "On" program to set when to turn the lights on; select an "Off" program to set when to turn the lights off.

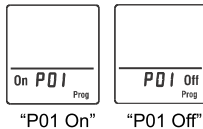

5.4.2 Setting the day(s) of the program

After selecting a program, set the day(s) of the program. You can select a specific day, all 7 days or "none". Choose "none" for any unused program.

5.4.3 Setting the program start time

After setting the day(s) of the program, set its start time. You can select either a specific time, the sunset time or the sunrise time:

- To select a specific time:
 - (1) Advance to the hour setting and select the hour.
 - (2) Advance to the minutes setting and select the minutes.
- To select sunset or sunrise time:
 - (1) Advance to the hour setting and select the sunset time or sunrise time. **(When you scroll, the sunset time ⤵ and sunrise time ⤴ appear between 11 pm and 12 am.)**
 - (2) To enter an offset (from -70 to +70 minutes in 10-minute increments) between the sunset or sunrise time and the program start time, advance to the minutes setting and change the minutes.
 - **EXAMPLE:** If the sunset time is 6:13 pm and you change the minutes to display 6:43 pm, you have entered a delay of 30 minutes. If, later in the year, the sunset time is 4:01 pm, the program will start at 4:31 pm.
 - **NOTE:** When you enter an offset, ⤵ appears along with ⤵ or ⤴ when you display the sunset or sunrise time. To remove the offset, display the sunset or sunrise time and change the minutes until ⤵ disappears.

5.4.4 Examples

Example 1: The lights turn on at sunset and off at 11:00 pm every day (default setting).

Program	Days	Time	Program	Days	Time
P01 On	All 7 days	sunset	P01 Off	All 7 days	11:00 pm
P02 On to P07 On	None	—	P02 Off to P07 Off	None	—

Example 2: The lights turn on at sunset and off at sunrise every day.

Program	Days	Time	Program	Days	Time
P01 On	All 7 days	sunset	P01 Off	All 7 days	sunrise
P02 On to P07 On	None	—	P02 Off to P07 Off	None	—

Example 3: The lights turn on at 8:00 pm every day and turn off at 10:00 pm every day except on Saturday night when they turn off at 1:00 am.

Program	Days	Time	Program	Days	Time
P01 On	All 7 days	8:00 pm	P01 Off	Sunday (Su)	10:00 pm
P02 On	None	—	P02 Off	Monday (Mo)	10:00 pm
P03 On	None	—	P03 Off	Tuesday (Tu)	10:00 pm
P04 On	None	—	P04 Off	Wednesday (We)	10:00 pm
P05 On	None	—	P05 Off	Thursday (Th)	10:00 pm
P06 On	None	—	P06 Off	Friday (Fr)	10:00 pm
P07 On	None	—	P07 Off	Sunday (Su)	1:00 am

Be careful about overlapping!

For example, if you set "P01 Off" at 10:00 pm for all 7 days and set "P02 Off" to 11:00 pm for Saturday, on Saturday, the lights will turn off at 10:00 pm, not 11:00 pm since "P01 Off" is set to an earlier time than "P02 Off".

6 Reset to default Settings

To return the switch to its default settings, simultaneously press both main and left buttons and hold. The software version will appear for 5 seconds. **RST** will appear for the next 5 seconds. Release the buttons when all segments appear on the screen. The switch is now reset (see default settings in the menu flowchart).



7 Troubleshooting

The display is faded or irregular.	The ambient temperature is either below or above switch's operating temperature.
The sunset or sunrise time is inaccurate.	<ul style="list-style-type: none"> • The date or time is wrong (see section 5.2). • The longitude or latitude is wrong (see section 5.3.3). • The correction factor is wrong (see section 5.3.4). • You have entered an offset (see section 5.4.3).

8 Specifications

Supply: 120 VAC, 60 Hz

Maximum load: 1800 watts

Operating temperature range: -15 °C to 50 °C (5 °F to 122 °F)

Storage temperature range: -40 °C to 60 °C (-40 °F to 140 °F)

Power outage: The screen is blank. Only the time must be set if the outage lasts more than 4 hours; all other settings and programs are permanently saved.

Latitude range: from -65° to +65°

Solar table precision: +/- 11 min. (within ±60° latitude)

Certification: UL (c UL us)

Warranty

Honeywell warrants this product, excluding battery, to be free from defects in the workmanship or materials, under normal use and service, for a period of one (1) year from the date of purchase by the consumer. If at any time during the warranty period the product is determined to be defective or malfunctions, Honeywell shall repair or replace it (at Honeywell's option).

If the product is defective,

- (i) return it, with a bill of sale or other dated proof of purchase, to the place from which you purchased it, or
- (ii) call Honeywell Customer Care at 1-800-468-1502. Customer Care will make the determination whether the product should be returned to the following address: Honeywell Return Goods, Dock 4 MN10-3860, 1885 Douglas Dr N, Golden Valley, MN 55422, or whether a replacement product can be sent to you.

This warranty does not cover removal or reinstallation costs. This warranty shall not apply if it is shown by Honeywell that the defect or malfunction was caused by damage which occurred while the product was in the possession of a consumer.

Honeywell's sole responsibility shall be to repair or replace the product within the terms stated above. HONEYWELL SHALL NOT BE LIABLE FOR ANY LOSS OR DAMAGE OF ANY KIND, INCLUDING ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING, DIRECTLY OR INDIRECTLY, FROM ANY BREACH OF ANY WARRANTY, EXPRESS OR IMPLIED, OR ANY OTHER FAILURE OF THIS PRODUCT. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation may not apply to you.

THIS WARRANTY IS THE ONLY EXPRESS WARRANTY HONEYWELL MAKES ON THIS PRODUCT. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IS HEREBY LIMITED TO THE ONE-YEAR DURATION OF THIS WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

If you have any questions concerning this warranty, please write Honeywell Customer Relations, 1985 Douglas Dr, Golden Valley, MN 55422 or call 1-800-468-1502. In Canada, write Retail Products ON15-02H, Honeywell Limited/Honeywell Limitée, 35 Dynamic Drive, Scarborough, Ontario M1V4Z9.



Customer Assistance

If you have any questions about your light switch, go to <http://yourhome.honeywell.com>, or call Honeywell Customer Care toll-free at 1-800-468-1502.

1 Applications


L'interrupteur mural programmable RPLS740B/RPLS741B a été conçu pour commander des appareils d'éclairage et des moteurs.

Types de charge	Charge maximale	Exemples
Éclairages et charges résistives (sauf tungstène)	1800 W (15 A à 120 V)	<ul style="list-style-type: none"> éclairage fluorescent éclairage fluorescent compact ballasts électroniques éclairage au sodium chauffe-moteur
Éclairages tungstène	1440 W (12 A à 120 V)	<ul style="list-style-type: none"> éclairage incandescent éclairage halogène
Moteurs	3/4 hp	<ul style="list-style-type: none"> pompes ventilateurs

2 Installation

NOTA : L'interrupteur ne peut être utilisé s'il n'y a pas de fil neutre (fils blancs reliés ensemble) dans la boîte électrique.

- Mettre le circuit hors tension à partir du disjoncteur afin d'éviter tout risque de choc électrique.
- Enlever l'interrupteur existant.
- Installer le nouvel interrupteur (voir la section appropriée ci-dessous).
- Remettre le circuit sous tension à partir du disjoncteur.

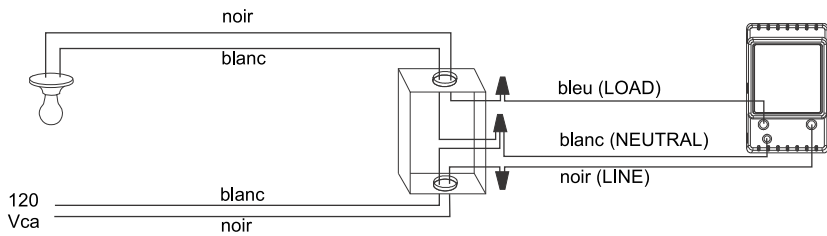

3 Démarrage rapide

Régler l'heure et la date avant d'utiliser l'interrupteur pour la première fois.

Le RPLS740B/RPLS741B allumera les lumières au coucher du soleil et les éteindra à 23h par défaut. Si ces réglages vous conviennent, vous n'avez qu'à régler l'heure et la date (voir la case grise dans la feuille de l'organigramme des menus). Si l'heure du coucher du soleil de l'interrupteur diffère de l'heure réelle du coucher du soleil, voir les sections 5.3.3 et 5.3.4.

4 Fonctionnement

Indique le mode de fonctionnement (voir section 5.1)

Indique l'heure et le jour

Indique le programme en cours

Indique l'état marche/arrêt (On/Off) de la charge

Appuyer brièvement sur cette touche pour allumer ou éteindre les lumières. Voir "Dérogation temporaire" dans la section 5.1.4. Appuyer pendant 3 secondes pour entrer dans les menus.

L'icône ☽ indique que le programme en cours a été activé au coucher du soleil.

L'icône ☀ indique que le programme en cours a été activé au lever du soleil.

Appuyer sur cette touche pour afficher l'heure du lever du soleil d'aujourd'hui.

Appuyer sur cette touche pour afficher l'heure du coucher du soleil d'aujourd'hui.

Le témoin s'allume lorsque l'état de la charge est à "Marche" (On).

5 Menus de réglage

Appuyer sur la touche principale pendant 3 secondes pour entrer dans les menus. Consulter la feuille de l'organigramme des menus pour savoir comment naviguer dans les menus.

5.1 Menu Mode

Vous pouvez utiliser le menu Mode pour sélectionner l'un des trois modes de fonctionnement (voir les sections 5.1.1 à 5.1.3).

5.1.1 Mode Manuel

En mode Manuel, le RPLS740B/RPLS741B fonctionne comme un interrupteur conventionnel. Pour allumer ou éteindre les lumières, appuyer brièvement sur la touche principale. L'icône ☽ apparaît lorsque l'interrupteur est en mode Manuel.



5.1.2 Mode Automatique

En mode Automatique, le RPLS740B/RPLS741B allume et éteint les lumières selon les programmes réglés (voir la section 5.4). L'icône ☽ ainsi que le numéro du programme en cours sont affichés.



5.1.3 Mode Aléatoire

En mode Aléatoire, le RPLS740B/RPLS741B n'a pas de moment précis pour allumer ou éteindre les lumières. Ce mode sert à donner l'impression que votre résidence est occupée pendant votre absence. Il est semblable au mode Automatique, sauf qu'il n'y a pas de programme fixe. Les programmes sont automatiquement réglés chaque jour par le RPLS740B/RPLS741B à des heures différentes. L'icône ☽ apparaît lorsque l'interrupteur est en mode Aléatoire.



Le premier programme « Marche » se produit au coucher du soleil. Chaque programme « Marche » dure entre 1 heure et 1 heure et demie, et chaque programme « Arrêt » dure entre 15 et 30 minutes. Le dernier programme « Arrêt » se produit entre 22h30 et minuit.

5.1.4 Dérogation temporaire

Lorsque le RPLS740B/RPLS741B est en mode Automatique ou Aléatoire, vous pouvez, en tout temps, appuyer sur la touche principale pour déroger à l'état en cours; les lumières s'éteindront si elles sont allumées et vice versa. L'icône (On ou Off) du nouvel état clignote pour indiquer que l'état est temporaire. Le nouvel état est maintenu jusqu'à ce qu'on appuie de nouveau sur la touche principale ou jusqu'au prochain programme « Marche » (On) ou « Arrêt » (Off).

5.2 Menu Heure (Time)

L'affichage de l'heure clignote à l'écran lorsque l'heure n'est pas encore réglée ou après une panne de courant de plus de 4 heures. Utiliser le menu Heure pour sélectionner le format d'heure (12 heures ou 24 heures) ainsi que pour régler l'horloge et la date.

NOTA : La date sert à déterminer l'heure du coucher du soleil et celle du lever du soleil.

5.3 Menu Configuration (Conf)

Utiliser le menu Configuration pour régler les paramètres suivants (voir les sections 5.3.1 à 5.3.4).

5.3.1 Mode de rétroéclairage (SCRN)

L'écran est allumé à haute intensité pendant 8 secondes lorsque vous appuyez sur un bouton. Le reste du temps, selon le mode de rétroéclairage choisi, l'écran se comporte comme suit :

Scrn Off : L'écran n'est pas éclairé.

Scrn On HI : L'écran est éclairé à haute intensité.

Scrn On LO : L'écran est éclairé à basse intensité (mode par défaut).

5.3.2 Passage automatique à l'heure avancée (DLS)

Quand le passage automatique à l'heure avancée est activé (DLS On), le RPLS740B/RPLS741B passe à l'heure avancée (heure d'été) à 2h le deuxième dimanche de mars et passe à l'heure normale (heure d'hiver) à 2h le premier dimanche de novembre. La fonction est activée (DLS On) par défaut.

5.3.3 Latitude et longitude (LAT et LONG)

Les coordonnées servent à allumer les lumières au coucher du soleil et les éteindre au lever du soleil. Par défaut, la latitude est à +45 et la longitude est à -75. Ces réglages offrent des heures approximatives de cou-

cher et de lever du soleil pour la plupart des villes nord-américaines. Pour obtenir les coordonnées de votre ville (ou celles d'une ville avoisinante), consulter la table des coordonnées. Cette information peut aussi être obtenue au www.geonames.org ou avec système de navigation (GPS). L'exactitude de l'heure du coucher du soleil et de l'heure du lever du soleil dépend de l'exactitude des coordonnées que vous avez enregistré pour votre ville.

NOTA : Inscrivez une valeur négative pour une valeur de latitude sud ou une valeur de longitude ouest.

5.3.4 Facteur de correction (ADJ)

Si le fuseau horaire de votre ville est basé sur des frontières politiques ou économiques plutôt que sur ses coordonnées, vos lumières pourraient s'allumer ou s'éteindre trop tôt ou trop tard par rapport au lever ou coucher du soleil. Dans ce cas, inscrire un facteur de correction (+1 ou -1 heure, consulter le supplément). Sinon, le laisser à 0 (valeur par défaut).

5.4 Menu Programme (Prog)

 
Utiliser le menu Programme pour régler les programmes; c.à.d. les heures auxquelles vous voulez que les lumières s'allument ou s'éteignent lorsque l'interrupteur est en mode Automatique. Pour régler un programme, procéder comme suit :

- 1 Sélectionner un numéro de programme (voir la section 5.4.1)
- 2 Sélectionner le(s) jour(s) du programme (voir la section 5.4.2)
- 3 Régler l'heure du début du programme (voir la section 5.4.3)


5.4.1 Sélectionner un numéro de programme

Vous pouvez enregistrer jusqu'à 7 programmes « Marche » (« P01 On » à « P07 On ») et 7 programmes « Arrêt » (« P01 Off » à « P07 Off »).

Sélectionner un programme « Marche » à laquelle régler l'heure pour allumer les lumières. Sélectionner un programme « Arrêt » à laquelle régler l'heure pour éteindre les lumières.



« P01 On »

 



« P01 Off »

5.4.2 Régler le jour du programme

Une fois le programme sélectionné, régler le jour du programme. Vous pouvez sélectionner un jour spécifique, les 7 jours ou « aucun » (none). Choisir « aucun » pour les programmes non utilisés.

5.4.3 Régler l'heure du début du programme

  Après avoir réglé le jour du programme, régler l'heure du début. Vous pouvez sélectionner une heure spécifique, l'heure du coucher du soleil ou l'heure du lever du soleil.

- Pour sélectionner une heure spécifique :
 - (1) Avancer au réglage d'heure et sélectionner l'heure.
 - (2) Avancer au réglage des minutes et sélectionner les minutes.
- Pour sélectionner le coucher ou le lever du soleil :
 - (1) Avancer au réglage d'heure et sélectionner le coucher ou le lever du soleil. **(Lorsque vous faites défiler les heures, le coucher ☽ et le lever ☼ du soleil apparaissent entre 23h et 0h.)**
 - (2) Pour programmer un écart (de -70 à +70 minutes par intervalles de 10 minutes) entre le coucher ou lever du soleil et l'heure du début du programme, avancer au réglage des minutes et changer les minutes.
- **EXEMPLE** : Si le coucher du soleil est 18h13 et que vous changez les minutes pour afficher 18h43, cela signifie que vous avez programmé un délai de 30 minutes. Si, plus tard dans l'année, le coucher du soleil est 16h01, le programme débutera à 16h31.
- **NOTA** : Lorsque vous programmez un écart,  apparaît en même temps que ☽ ou ☼ quand vous affichez l'heure du coucher ou lever du soleil. Pour enlever l'écart, afficher l'heure du coucher ou lever du soleil et changer les minutes jusqu'à ce que  disparaisse.

5.4.4 Exemples

Exemple 1 : Chaque jour, les lumières s'allument au coucher du soleil et s'éteignent à 23h (réglages par défaut).

Programme	Jours	Heure	Programme	Jours	Heure
P01 On	les 7 jours	coucher du soleil	P01 Off	les 7 jours	23h
P02 On à P07 On	aucun	—	P02 Off à P07 Off	aucun	—

Exemple 2 : Chaque jour les lumières s'allument au coucher du soleil et s'éteignent au lever du soleil.

Programme	Jours	Heure	Programme	Jours	Heure
P01 On	les 7 jours	coucher du soleil	P01 Off	les 7 jours	lever du soleil
P02 On à P07 On	aucun	—	P02 Off à P07 Off	aucun	—

Exemple 3 : Les lumières s'allument à 20h chaque jour et s'éteignent à 22h chaque jour, sauf le samedi soir où elles s'éteignent à 1h.

Programme	Jours	Heure	Programme	Jours	Heure
P01 On	les 7 jours	20h	P01 Off	dimanche (Su)	22h
P02 On	aucun	—	P02 Off	lundi (Mo)	22h
P03 On	aucun	—	P03 Off	mardi (Tu)	22h
P04 On	aucun	—	P04 Off	mercredi (We)	22h
P05 On	aucun	—	P05 Off	jeudi (Th)	22h
P06 On	aucun	—	P06 Off	vendredi (Fr)	22h
P07 On	aucun	—	P07 Off	dimanche (Su)	1h

Attention au chevauchement!

Si vous réglez « P01 Off » à 22h pour les 7 jours et vous réglez « P02 Off » à 23h pour le samedi, le samedi les lumières s'éteindront à 22h et non 23h parce que « P01 Off » est réglé à une heure plus tôt que « P02 Off ».

6 Réinitialisation aux réglages par défaut

Pour remettre l'interrupteur aux réglages par défaut, appuyer simultanément sur la touche principale et la touche gauche et les maintenir enfoncées. La version du logiciel apparaîtra à l'écran pendant 5 secondes, suivie de RST pendant 5 autres secondes. Relâcher les touches lorsque tous les segments s'affichent à l'écran. L'interrupteur est maintenant réinitialisé (voir les réglages par défaut dans le diagramme de programmation).



7 Problèmes et solutions

L'affichage est pâle ou irrégulier.	La température ambiante est inférieure ou supérieure à la température de fonctionnement de l'interrupteur.
L'heure du coucher ou lever du soleil est inexacte.	<ul style="list-style-type: none"> • La date ou l'heure est incorrecte (voir la section 5.2). • La longitude ou la latitude est incorrecte (voir la section 5.3.3). • Le facteur de correction est incorrect (voir la section 5.3.4). • Vous avez programmé un écart (voir la section 5.4.3).

8 Fiche technique

Alimentation : 120 VAC, 60 Hz

Charge maximale : 1800 watts

Température de fonctionnement : -15 °C à 50 °C (5 °F à 122 °F)

Température d'entreposage : -40 °C à 60 °C (-40 °F à 140 °F)

Panne de courant : L'écran est éteint. Seule l'heure doit être réglée si la panne dure plus de 4 heures; les autres réglages et les programmes sont conservés de façon permanente.

Plage de latitude : de -65° à +65°

Précision du tableau solaire : +/- 11 min. (latitudes inférieures à ±60°)

Certification : UL (c UL us)

Garantie

Honeywell garantit ce produit, à l'exception des piles, contre tout vice de fabrication ou de matière dans la mesure où il en est fait une utilisation et un entretien convenables, et ce, pour un (1) an à partir de la date d'achat par le consommateur. En cas de défaut de fabrication ou de mauvais fonctionnement pendant la période de garantie, Honeywell remplacera ou réparera le produit (au gré de Honeywell).

Si le produit est défectueux,

- (i) le retourner, accompagné d'une preuve d'achat indiquant la date d'achat, à l'endroit où il a été acheté, ou
- (ii) s'adresser au Service à la clientèle de Honeywell en composant le 1-800-468-1502. Le Service à la clientèle déterminera alors si le produit doit être retourné à l'adresse suivante : Honeywell Return Goods, Dock 4 MN10-3860, 1885 Douglas Dr N, Golden Valley, MN 55422, ou si un produit de remplacement peut vous être expédié.

La présente garantie ne couvre pas les frais de retrait ou de réinstallation. La présente garantie ne s'appliquera pas s'il est démontré que la défectuosité ou le mauvais fonctionnement est dû à un endommagement du produit alors que le consommateur l'avait en sa possession.

La responsabilité de Honeywell se limite à réparer ou à remplacer le produit conformément aux modalités susmentionnées. HONEYWELL N'EST EN AUCUN CAS RESPONSABLE DES PERTES OU DOMMAGES, Y COMPRIS LES DOMMAGES INDIRECTS OU ACCESSOIRES DÉCOULANT DIRECTEMENT OU INDIRECTEMENT D'UNE VIOLATION QUELCONQUE D'UNE GARANTIE, EXPRESSE OU TACITE, APPLICABLE AU PRÉSENT PRODUIT NI DE TOUTE AUTRE DÉFECTUOSITÉ DU PRÉSENT PRODUIT. Certaines provinces ne permettent pas l'exclusion ou la restriction des dommages indirects et, par conséquent, la présente restriction peut ne pas s'appliquer.

LA PRÉSENTE GARANTIE TIENT LIEU DE TOUTES LES AUTRES GARANTIES, EXPRESSES OU TACITES, ET LES GARANTIES DE VALEUR MARCHANDE ET DE CONFORMITÉ À UNE FIN PARTICULIÈRE SONT PAR LES PRÉSENTES EXCLUES APRÈS LA PÉRIODE DE UN AN DE LA PRÉSENTE GARANTIE. Certaines provinces ne permettent pas de limiter la durée des garanties tacites et, par conséquent, la présente limitation peut ne pas s'appliquer.

La présente garantie donne au consommateur des droits légaux spécifiques et peut-être certains autres droits qui peuvent varier d'une province à l'autre.

Pour toute question concernant la présente garantie, prière d'écrire au Service à la clientèle de Honeywell à l'adresse suivante : Honeywell Customer Relations, 1985 Douglas Drive, Golden Valley, MN 55422, ou encore composer le 1-800-468-1502. Au Canada, prière de s'adresser au service des Produits de détail, Honeywell Limited/Honeywell Limitée, 35, Dynamic Drive, Scarborough (Ontario) M1V 4Z9.

Service à la clientèle

Si vous avez des questions sur le fonctionnement de votre interrupteur programmable, veuillez consulter <http://yourhome.honeywell.com>, ou vous adresser au Service à la clientèle de Honeywell en composant sans frais le **1-800-468-1502**.

1 Aplicaciones


El interruptor mural programable RPLS740B/RPLS741B fue diseñado para controlar aparatos de iluminación y motores.

Tipos de carga	Carga máxima	Ejemplos
Iluminación y cargas resistivas (salvo tungsteno)	1800 W (15 A a 120 V)	<ul style="list-style-type: none"> • luces fluorescentes • luces fluorescentes compactas • lámparas de sodio • calentador de motores
Iluminación a tungsteno	1440 W (12 A a 120 V)	<ul style="list-style-type: none"> • luces incandescentes • luces halógenas
Motores	3/4 hp	<ul style="list-style-type: none"> • bombas de filtros de piscinas • ventiladores

2 Instalación

NOTA: El interruptor no puede usarse si no hay un cable neutral (cables blancos conectados juntos) en la caja de electricidad.

- 1 Desconectar el circuito desde el interruptor automático para evitar todo riesgo de electrocución.
- 2 Retirar el interruptor existente.
- 3 Instalar el nuevo interruptor.
- 4 Reconectar el circuito desde el interruptor automático.

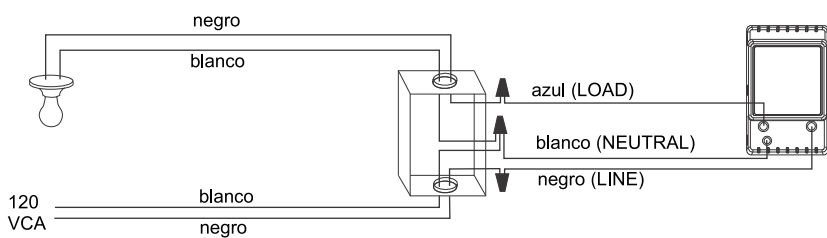

3 Encendido rápido

Ajustar la hora y la fecha antes de utilizar el interruptor por primera vez.

El RPLS740B/RPLS741B encenderá las luces a la puesta del sol y las apagará a las 23 horas por defecto. Si este horario no fuera conveniente, sólo hay que ajustar la hora y la fecha (ver el cuadro gris en el organigrama de los menús). Si la hora programada de la puesta del sol del conmutador difiere de la hora real, ver las secciones 5.3.3 y 5.3.4.

4 Funcionamiento

Indica el modo de funcionamiento (ver la sección 5.1)

Indica la hora y el día

Indica el programa en curso

Indica el estado de encendido/apagado (On/Off) de la carga

Presionar brevemente este botón para encender o apagar las luces. Ver "Cancelación temporaria" en la Sección 5.1.4.

Presionar durante 3 segundos para entrar en los menús.

El icono ☽ indica que el programa en curso se activó a la puesta del sol.

El icono ⚙ indica que el programa en curso se activó a la salida del sol.

Presionar este botón para visualizar la hora de la salida del sol del día de la fecha.

Presionar este botón para visualizar la hora de la puesta del sol del día de la fecha.

El LED se ilumina cuando el estado de la carga está en "Encendido" (On).

5 Menús de ajuste



Presionar el botón principal durante 3 segundos para entrar en los menús. Para saber cómo navegar en los mismos, ver el organigrama de los menús.

5.1 Menú Modo (Mode)

Se puede utilizar el menú Modo para seleccionar uno de los tres modos de funcionamiento (ver las secciones 5.1.1 a 5.1.3).

5.1.1 Modo Manual

En modo Manual, el RPLS740B/RPLS741B funciona como un interruptor convencional. Presionar brevemente el botón principal para encender o apagar las luces. El icono ⚡ aparece cuando el interruptor está en modo Manual.



5.1.2 Modo Automático

En modo Automático, RPLS740B/RPLS741B enciende y apaga las luces según los programas establecidos (ver la sección 5.4). Aparecen en pantalla el icono ⌚ y el número del programa en curso.



5.1.3 Modo Aleatorio

En modo Aleatorio, el RPLS740B/RPLS741B está programado para encender y apagar las luces arbitrariamente y no en un momento preciso. Este modo sirve para dar la impresión de que la vivienda está ocupada durante la ausencia de los moradores. Es semejante al modo Automático salvo por el hecho de que no tiene programa fijo. El RPLS740B/RPLS741B ajusta los programas automáticamente cada día a horas diferentes. Cuando el interruptor está en modo Aleatorio, aparece el icono 🗲.



El primer programa "Encendido" (On) comienza a funcionar con la puesta del sol. Cada programa "Encendido" dura entre 1 hora y 1:30 horas y cada programa "Apagado" (Off) dura entre 15 y 30 minutos. El último programa "Apagado" se produce entre las 22:30 y medianoche.

5.1.4 Cancelación temporaria

Cuando el RPLS740B/RPLS741B está en modo Automático o Aleatorio, se puede presionar el botón principal en cualquier momento para cancelar el estado en curso: las luces se apagarán si estaban encendidas y viceversa. El icono (On u Off) del nuevo estado parpadea para indicar que es temporario. El nuevo estado se mantiene hasta que se presione nuevamente el botón principal o hasta el próximo programa "Encendido" (On) o "Apagado" (Off).

5.2 Menú Hora (Time)

La hora parpadea en la pantalla cuando no está todavía ajustada o luego de un corte de corriente de más de 4 horas. Utilizar el menú Hora para seleccionar el formato de la hora y para ajustar el reloj y la fecha.

NOTA: la fecha sirve para determinar la hora de la puesta del sol y de la salida del sol.

5.3 Menú Configuración (Conf)

Utilizar el menú Configuración para ajustar los parámetros siguientes (ver las secciones 5.3.1 a 5.3.4).

5.3.1 Modo de iluminación de fondo (SCRN)

La pantalla se ilumina con gran intensidad durante 8 segundos cuando se presiona cualquier botón. El resto del tiempo, según el modo de iluminación de fondo elegido, la pantalla hace lo siguiente:

Scrn Off: la pantalla no está iluminada.

Scrn On HI: la pantalla está iluminada con gran intensidad.

Scrn On LO: la pantalla está iluminada suavemente (modo por defecto).

5.3.2 Cambio automático al horario de verano (DLS)

Cuando se activa el cambio a la hora avanzada (DLS On), el RPLS740B/RPLS741B pasa a la hora avanzada o hora de verano a 2:00 el segundo domingo de marzo y a la hora normal (hora de invierno) a 2:00 el primer domingo de noviembre. La función (DLS On) se activa por defecto.

5.3.3 Latitud y longitud (LAT y LONG)

Las coordenadas se usan para encender las luces a la puesta del sol y apagarlas a la salida del sol. La latitud es de +45 y la longitud de -75 por defecto. Estos ajustes brindan horas aproximadas de puesta y de salida del sol para la mayoría de las ciudades de América del Norte. En la tabla de coordenadas se pueden obtener las de una ciudad en particular (o las de una ciudad vecina). También se puede obtener esta información en el sitio www.geonames.org o con un sistema de navegación (GPS). La exactitud de la hora de la

puesta y la salida del sol dependen de la exactitud de las coordenadas que se registran en el interruptor para cada ciudad en particular. **NOTA:** ingresar un valor negativo para un valor de latitud Sur o un valor de longitud Oeste.

5.3.4 Factor de corrección (ADJ)

Si el huso horario de la ciudad está basado en fronteras políticas más que en coordenadas geográficas, las luces podrían encenderse o apagarse demasiado temprano o demasiado tarde con respecto a la puesta y a la salida del sol. En ese caso, es necesario ingresar un factor de corrección (+1 o -1 hora, referirse al suplemento). Si no, dejarlo en 0 (valor por defecto).

5.4 Menú Programa (Prog)


Usar el menú Programa para ajustar los programas, es decir, las horas a las que se desea que las luces se enciendan o se apaguen cuando el interruptor está en modo Automático. Para ajustar un programa, proceder de la siguiente manera:

- 1 Seleccionar un número de programa (ver la sección 5.4.1)
- 2 Fijar los días del programa (ver la sección 5.4.2)
- 3 Ajustar la hora de inicio del programa (ver la sección 5.4.3)

5.4.1 Seleccionar un número de programa

Se pueden registrar hasta 7 programas "Encendido" ("P01 On" a "P07 On") y 7 programas "Apagado" ("P01 Off" a "P07 Off").

Seleccionar un programa "Encendido" para fijar la hora del encendido de las luces. Seleccionar un programa "Apagado" para fijar la hora del apagado de las luces.

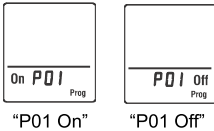

5.4.2 Ajuste del día del programa

Una vez seleccionado el programa, se debe fijar el día del programa. Se puede seleccionar un día específico, los 7 días o "none" (ninguno). Escoger "none" para los programas no utilizados.

5.4.3 Ajuste de la hora de inicio del programa

Luego de haber fijado el día del programa hay que ajustar la hora de inicio. Se puede seleccionar una hora específica, la hora de la puesta del sol o la hora de la salida del sol.

- Para seleccionar una hora específica:
 - (1) Avanzar hasta el ajuste de la hora y seleccionar la hora.
 - (2) Avanzar hasta el ajuste de los minutos y seleccionar los minutos.
- Para seleccionar la hora de la puesta o la salida del sol:
 - (1) Avanzar hasta el ajuste de la hora y seleccionar la puesta o la salida del sol (**cuando se hacen desfilas las horas, la puesta ☽ y la salida ☼ del sol aparecen entre las 23:00 y las 00:00**)
 - (2) Para programar una desviación del horario (de -70 a +70 minutos en incrementos de 10 minutos) entre la puesta y la salida del sol y la hora del comienzo del programa, avanzar hasta el ajuste de los minutos y cambiar los minutos.
 - **EJEMPLO:** si la puesta del sol es a las 18:13 y se cambian los minutos hasta visualizar 18:43, esto significa que se programó una demora de 30 minutos. Si, más tarde en el año, la puesta del sol es a las 16:01, el programa comenzará a las 16:31.
 - **NOTA:** al programar una desviación, cuando se visualiza la hora de la puesta o la salida del sol, el icono ⚡ aparece al mismo tiempo que ☽ o ☼. Para eliminar la desviación, hay que visualizar la hora de la puesta o de la salida del sol y cambiar los minutos hasta que el icono ⚡ desaparezca.

5.4.4 Ejemplos

Ejemplo 1: cada día, las luces se encienden con la puesta del sol y se apagan a las 23:00 (ajustes por defecto).

Programa	Días	Hora	Programa	Días	Hora
P01 On	los 7 días	puesta del sol	P01 Off	los 7 días	23:00
P02 On a P07 On	ninguno	—	P02 Off a P07 Off	ninguno	—

Ejemplo 2: cada día, las luces se encienden con la puesta del sol y se apagan a la salida del sol.

Programa	Días	Hora	Programa	Días	Hora
P01 On	los 7 días	puesta del sol	P01 Off	los 7 días	salida del sol
P02 On a P07 On	ninguno	—	P02 Off a P07 Off	ninguno	—

Ejemplo 3: las luces se encienden cada día a las 20:00 y se apagan a las 22:00, salvo el sábado a la noche, cuando se apagan a las 1:00.

Programa	Días	Hora	Programa	Días	Hora
P01 On	los 7 días	20:00	P01 Off	domingo (Su)	22:00
P02 On	ninguno	—	P02 Off	lunes (Mo)	22:00
P03 On	ninguno	—	P03 Off	martes (Tu)	22:00
P04 On	ninguno	—	P04 Off	miércoles (We)	22:00
P05 On	ninguno	—	P05 Off	jueves (Th)	22:00
P06 On	ninguno	—	P06 Off	viernes (Fr)	22:00
P07 On	ninguno	—	P07 Off	domingo (Su)	1:00

¡Cuidado con la superposición!

Si se ajusta "P01 Off" a las 22:00 para los 7 días y se ajusta "P02 Off" a las 23:00 para el sábado, el sábado las luces se apagarán a las 22:00 y no a las 23:00 porque "P01 Off" está ajustado una hora antes que "P02 Off".

6 Reinicialización para volver a los ajustes por defecto

Para volver el interruptor a los ajustes por defecto, presionar simultáneamente el botón principal y el botón izquierdo y mantenerlos presionados. La versión del programa aparecerá en pantalla durante 5 segundos, seguida de RST durante otros 5 segundos. Liberar los botones cuando todos los segmentos hayan aparecido en la pantalla. El interruptor estará reinicializado (ver los ajustes de defecto en el organigrama de los menús).



7 Solución de problemas

La visualización es pálida o irregular	<ul style="list-style-type: none"> • La temperatura ambiente es inferior o superior a la temperatura de funcionamiento del interruptor.
La hora de la puesta o la salida del sol no es exacta	<ul style="list-style-type: none"> • La fecha o la hora son incorrectas (ver la sección 5.2). • La longitud o la latitud son incorrectas (ver la sección 5.3.3). • El factor de corrección es incorrecto (ver la sección 5.3.4). • Se ha programado una desviación del horario (ver la sección 5.4.3).

8 Especificaciones técnicas

Alimentación: 120 VAC, 60 Hz

Carga máxima: 1800 watts

Temperatura de funcionamiento: -15 °C a 50 °C (5 °F a 122 °F)

Temperatura de almacenamiento: -40 °C a 60 °C (-40 °F a 140 °F)

Corte de corriente: la pantalla se apaga. Si el corte dura más de 4 horas, sólo hay que ajustar la hora, ya que los demás ajustes y los programas se conservan de manera permanente.

Margen de latitud: de -65° a +65°

Precisión del cuadro solar: +/- 11 min. (latitudes inferiores a ±60°)

Certificación: UL (c UL us)

Garantía

Honeywell garantiza por un período de un (1) año, a partir de la fecha de compra por el consumidor, que este producto, sin incluir las baterías, no presentará defectos en los materiales ni en lo referente a la mano de obra, en condiciones normales de uso y de servicio. Si en cualquier momento, durante el período de vigencia de la garantía, se determina que el producto es defectuoso o que funciona mal, Honeywell lo reparará o lo reemplazará (a elección de Honeywell).

Si el producto es defectuoso:

- I. Devuélvalo al lugar donde lo compró, acompañado por la factura de compra o de otra prueba de compra que incluya la fecha.
- II. Llame al servicio de atención al cliente de Honeywell, al 1-800-468-1502. El servicio de atención al cliente determinará si el producto debe devolverse a la siguiente dirección: Honeywell Return Goods, Dock 4 MN10-3860, 1885 Douglas Dr N, Golden Valley, MN 55422; o si se le enviará un producto de reemplazo.

Esta garantía no cubre los costos de desinstalación y reinstalación. Esta garantía no será válida si se demuestra que el defecto o el mal funcionamiento se deben a un daño que ocurrió cuando el producto estaba en posesión del consumidor.

La única responsabilidad de Honeywell será la de reparar o reemplazar el producto de acuerdo con los términos aquí establecidos. HONEYWELL NO SERA RESPONSABLE DE NINGUNA PERDIDA NI DE NINGUN DAÑO DE NINGUN TIPO, INCLUIDOS LOS DAÑOS IMPREVISTOS O DERIVADOS QUE RESULTEN, DIRECTA O INDIRECTAMENTE, DEL INCUMPLIMIENTO DE CUALQUIER GARANTIA, EXPRESA O IMPLICITA, O DE CUALQUIER OTRA FALLA DE ESTE PRODUCTO. Algunos estados no permiten la exclusión o la limitación de los daños imprevistos o derivados, por lo tanto, es posible que la limitación no se aplique.


ESTA ES LA UNICA GARANTIA EXPRESA QUE HONEYWELL HACE SOBRE ESTE PRODUCTO. LA DURACION DE CUALQUIER GARANTIA IMPLICITA, INCLUIDAS LAS GARANTIAS DE APTITUD E IDONEIDAD PARA UN FIN DETERMINADO, QUEDA, POR EL PRESENTE, LIMITADA A LA DURACION DE UN AÑO DE ESTA GARANTIA. Algunos estados no permiten limitaciones en cuanto a la duración de las garantías implícitas. Por lo tanto, es posible que la limitación anterior no se aplique en su caso.

Esta garantía le brinda derechos legales específicos, y usted puede tener otros derechos que varían para cada estado.

Si tiene preguntas acerca de esta garantía, escriba a Honeywell Customer Relations, 1985 Douglas Dr, Golden Valley, MN 55422, o llame al 1-800-468-1502. En Canadá, escriba a Retail Products ON15-02H, Honeywell Limited/Honeywell Limitée, 35 Dynamic Drive, Scarborough, Ontario M1V4Z9.

Asistencia técnica

Si tiene preguntas acerca del funcionamiento del interruptor programable, visite <http://yourhome.honeywell.com> o llame sin cargo al servicio de atención al cliente de Honeywell, al 1-800-468-1502.

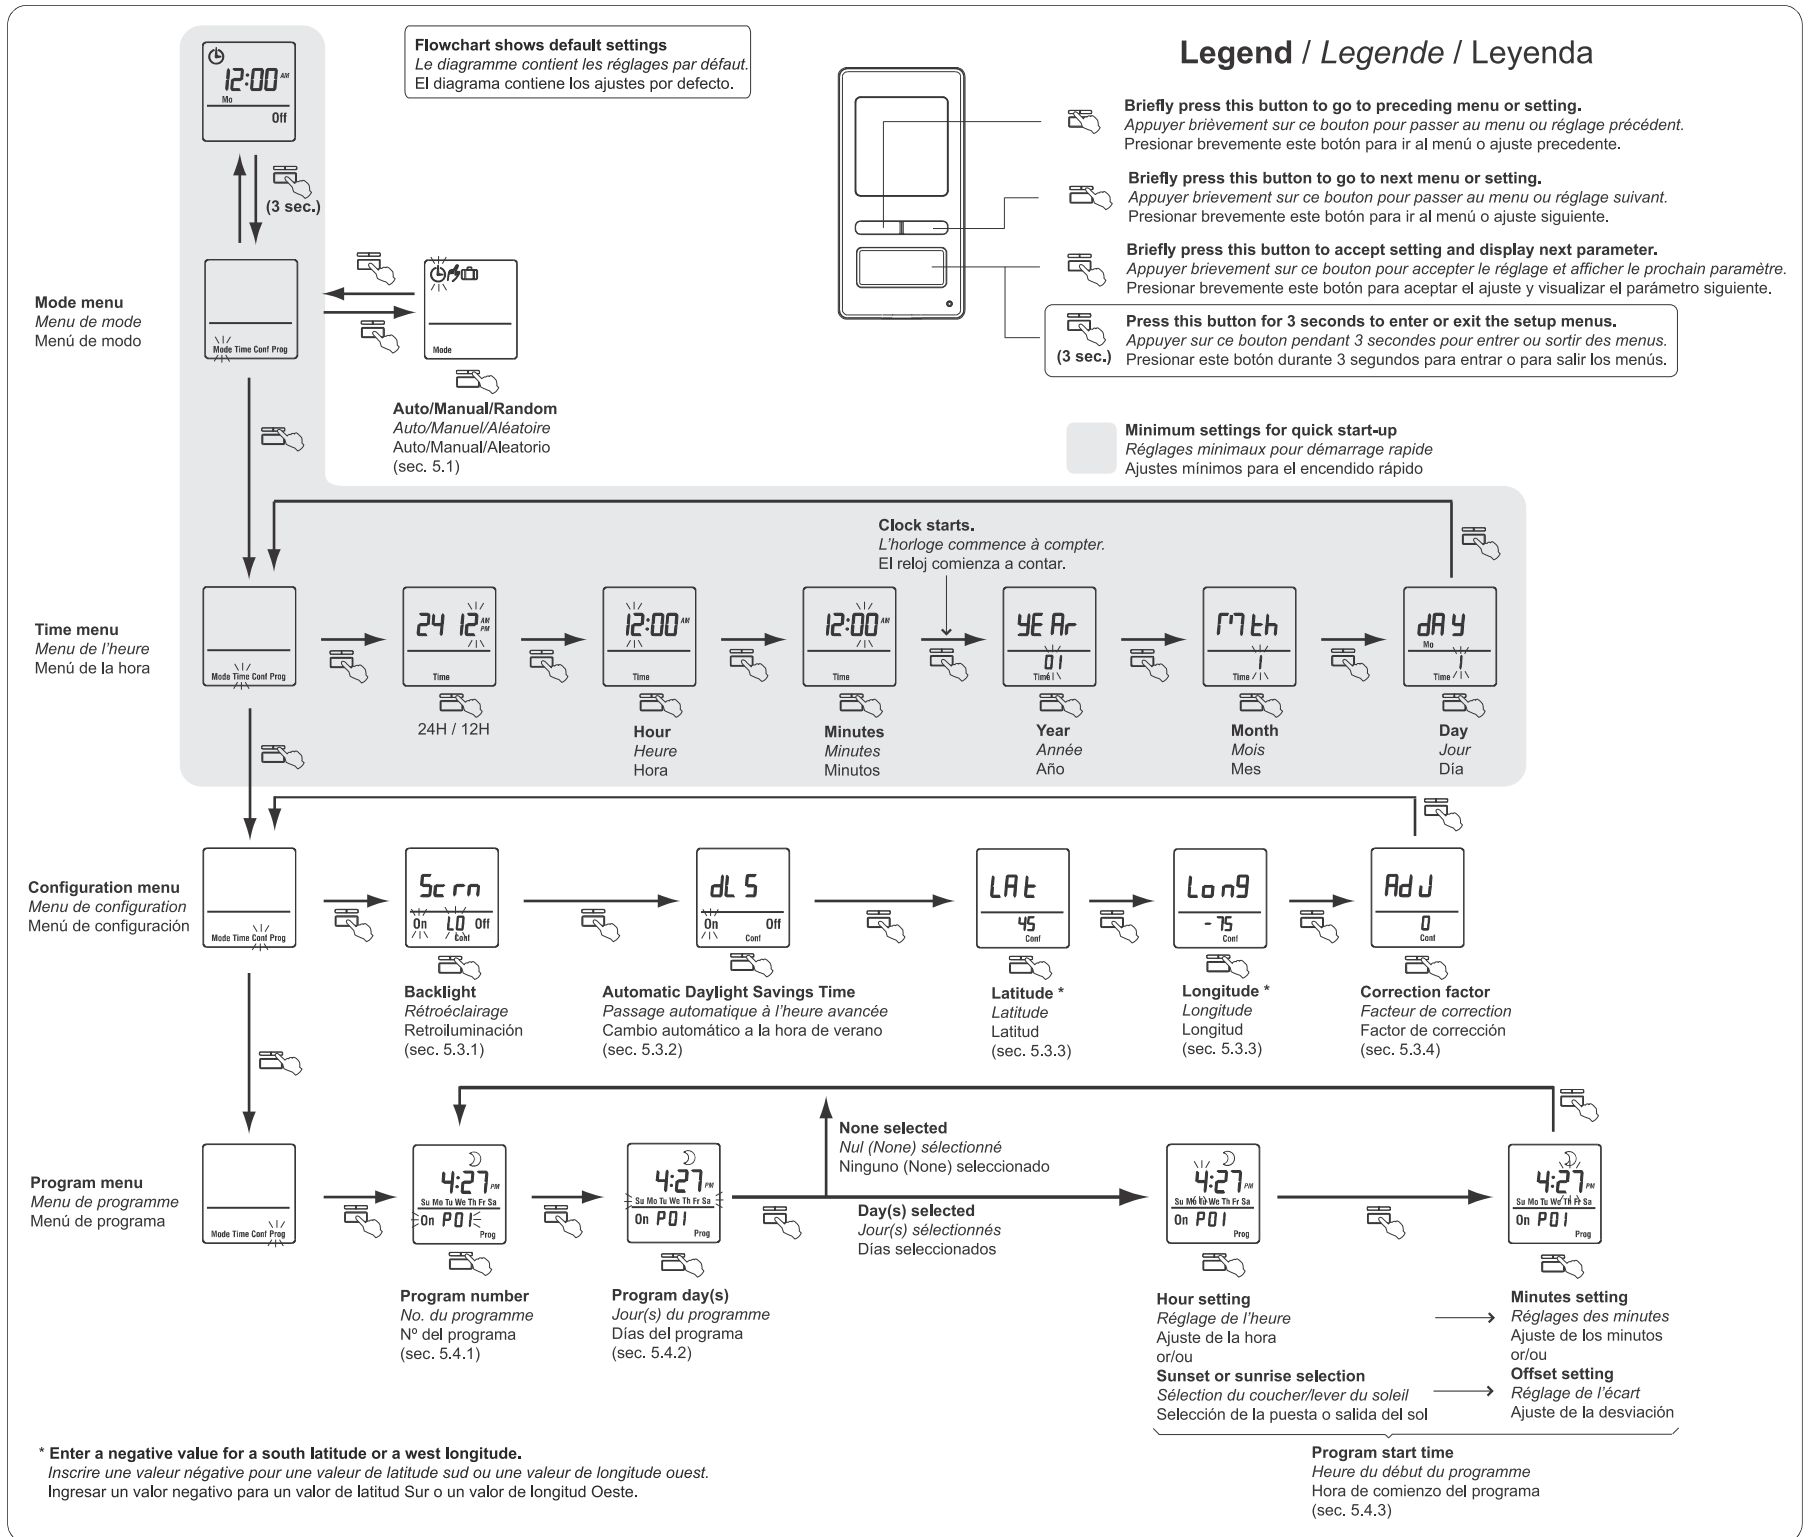

If your city is not listed below, use a nearby city or refer to the website "www.geonames.org".
 Si votre ville n'est pas dans la liste, utiliser une ville avoisinante ou consulter le site web «www.geonames.org».
 Si su ciudad no figura en la lista, buscar una ciudad vecina o consultar el sitio web "www.geonames.org".

CANADA			
City / Ville	Lat.	Long.	Adj.
ABBOTSFORD	49	-122	0
BANFF	51	-115	1
BARRIE	44	-80	0
BURNABY	49	-122	0
CALGARY	51	-114	1
CAPE BRETON	46	-60	0
CHICOUTIMI	48	-71	0
DAWSON	64	-139	1
EASTMAIN	52	-78	0
EDMONTON	53	-113	1
FORT SEVERN	56	-87	1
HALIFAX	44	-63	0
HAMILTON	49	-112	0
IQUALUIT	63	-68	0
INUKJUAK	58	-78	0
KELOWNA	50	-119	0
KITCHENER	43	-80	0
LONDON	42	-81	0
MISTASSINI	50	-73	0
MONTREAL	45	-73	0
NIAGARA	43	-79	0
OSHAWA	43	-78	0
OTTAWA - GATINEAU	45	-75	0
QUEBEC	46	-71	0
REGINA	50	-104	1
RICHMOND	49	-123	0
ROUYN-NORANDA	48	-79	0
SASKATOON	52	-106	1
SEPT-ILES	50	-66	-1
SHERBROOKE	45	-71	0
ST. ANTHONY	51	-55	0
ST CATHARINES	43	-79	0
SAINT JOHN (NB)	45	-66	0
ST. JOHN'S (NFLD)	47	-52	0
SUDBURY	46	-81	0
THUNDER BAY	48	-89	1
TORONTO	43	-79	0
TROIS-RIVIÈRES	46	-72	0
VANCOUVER	49	-123	0
VICTORIA	49	-123	0
WHITEHORSE	60	-135	1
WINDSOR	42	-83	1
WINNIPEG	49	-97	0
YELLOWKNIFE	62	-114	1

USA			
City	Lat.	Long.	Adj.
ABILENE	32	-99	1
ALBUQUERQUE	35	-106	0
ALLENTOWN	40	-75	0
AMARILLO	35	-101	1
ANCHORAGE	61	-149	1
ATLANTA	33	-84	1
AUSTIN	30	-97	0
BAKERSFIELD	35	-119	0
BALTIMORE	39	-76	0
BATON ROUGE	30	-91	0
BEAUMONT	30	-94	0
BILLINGS	45	-108	0
BIRMINGHAM	33	-86	0
BOISE	43	-116	1
BOISE CITY	36	-102	1
BOSTON	42	-71	0
BROWNSVILLE	25	-97	0
BUFFALO	42	-78	0
CEDAR RAPIDS	41	-91	0
CHARLOTTE	35	-80	0
CHATTANOOGA	35	-85	1
CHEYENNE	41	-104	0
CHICAGO	41	-87	0
CINCINNATI	39	-84	1
CLEVELAND	41	-81	0
COLOMBUS	39	-82	0
COLORADO SPRINGS	38	-104	0
CORPUS CHRISTI	27	-97	0
DALLAS	32	-96	0
DENVER	39	-104	0
DES MOINES	41	-93	0
DETROIT	42	-83	1
DULUTH	46	-92	0
EL PASO	31	-106	0
ERIE	42	-80	0
EUGENE	44	-123	0
EVANSVILLE	37	-87	0
FLINT	43	-83	1
FORT LAUDERDALE	26	-80	0
FORT WAYNE	41	-85	1
FRESNO	36	-119	0
GRAND RAPIDS	42	-85	1
GREAT FALLS	47	-111	0
GREENSBORO	36	-79	0
HAMPTON	37	-76	0
HARTFORD	41	-72	0
HONOLULU	21	-157	0
HOUSTON	29	-95	0
HUNTSVILLE	34	-86	0
INDIANAPOLIS	39	-86	1
JACKSON	32	-90	0
JACKSONVILLE	30	-81	0
KANSAS CITY	39	-94	0
KNOXVILLE	35	-83	1
LAKEWOOD	39	-105	0

USA			
City	Lat.	Long.	Adj.
LANSING	42	-84	1
LAREDO	27	-99	1
LAS VEGAS	36	-115	0
LEXINGTON	38	-84	1
LINCOLN	40	-96	0
LITTLE ROCK	34	-92	0
LONG BEACH	33	-118	0
LOS ANGELES	34	-118	0
LOUISVILLE	38	-85	1
LUBBOCK	33	-101	1
MACON	32	-83	1
MADISON	43	-89	0
MEMPHIS	35	-90	0
MIAMI	25	-80	0
MILWAUKEE	43	-87	0
MINNEAPOLIS	44	-93	0
MOBILE	30	-88	0
MODESTO	37	-120	0
MONTGOMERY	32	-86	0
NASHVILLE	36	-86	0
NEW ORLEANS	29	-90	0
NEW YORK	40	-74	0
NORFOLK	36	-76	0
OKLAHOMA CITY	35	-97	0
OMAHA	41	-95	0
ORLANDO	28	-81	0
OVERLAND PARK	38	-94	0
OXNARD	34	-119	0
PEORIA	40	-89	0
PHILADELPHIA	40	-75	0
PHOENIX	33	-112	0
PITTSBURG	40	-79	0
PLANO	33	-96	0
PORTLAND	45	-122	0
PROVIDENCE	41	-71	0
RALEIGH	35	-78	0
RAPID CITY	44	-103	1
RENO	39	-119	0
RICHMOND	37	-77	0
ROANOKE	37	-79	0
ROCHESTER	43	-77	0
ROCKFORD	42	-89	0
SACRAMENTO	38	-121	0
SALT LAKE CITY	40	-111	0
SAN ANTONIO	29	-98	1
SAN DIEGO	32	-117	0
SAN FRANCISCO	37	-122	0
SANTA ROSA	38	-122	0
SAVANNAH	32	-81	0
SEATTLE	47	-122	0
SHREVEPORT	32	-93	0
SOUTH BEND	41	-86	0
SPOKANE	47	-117	0
SPRINGFIELD (IL)	39	-89	0
SPRINGFIELD (MA)	42	-72	0

USA			
City	Lat.	Long.	Adj.
SPRINGFIELD (MO)	37	-93	0
ST. LOUIS	38	-90	0
SYRACUSE	43	-76	0
TALLAHASSEE	30	-84	1
TAMPA	27	-82	0
TOLEDO	41	-83	1
TOPEKA	39	-95	0
TUCSON	32	-110	0
TULSA	36	-95	0
VIRGINIA BEACH	36	-75	0
WACO	31	-97	0
WASHINGTON DC	38	-77	0
WICHITA	37	-97	0
WINSTON-SALEM	36	-80	0
YONKERS	40	-73	0
YOUNGSTOWN	41	-80	0

MÉXICO			
Ciudad	Lat.	Long.	Adj.
TIJUANA	32	-117	0
NOGALES	31	-111	0
CIUDAD JUAREZ	31	-106	0
MATAMOROS	26	-97	0
NUEVO LAREDO	27	-99	1
MONTERREY	25	-100	1
CHIHUAHUA	28	-106	0
MAZATLÁN	23	-106	0
TAMPICO	22	-98	1
ZACATECAS	22	-102	1
LÉON	21	-101	1
LA PAZ	24	-110	0
MEXICO CITY	19	-99	1
PUEBLA	19	-98	1
GUADALAJARA	20	-103	1
OAXACA	17	-96	0
ACAPULCO	16	-100	1
CANCUN	21	-86	0
MERIDA	21	-89	0

PUERTO RICO			
Ciudad	Lat.	Long.	Adj.
SAN JUAN	18	-66	0

REPÚBLICA DOMINICANA			
Ciudad	Lat.	Long.	Adj.
SANTO DOMINGO	18	-70	1



69-2455EFS-01