

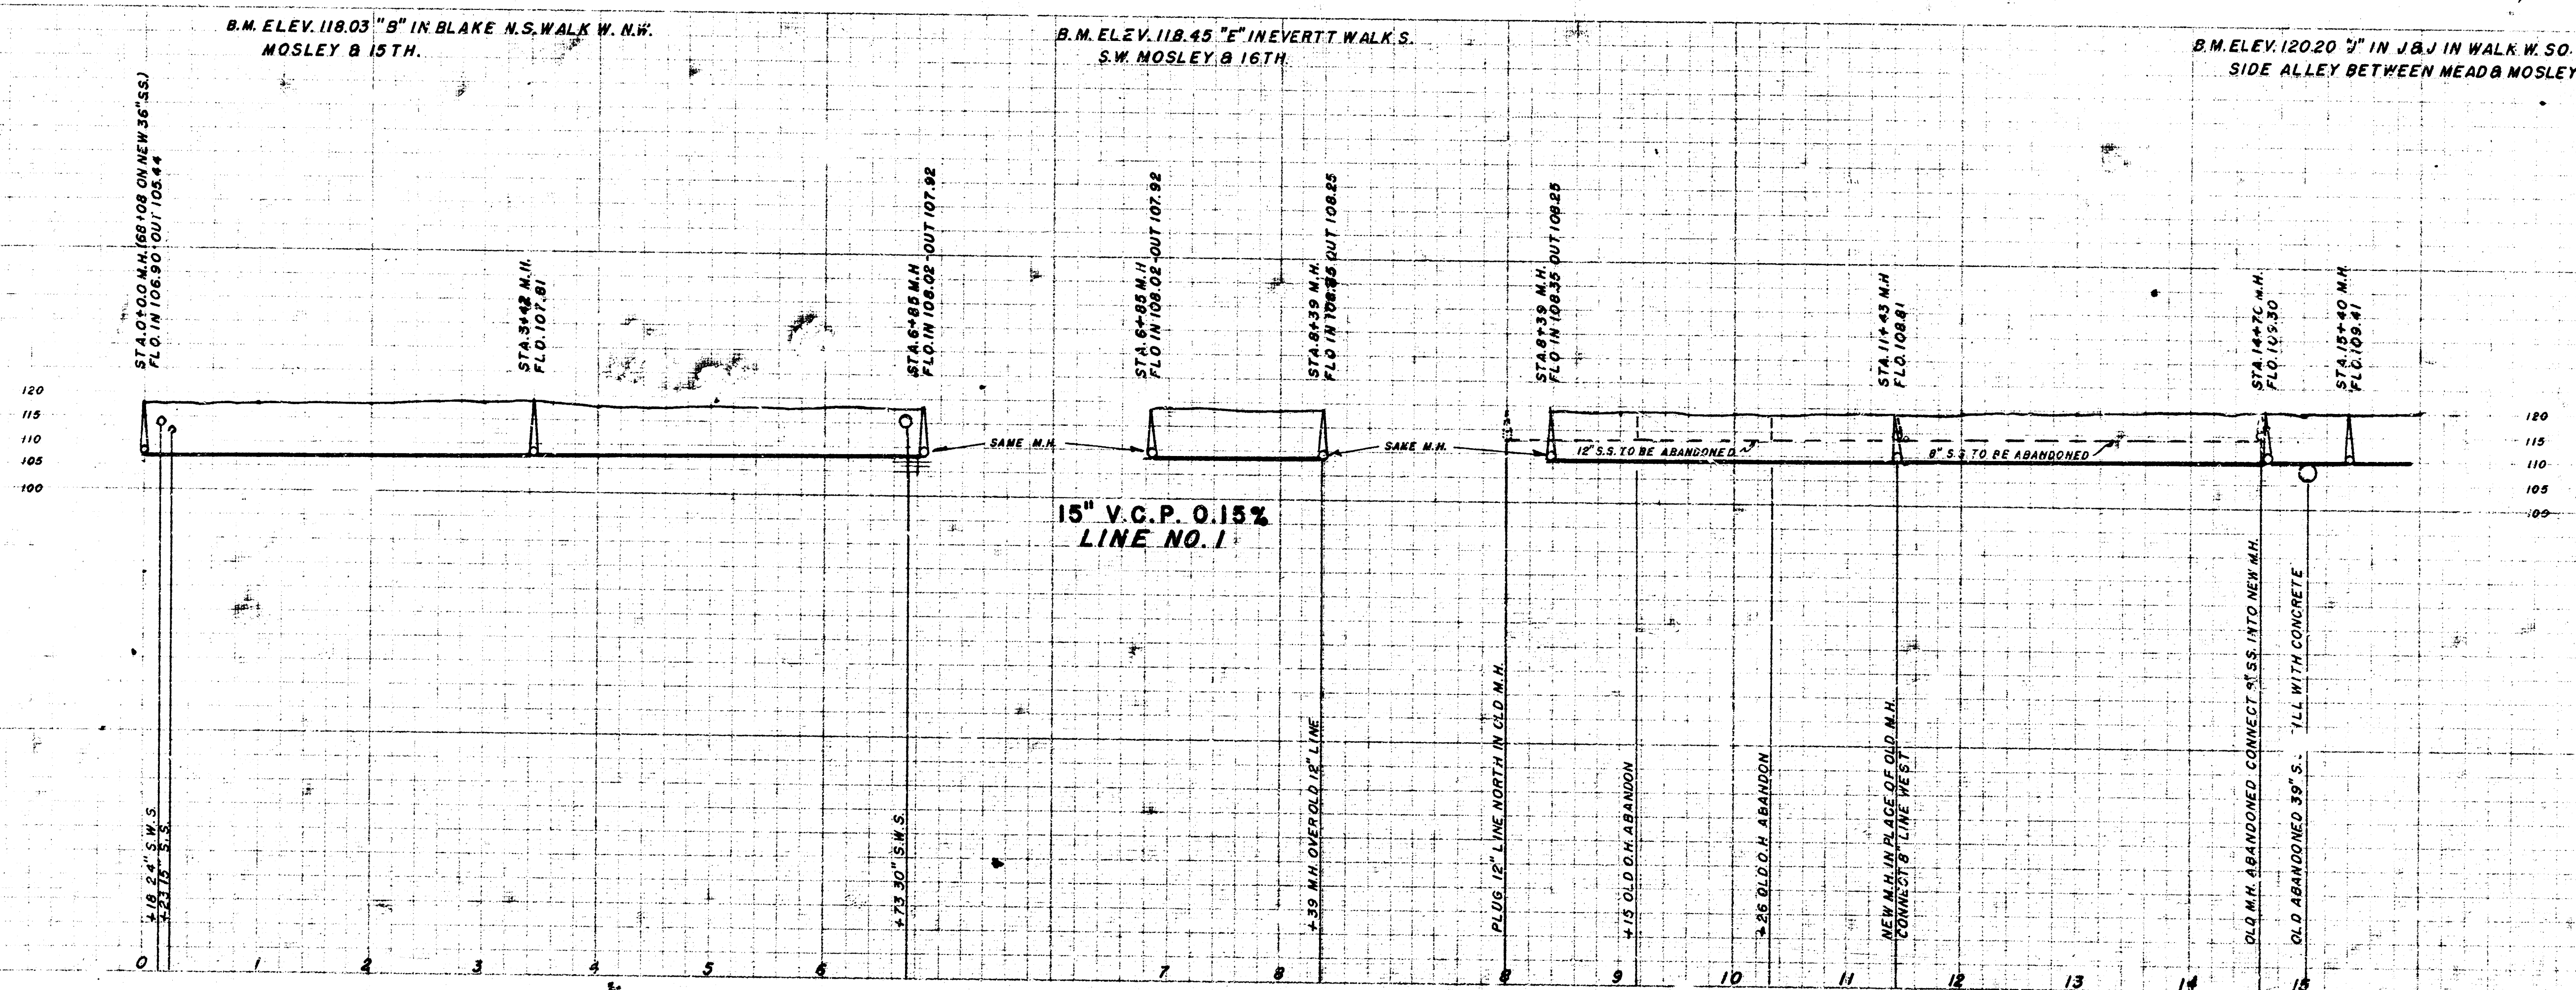
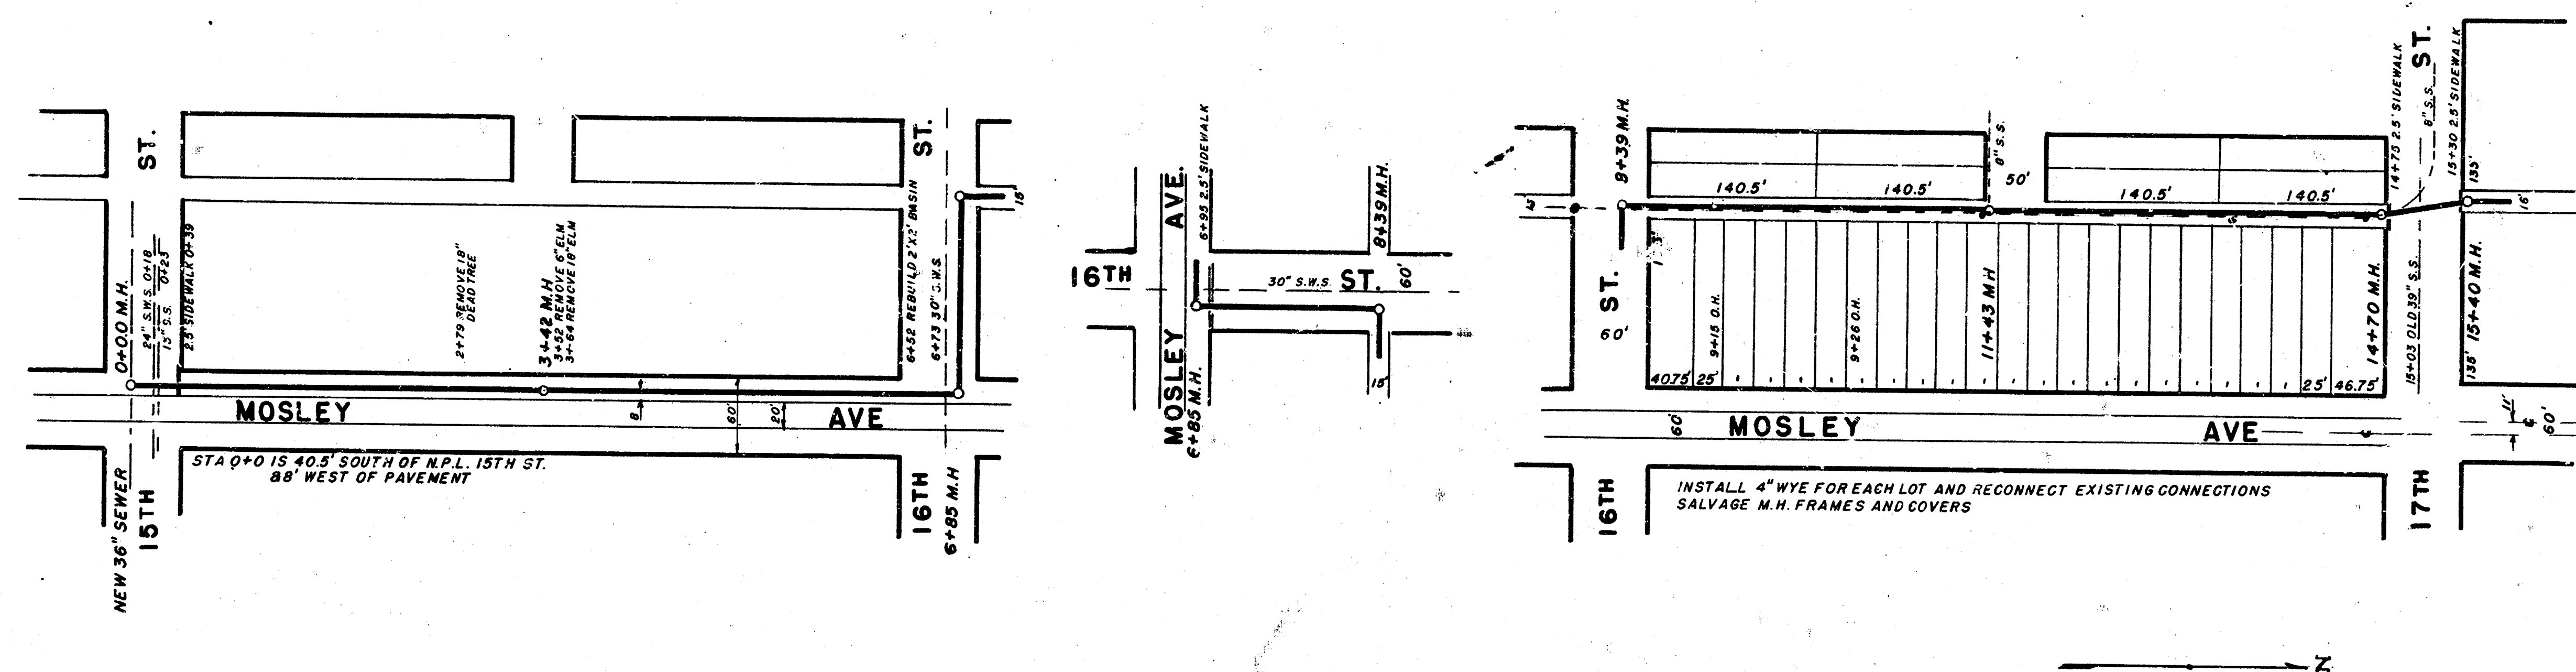



INTERCEPTING SEWER FOR SANITARY SEWER NO. 20

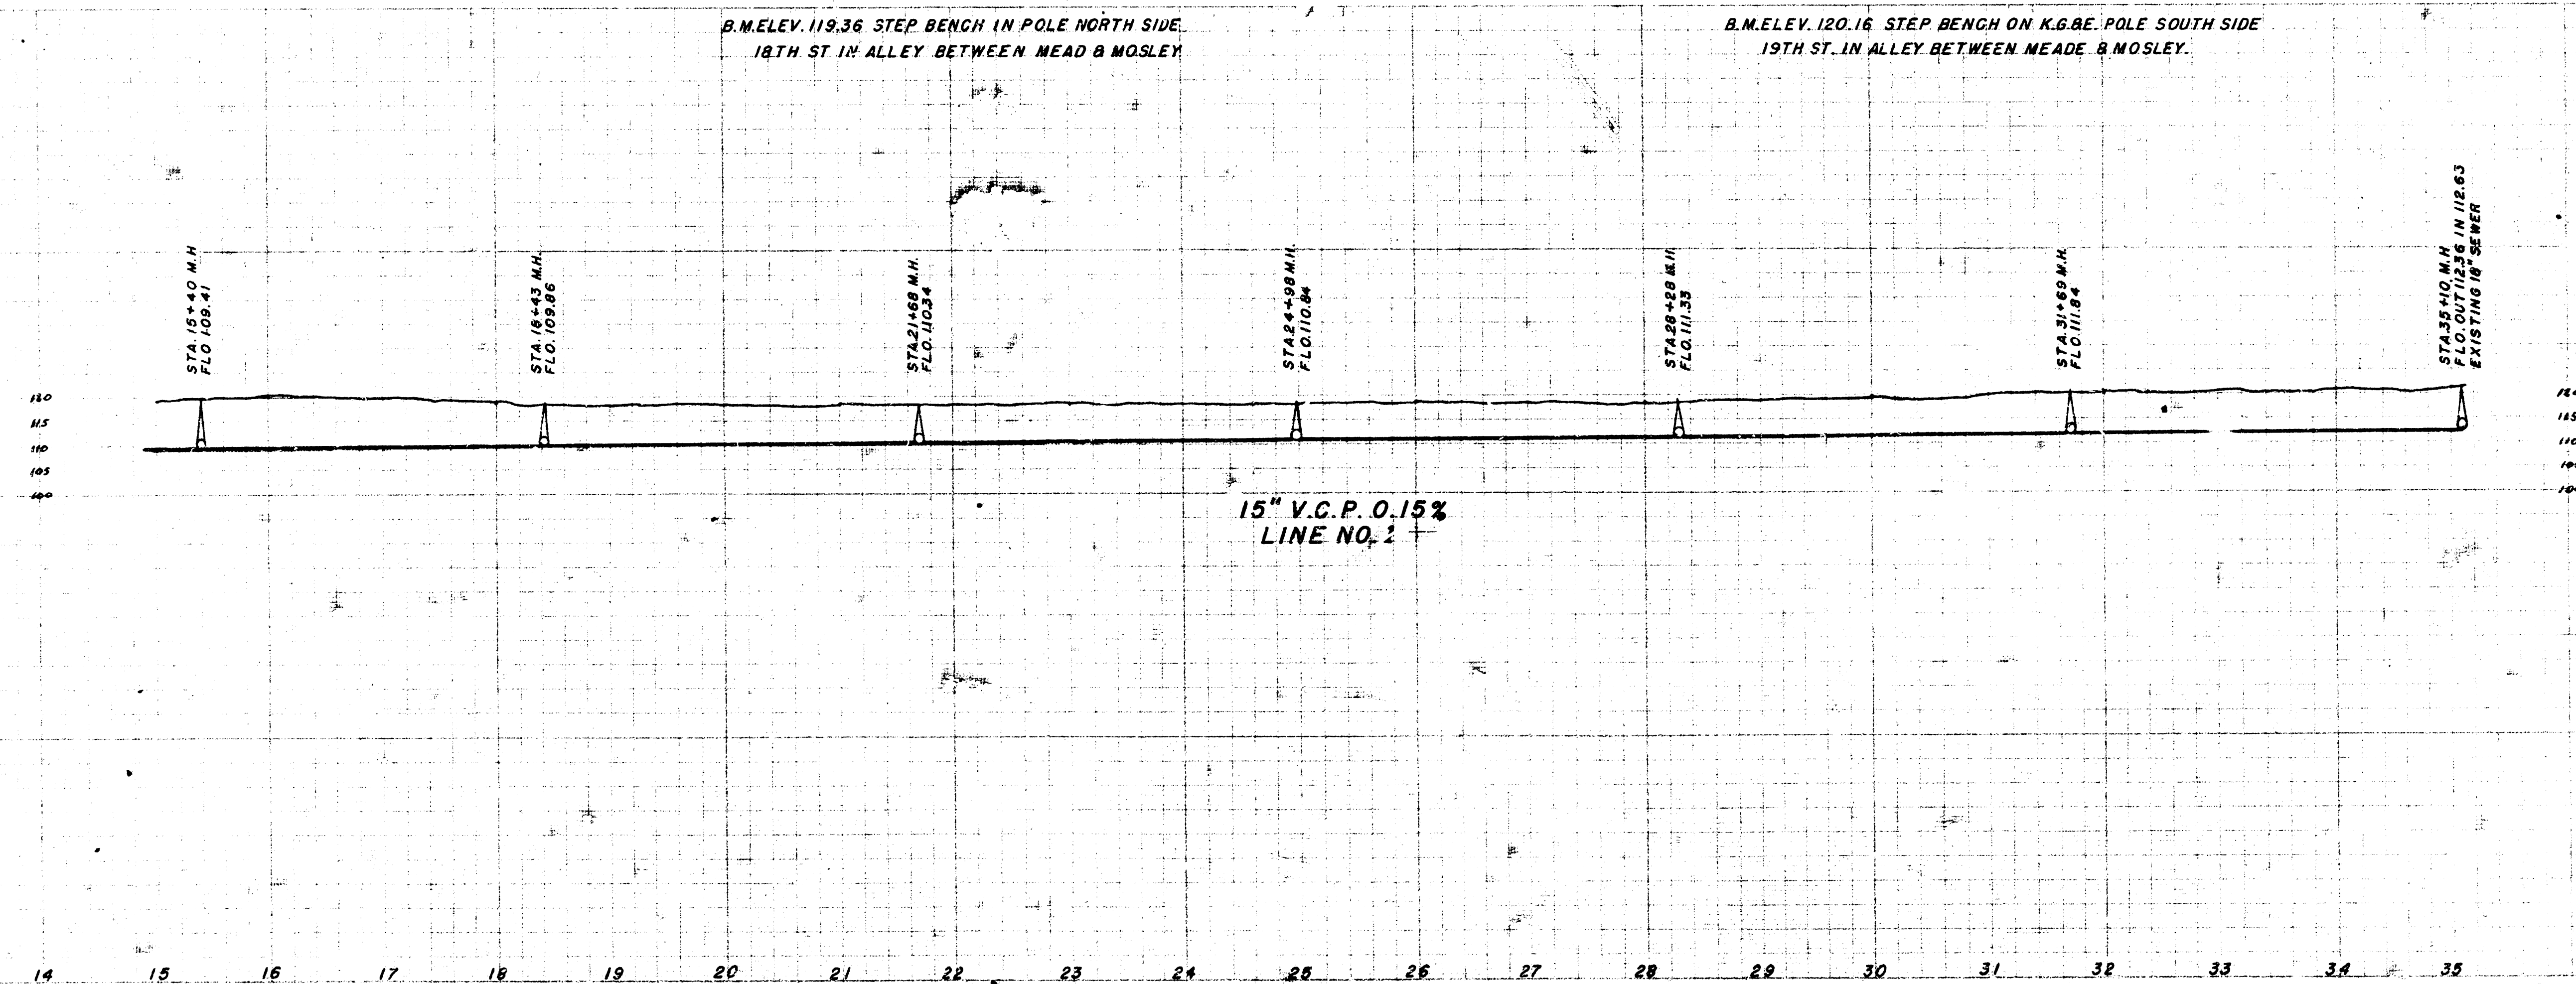

INTERCEPTING SEWER
FOR
SANITARY SEWER NO. 20

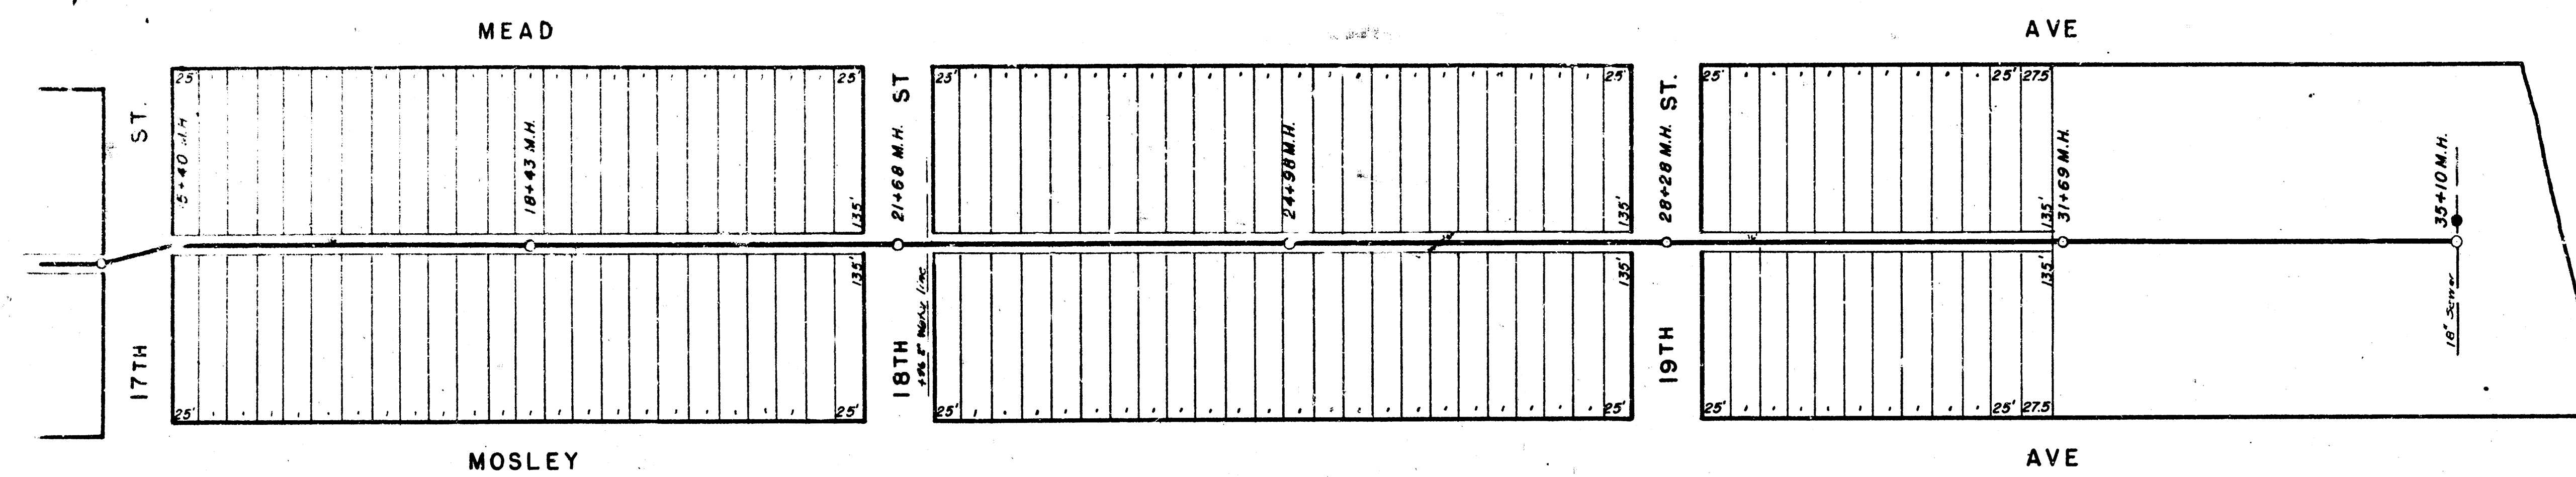


INTERCEPTING SEWER
FOR
SANITARY SEWER NO.20


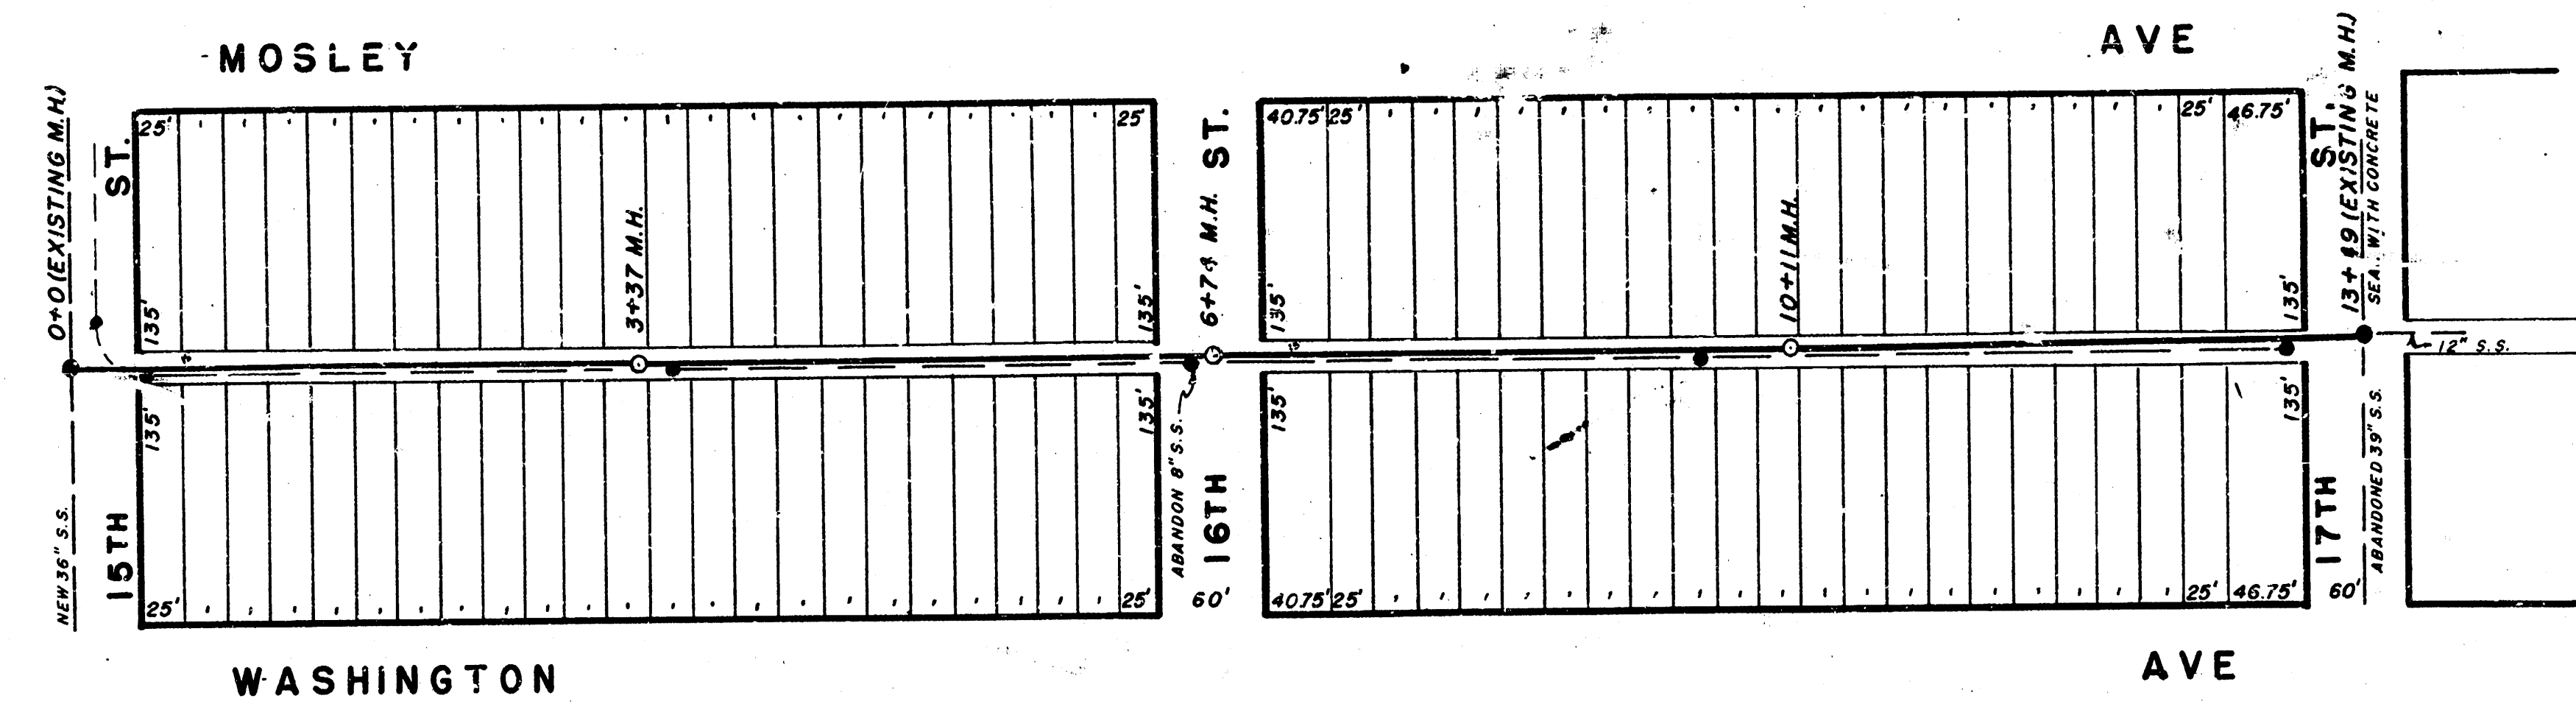


INSTALL 4" WYE OPENING FOR EACH LOT AND RECONNECT ANY EXISTING HOUSE CONNECTIONS

NOTE: SALVAGE ALL M.H. FRAMES AND COVERS ON
ABANDONED LINE TO BE USED ON NEW 12" SEWER

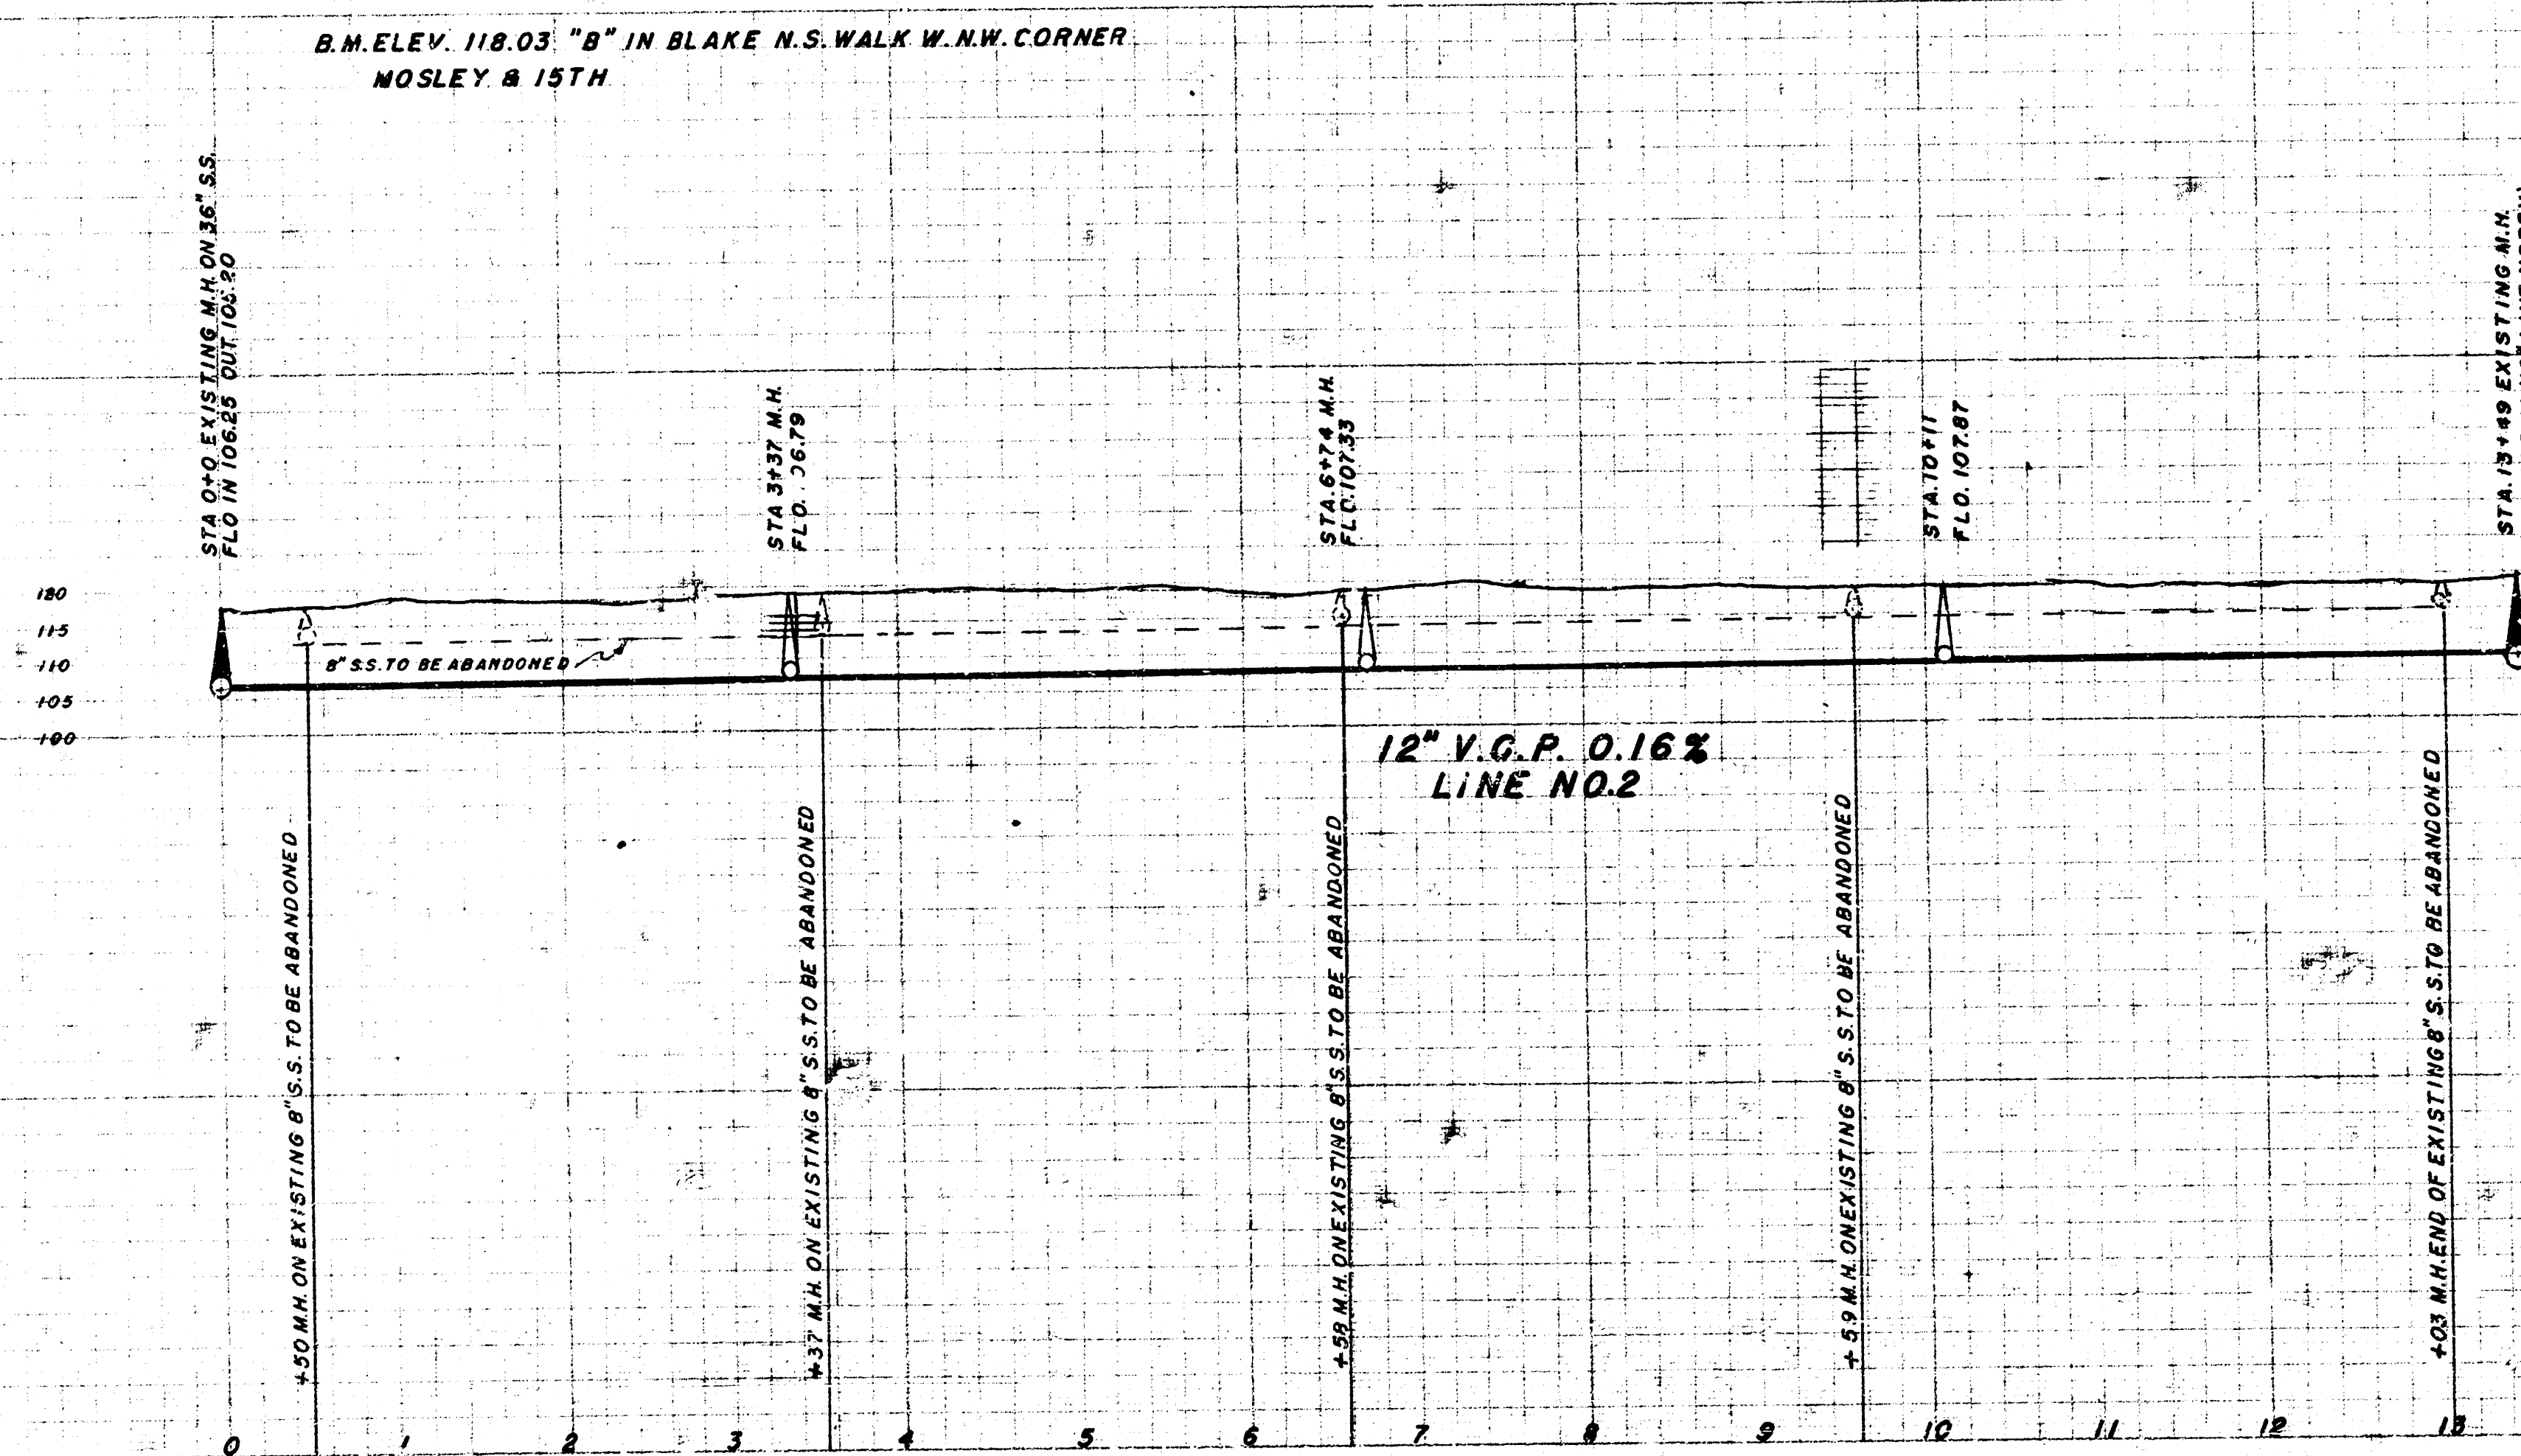

INTERCEPTING SEWER
FOR
SANITARY SEWER NO.20

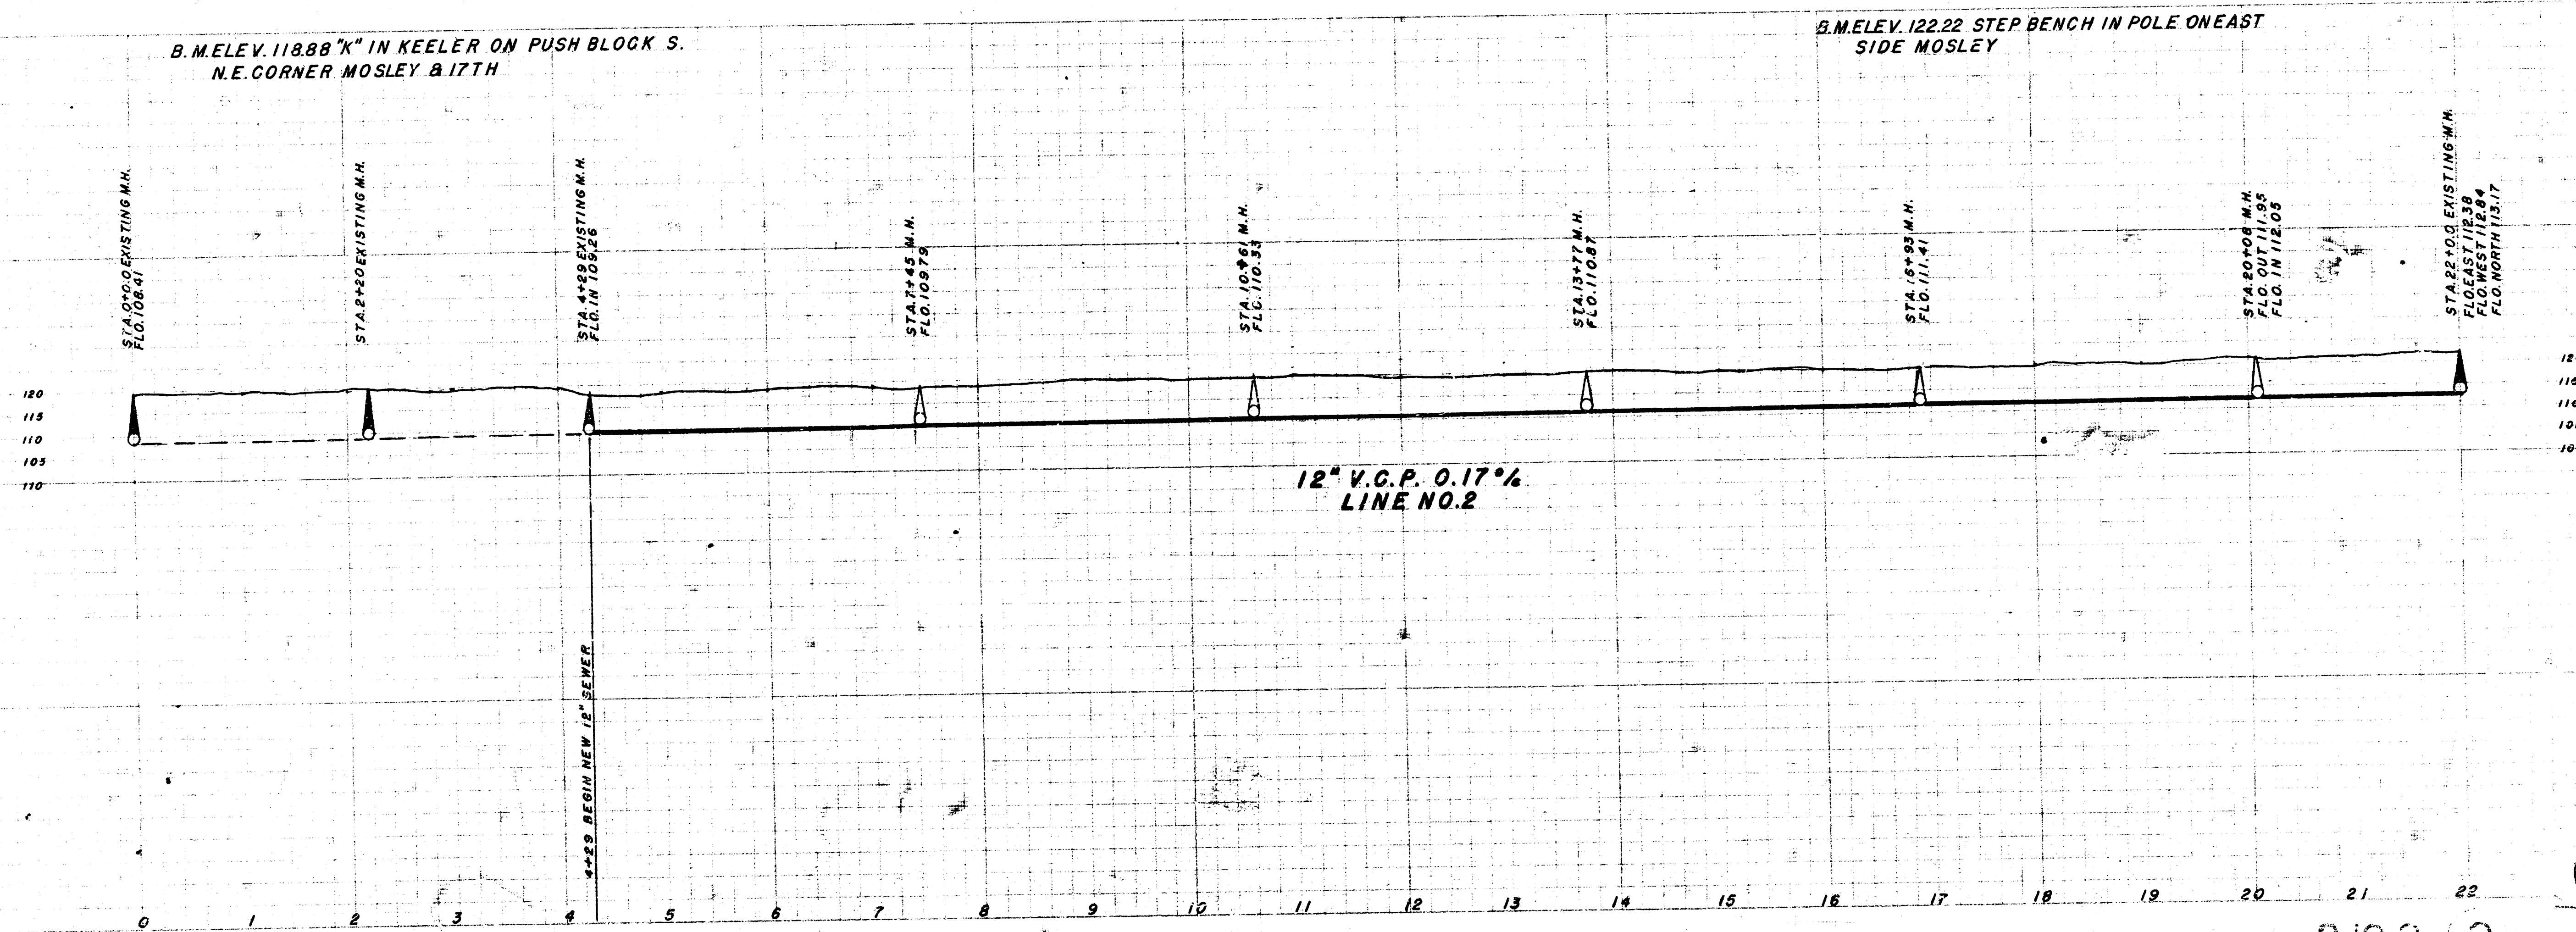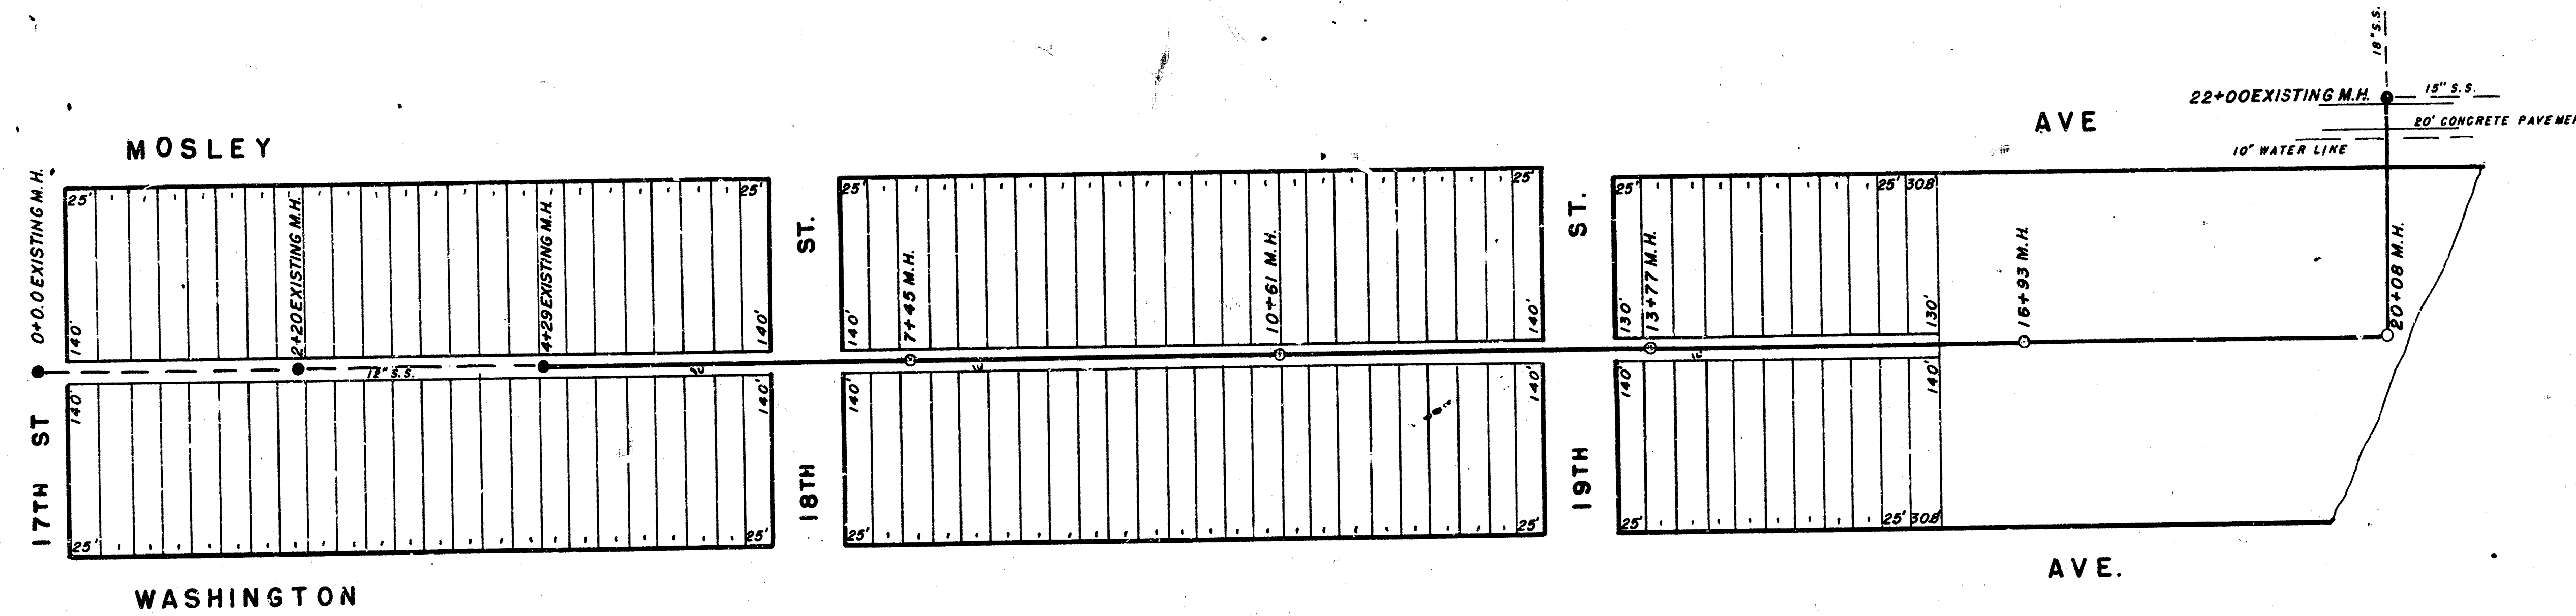

9103/9