
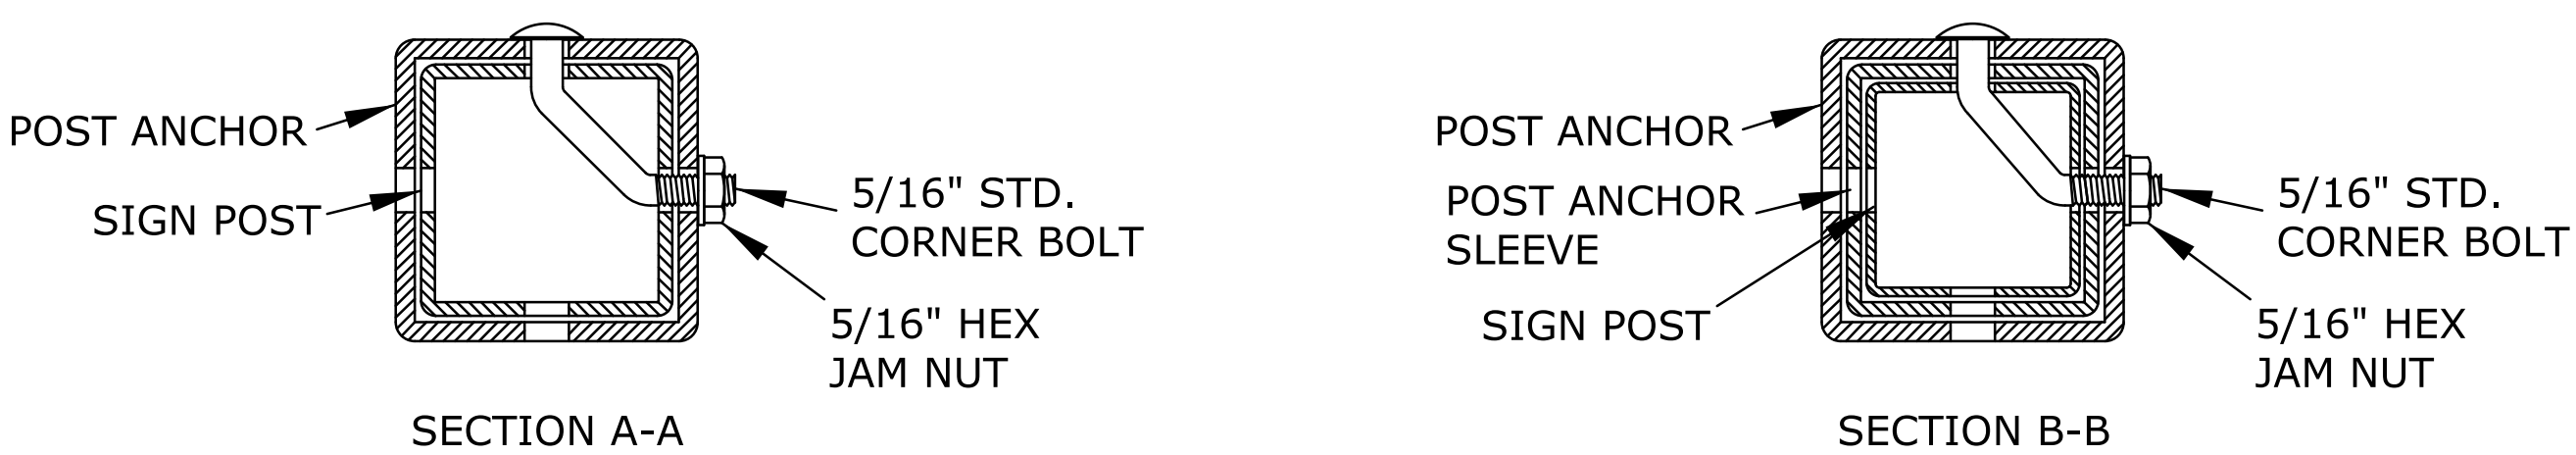



PERFORATED SQUARE STEEL TUBE (P.S.S.T.) POST SETUP

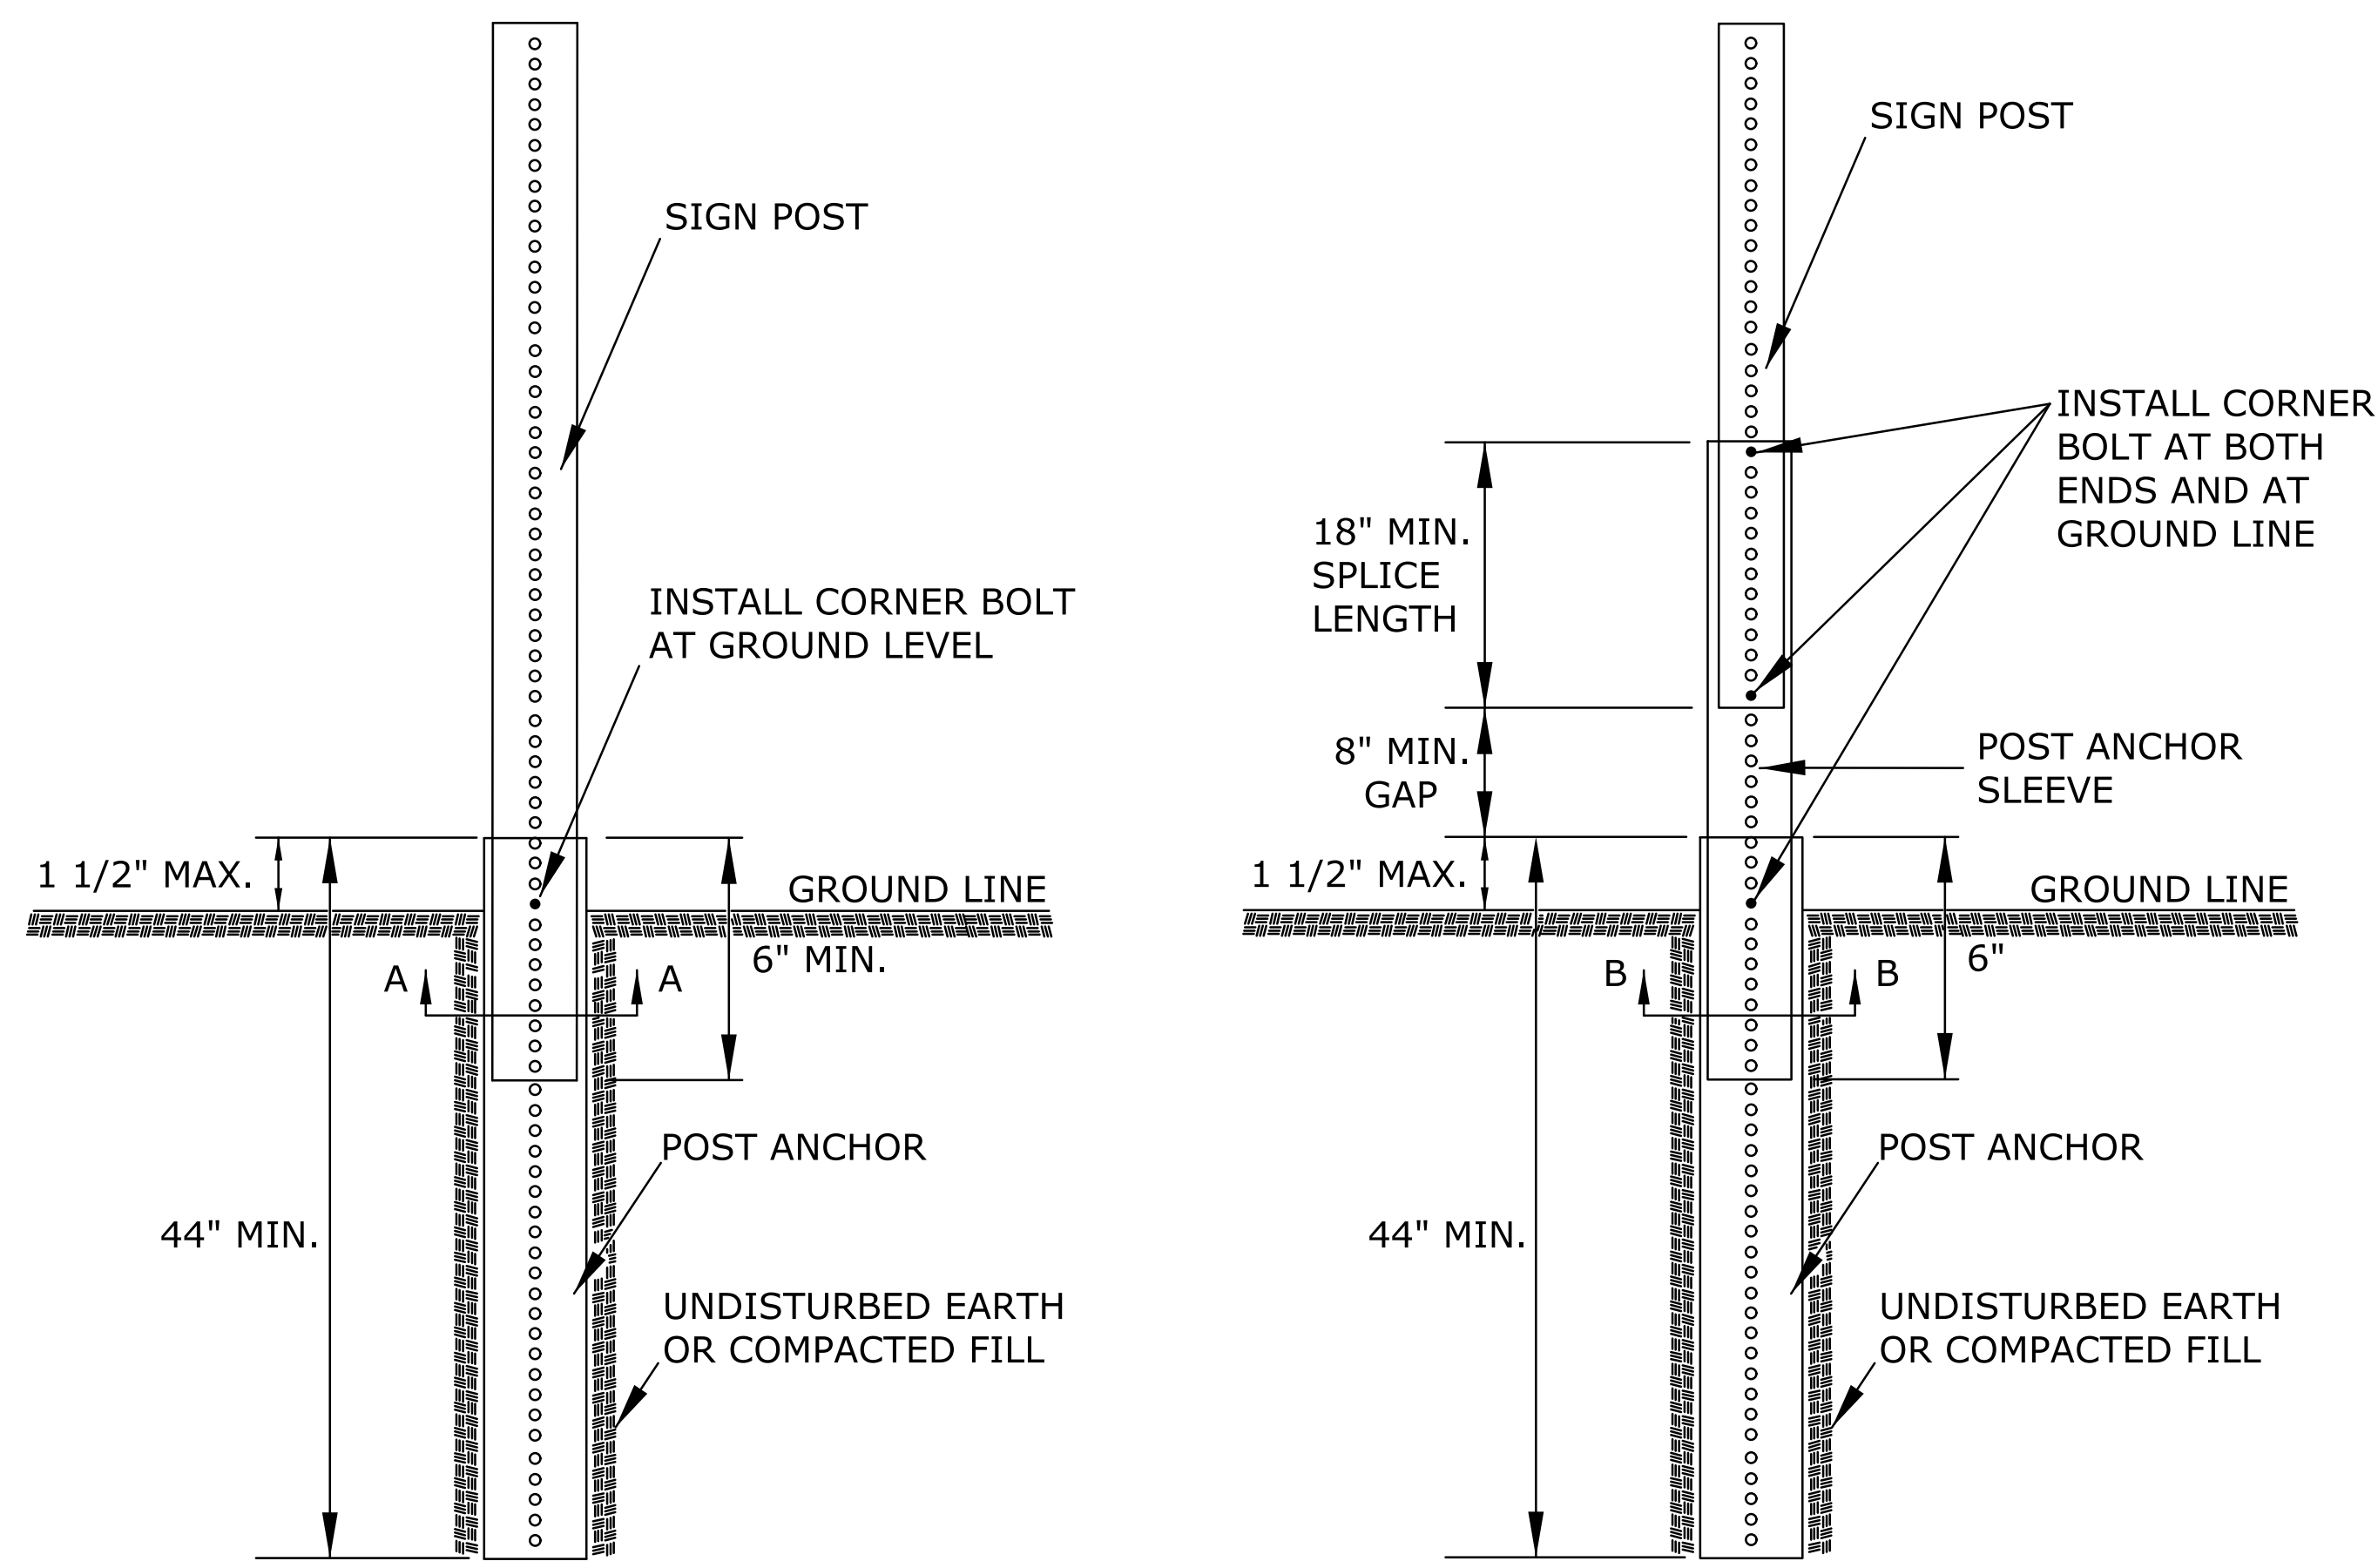

DETAILS FOR 2", 2 1/4", OR 2 1/2" SIGN POST

PLACE BOLTS IN THE SAME CORNER ALONG EACH SIGN POST.


WOOD POST SETUP

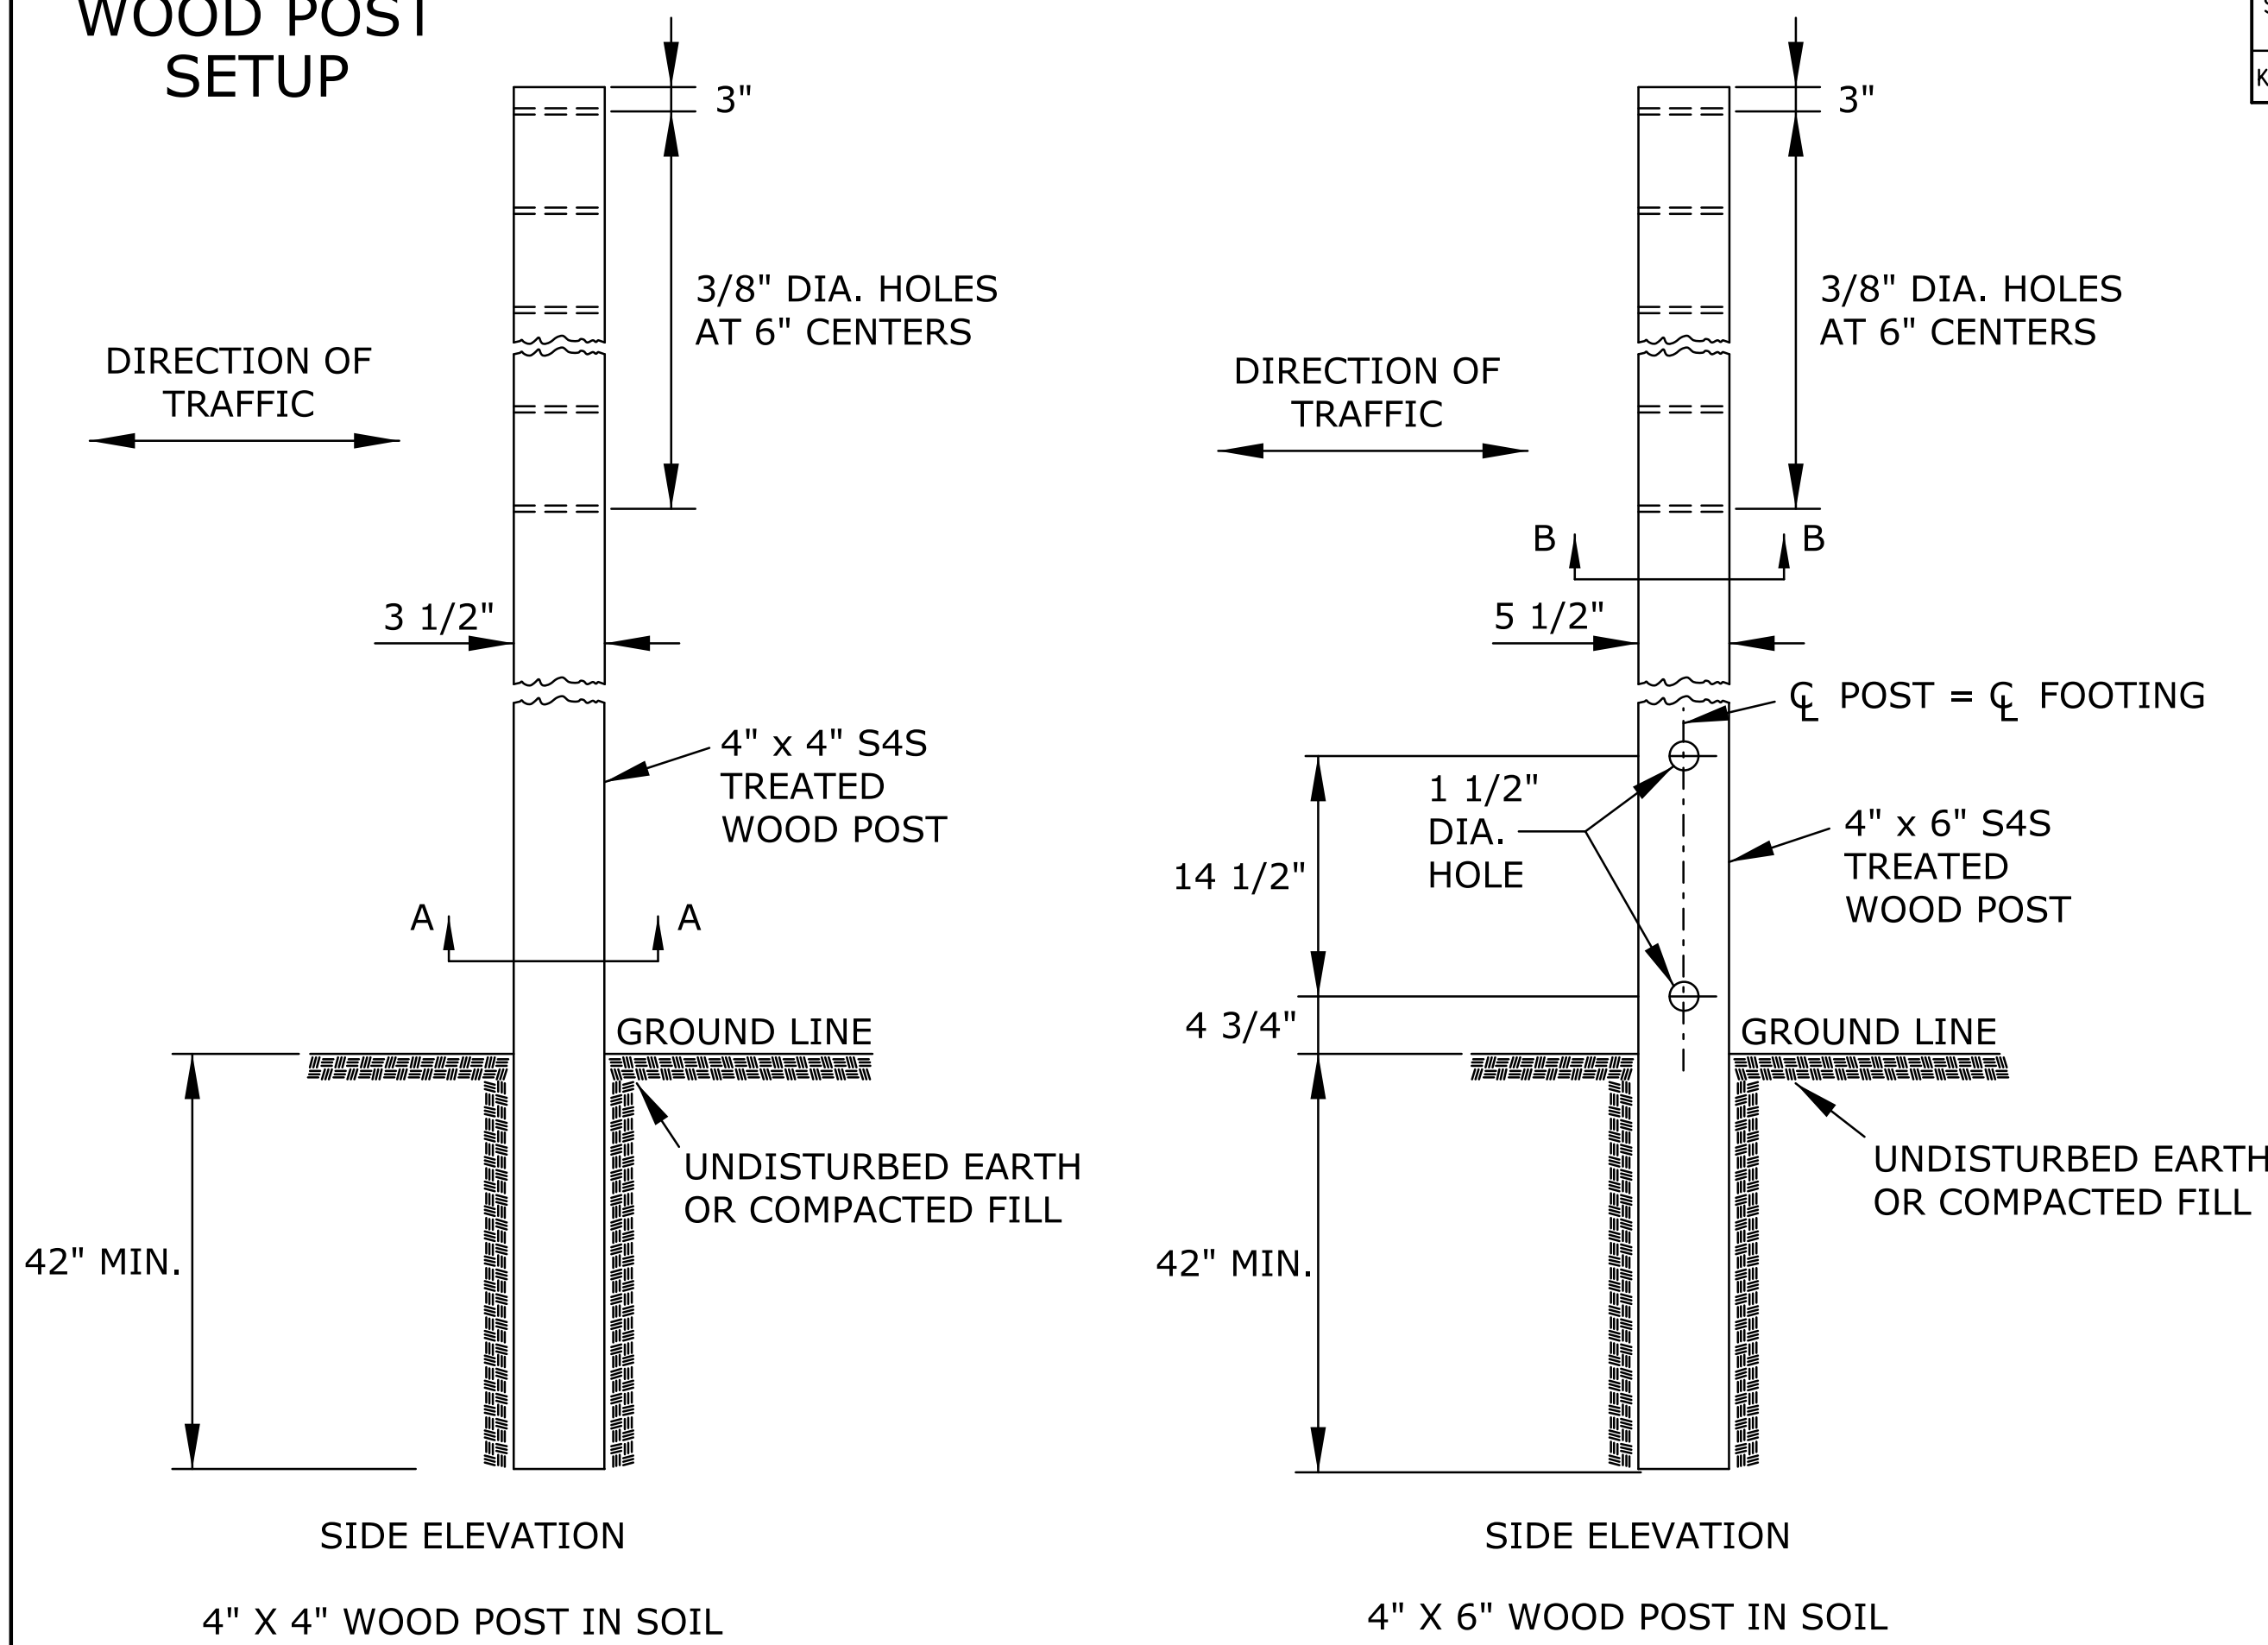


STATE	PROJECT NO.	YEAR	SHEET NO.	TOTAL SHEETS
KANSAS	472-85066	2014	287	388

NOTES:
ALL SIGN MOUNTING HOLES IN THE WOOD POSTS SHALL BE DRILLED PRIOR TO TREATING.
BREAKAWAY HOLES AND FIELD CUTS SHALL BE TREATED IN ACCORDANCE WITH THE PRESERVATIVE TREATMENT SPECIFICATIONS.

3 LB/F U-CHANNEL SETUP

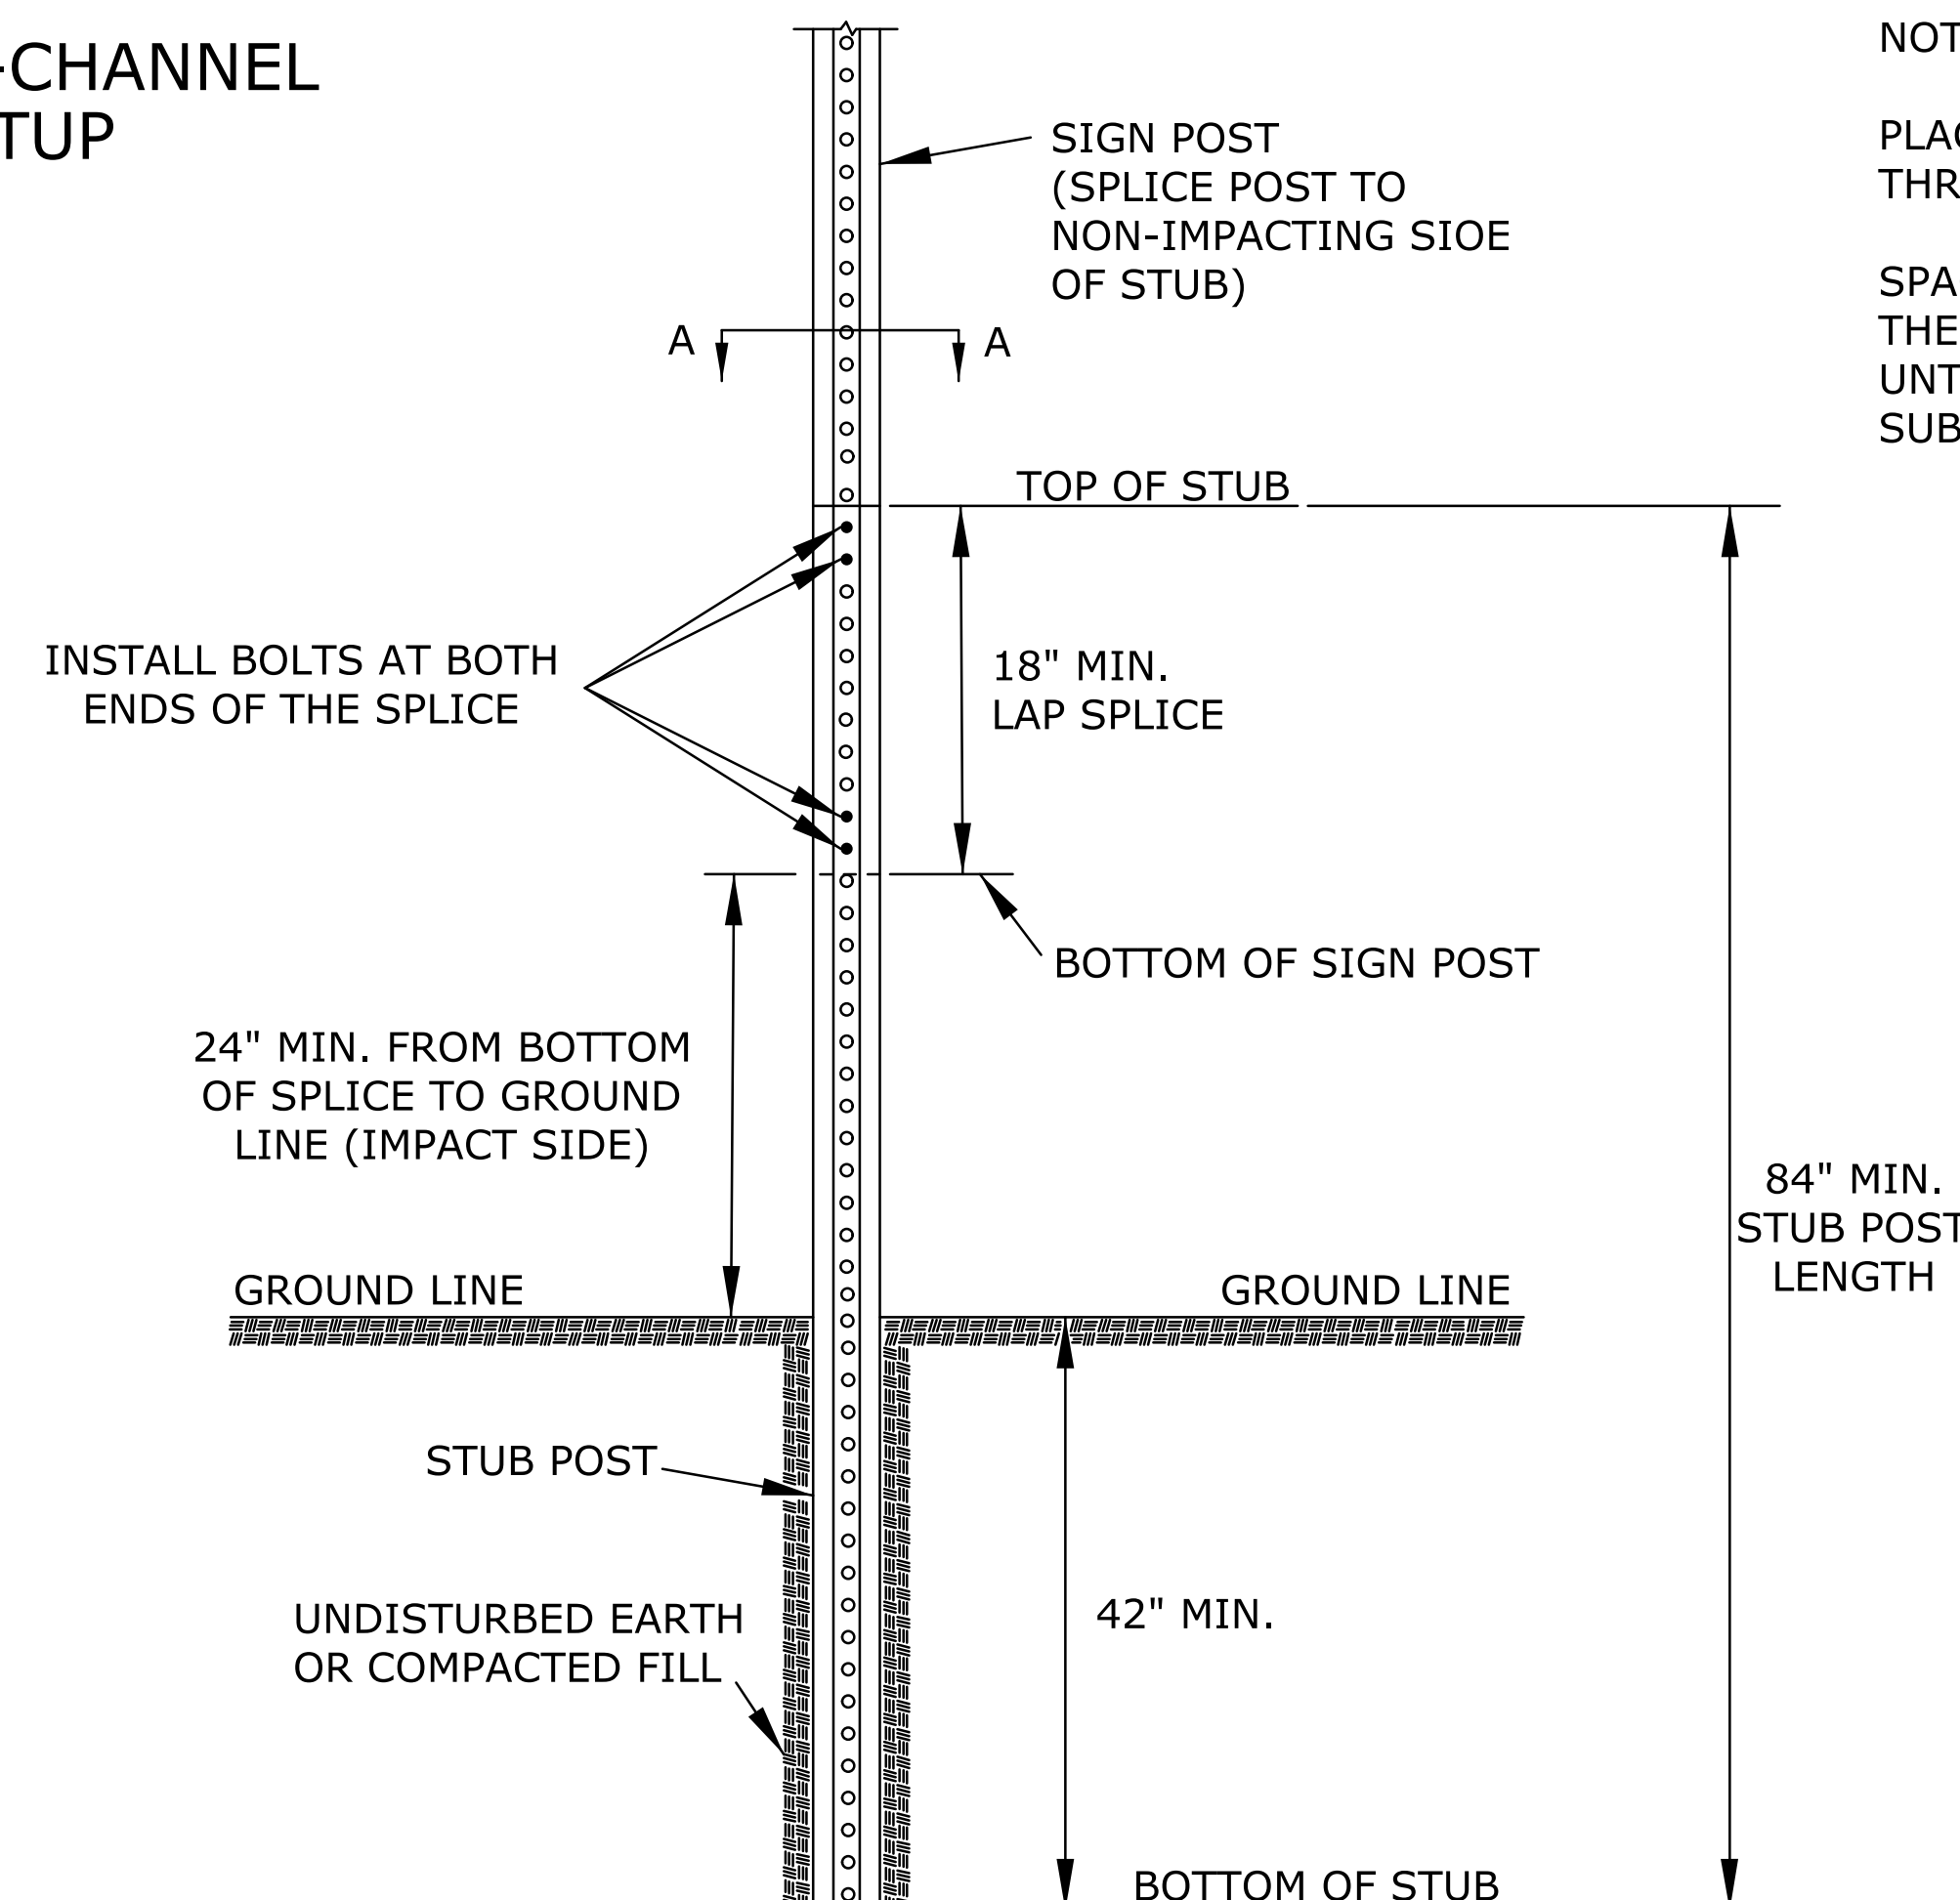

NOTES:
PLACE TWO BOLTS AT BOTH ENDS OF THE SPLICE THROUGH THE HOLES NEAREST THE ENDS OF THE SPLICE.
SPACERS WILL BE USED OVER THE BOLTS BETWEEN THE SPLICED PIECES OF U-CHANNEL. THREADED OR UNTHREADED SPACERS MAY BE USED. DO NOT SUBSTITUTE PIPE OR OTHER "ITEMS" FOR THE SPACERS.

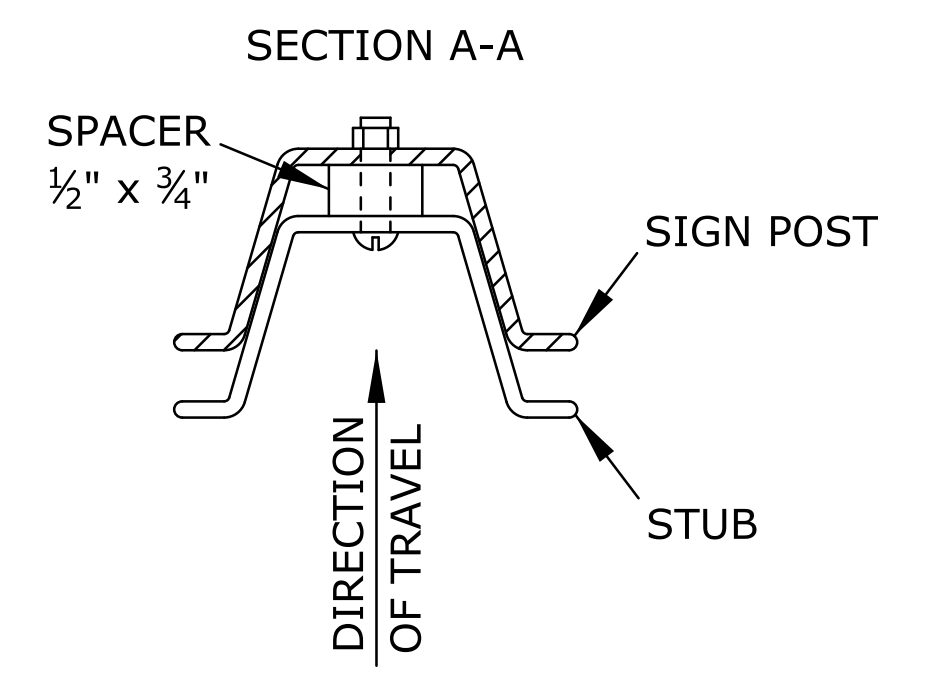

NO.	DATE	REVISIONS	BY	APP'D
3	10/16/12	Added Spacer Dimension, Removed PSST Note	J.A.M.	K.F.
2	10/4/11	Removed Washer On PSST Detail	J.A.M.	K.F.
1	6/1/10	Modified Post Anchor Sleeve Dimension	J.A.M.	A.A.A.

KANSAS DEPARTMENT OF TRANSPORTATION

APPROVED TEMPORARY POST SETUPS

TE712

DESIGNED	B.A.H.	DETAILED	B.A.H.	QUANTITIES	TRACED	J.A.M.	K.F.
DESIGN CK.		DETAIL CK.		QUAN. CK.			

FHWA APPROVAL: 10/16/12 APP'D Kristina Pyle

Drawn By : cp
Plotted : 30-DEC-2013 13:35
File : I:\2009\09521\Standards\09521-te712.dgn