


SE of Central & West - 640 N West St



Attachment A - 472-85156 Bench and Shelter Installation, West Side Service, Wichita, KS

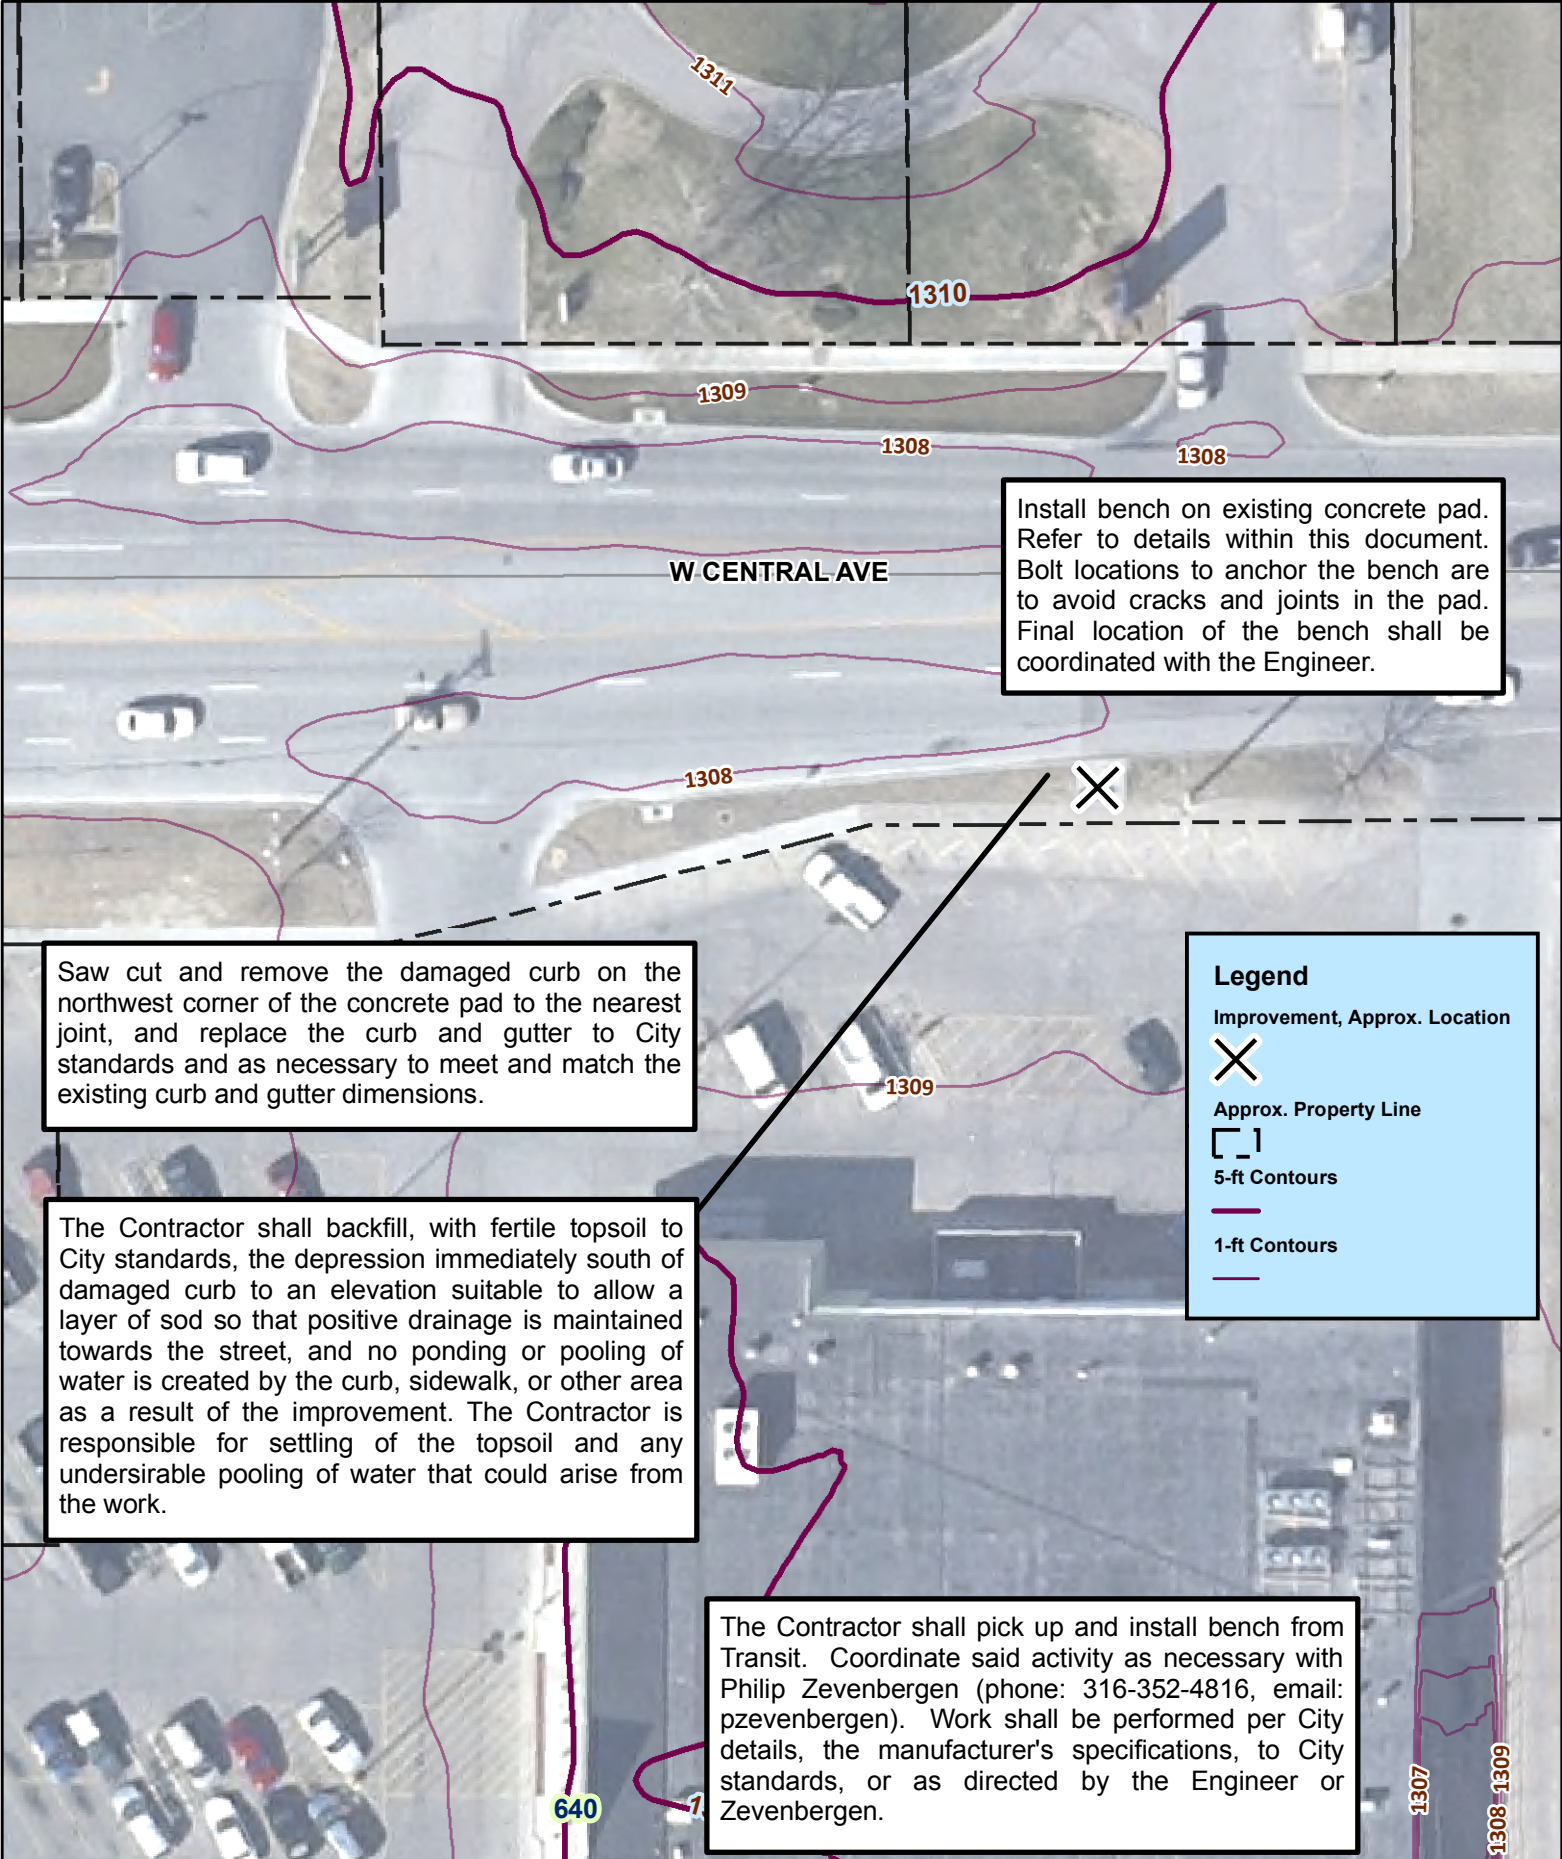

Install bench on existing concrete pad. Refer to details within this document. Bolt locations to anchor the bench are to avoid cracks and joints in the pad. Final location of the bench shall be coordinated with the Engineer.

Saw cut and remove the damaged curb on the northwest corner of the concrete pad to the nearest joint, and replace the curb and gutter to City standards and as necessary to meet and match the existing curb and gutter dimensions.

The Contractor shall backfill, with fertile topsoil to City standards, the depression immediately south of damaged curb to an elevation suitable to allow a layer of sod so that positive drainage is maintained towards the street, and no ponding or pooling of water is created by the curb, sidewalk, or other area as a result of the improvement. The Contractor is responsible for settling of the topsoil and any undesirable pooling of water that could arise from the work.

**Legend**

- Improvement, Approx. Location
- Approx. Property Line
- 5-ft Contours
- 1-ft Contours

The Contractor shall pick up and install bench from Transit. Coordinate said activity as necessary with Philip Zevenbergen (phone: 316-352-4816, email: pzevenbergen). Work shall be performed per City details, the manufacturer's specifications, to City standards, or as directed by the Engineer or Zevenbergen.