
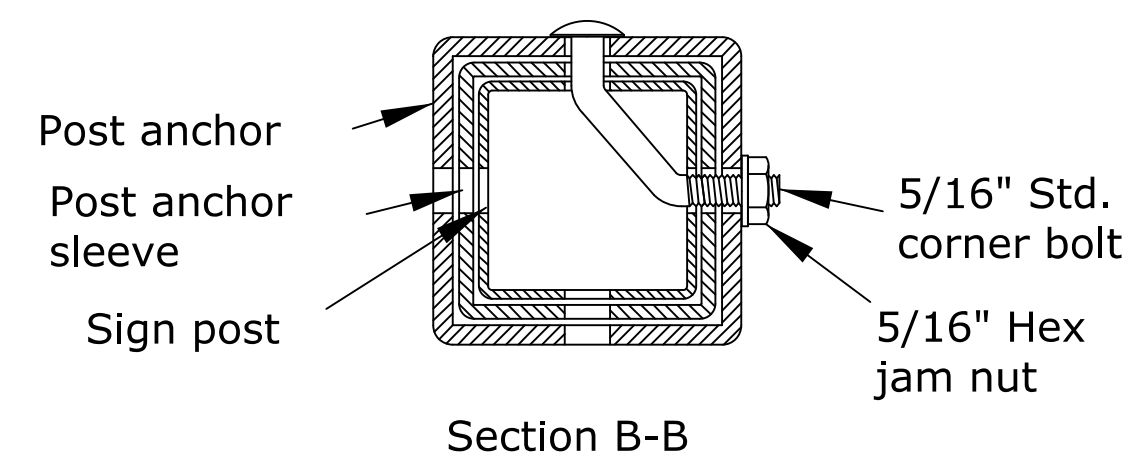
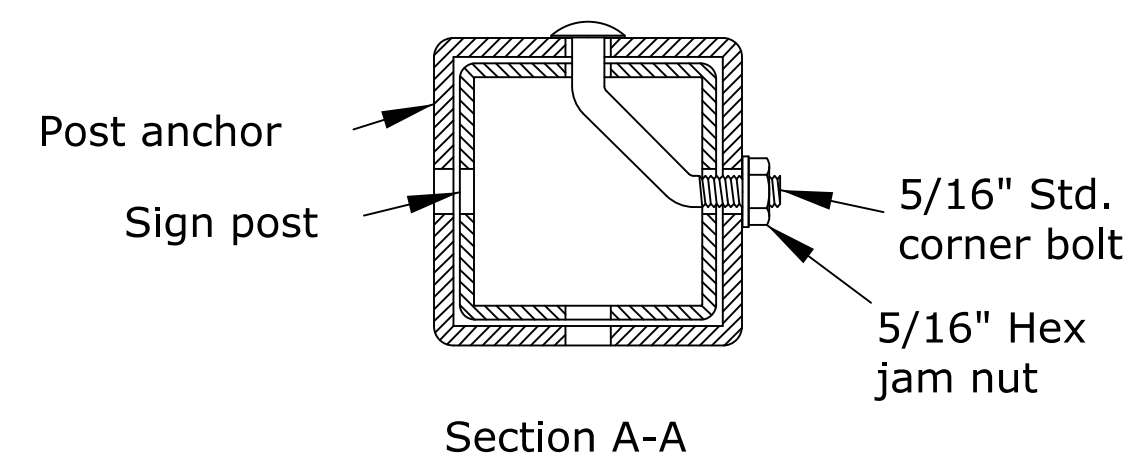




STATE	PROJECT NO.	YEAR	SHEET NO.	TOTAL SHEETS
KANSAS	472-85214	2017	83	107

Perforated square steel tube (P.S.S.T.) post setup

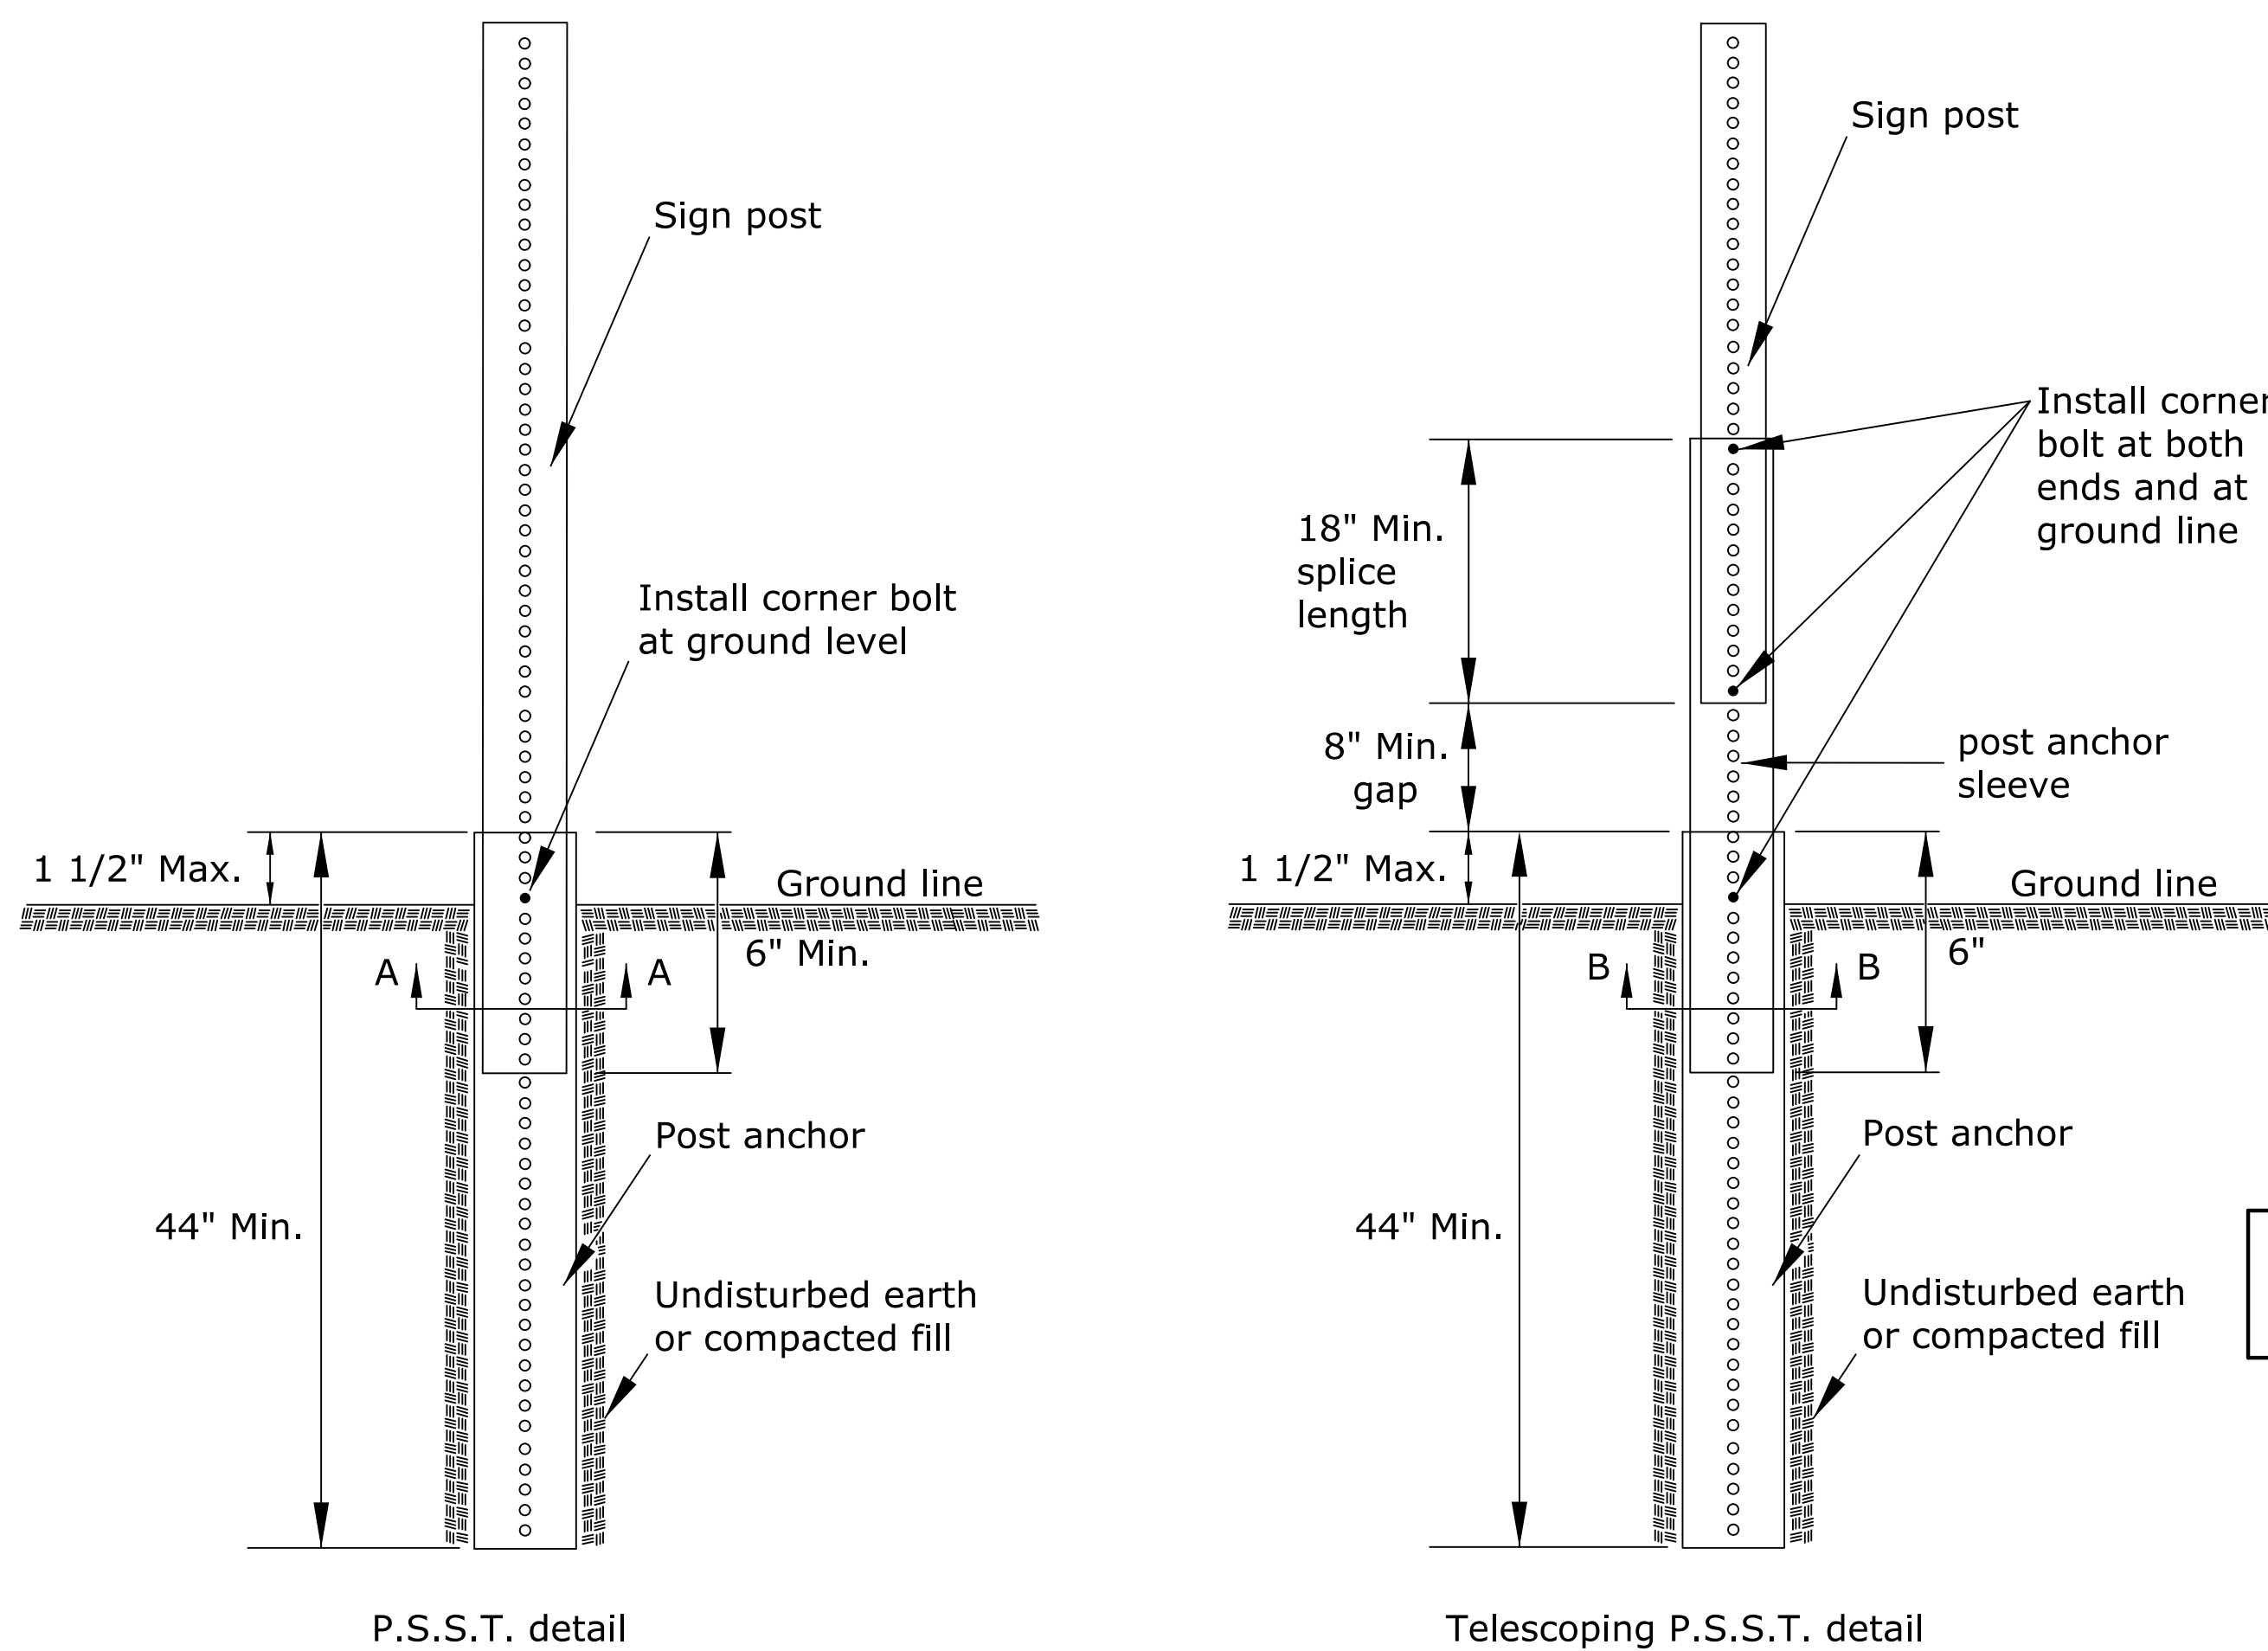


Details for 2", 2 1/4", or 2 1/2" sign posts
 Place bolts in the same corner along each sign post.

Wood post setup

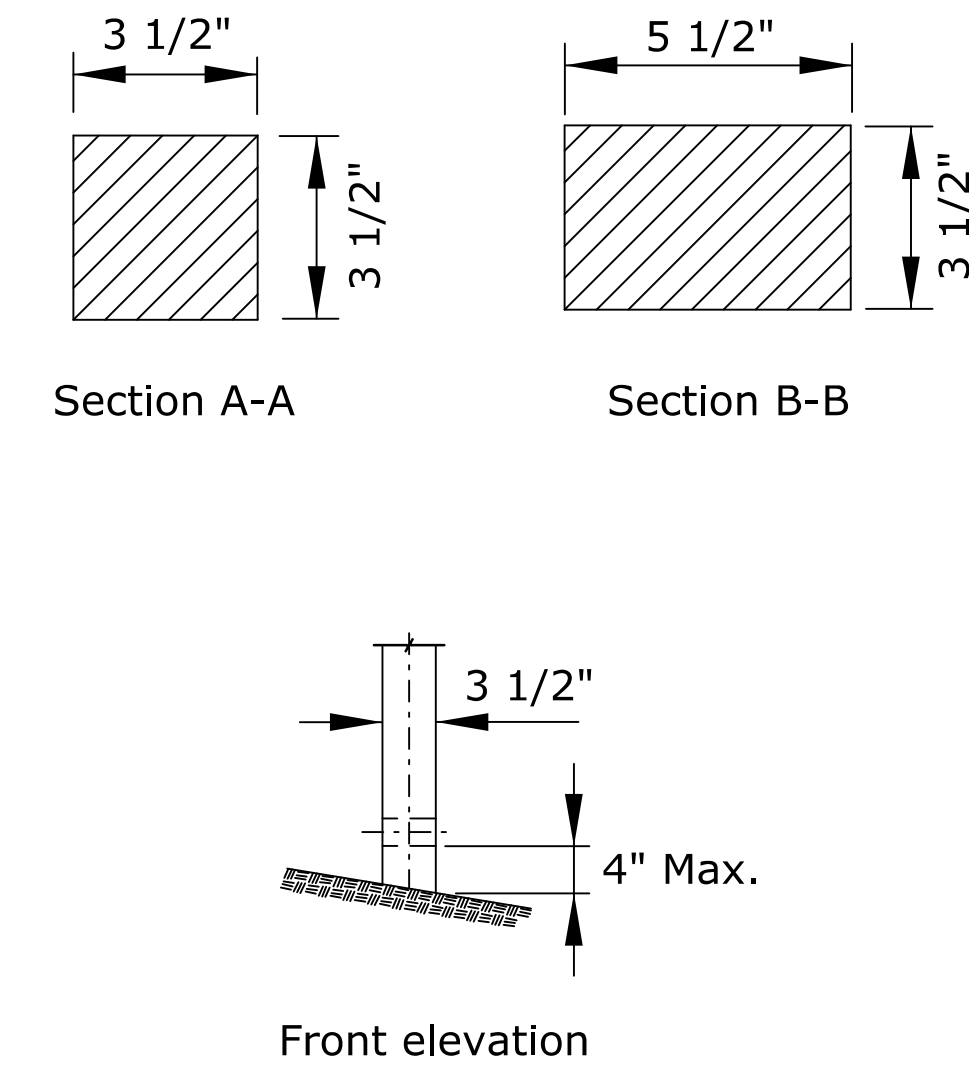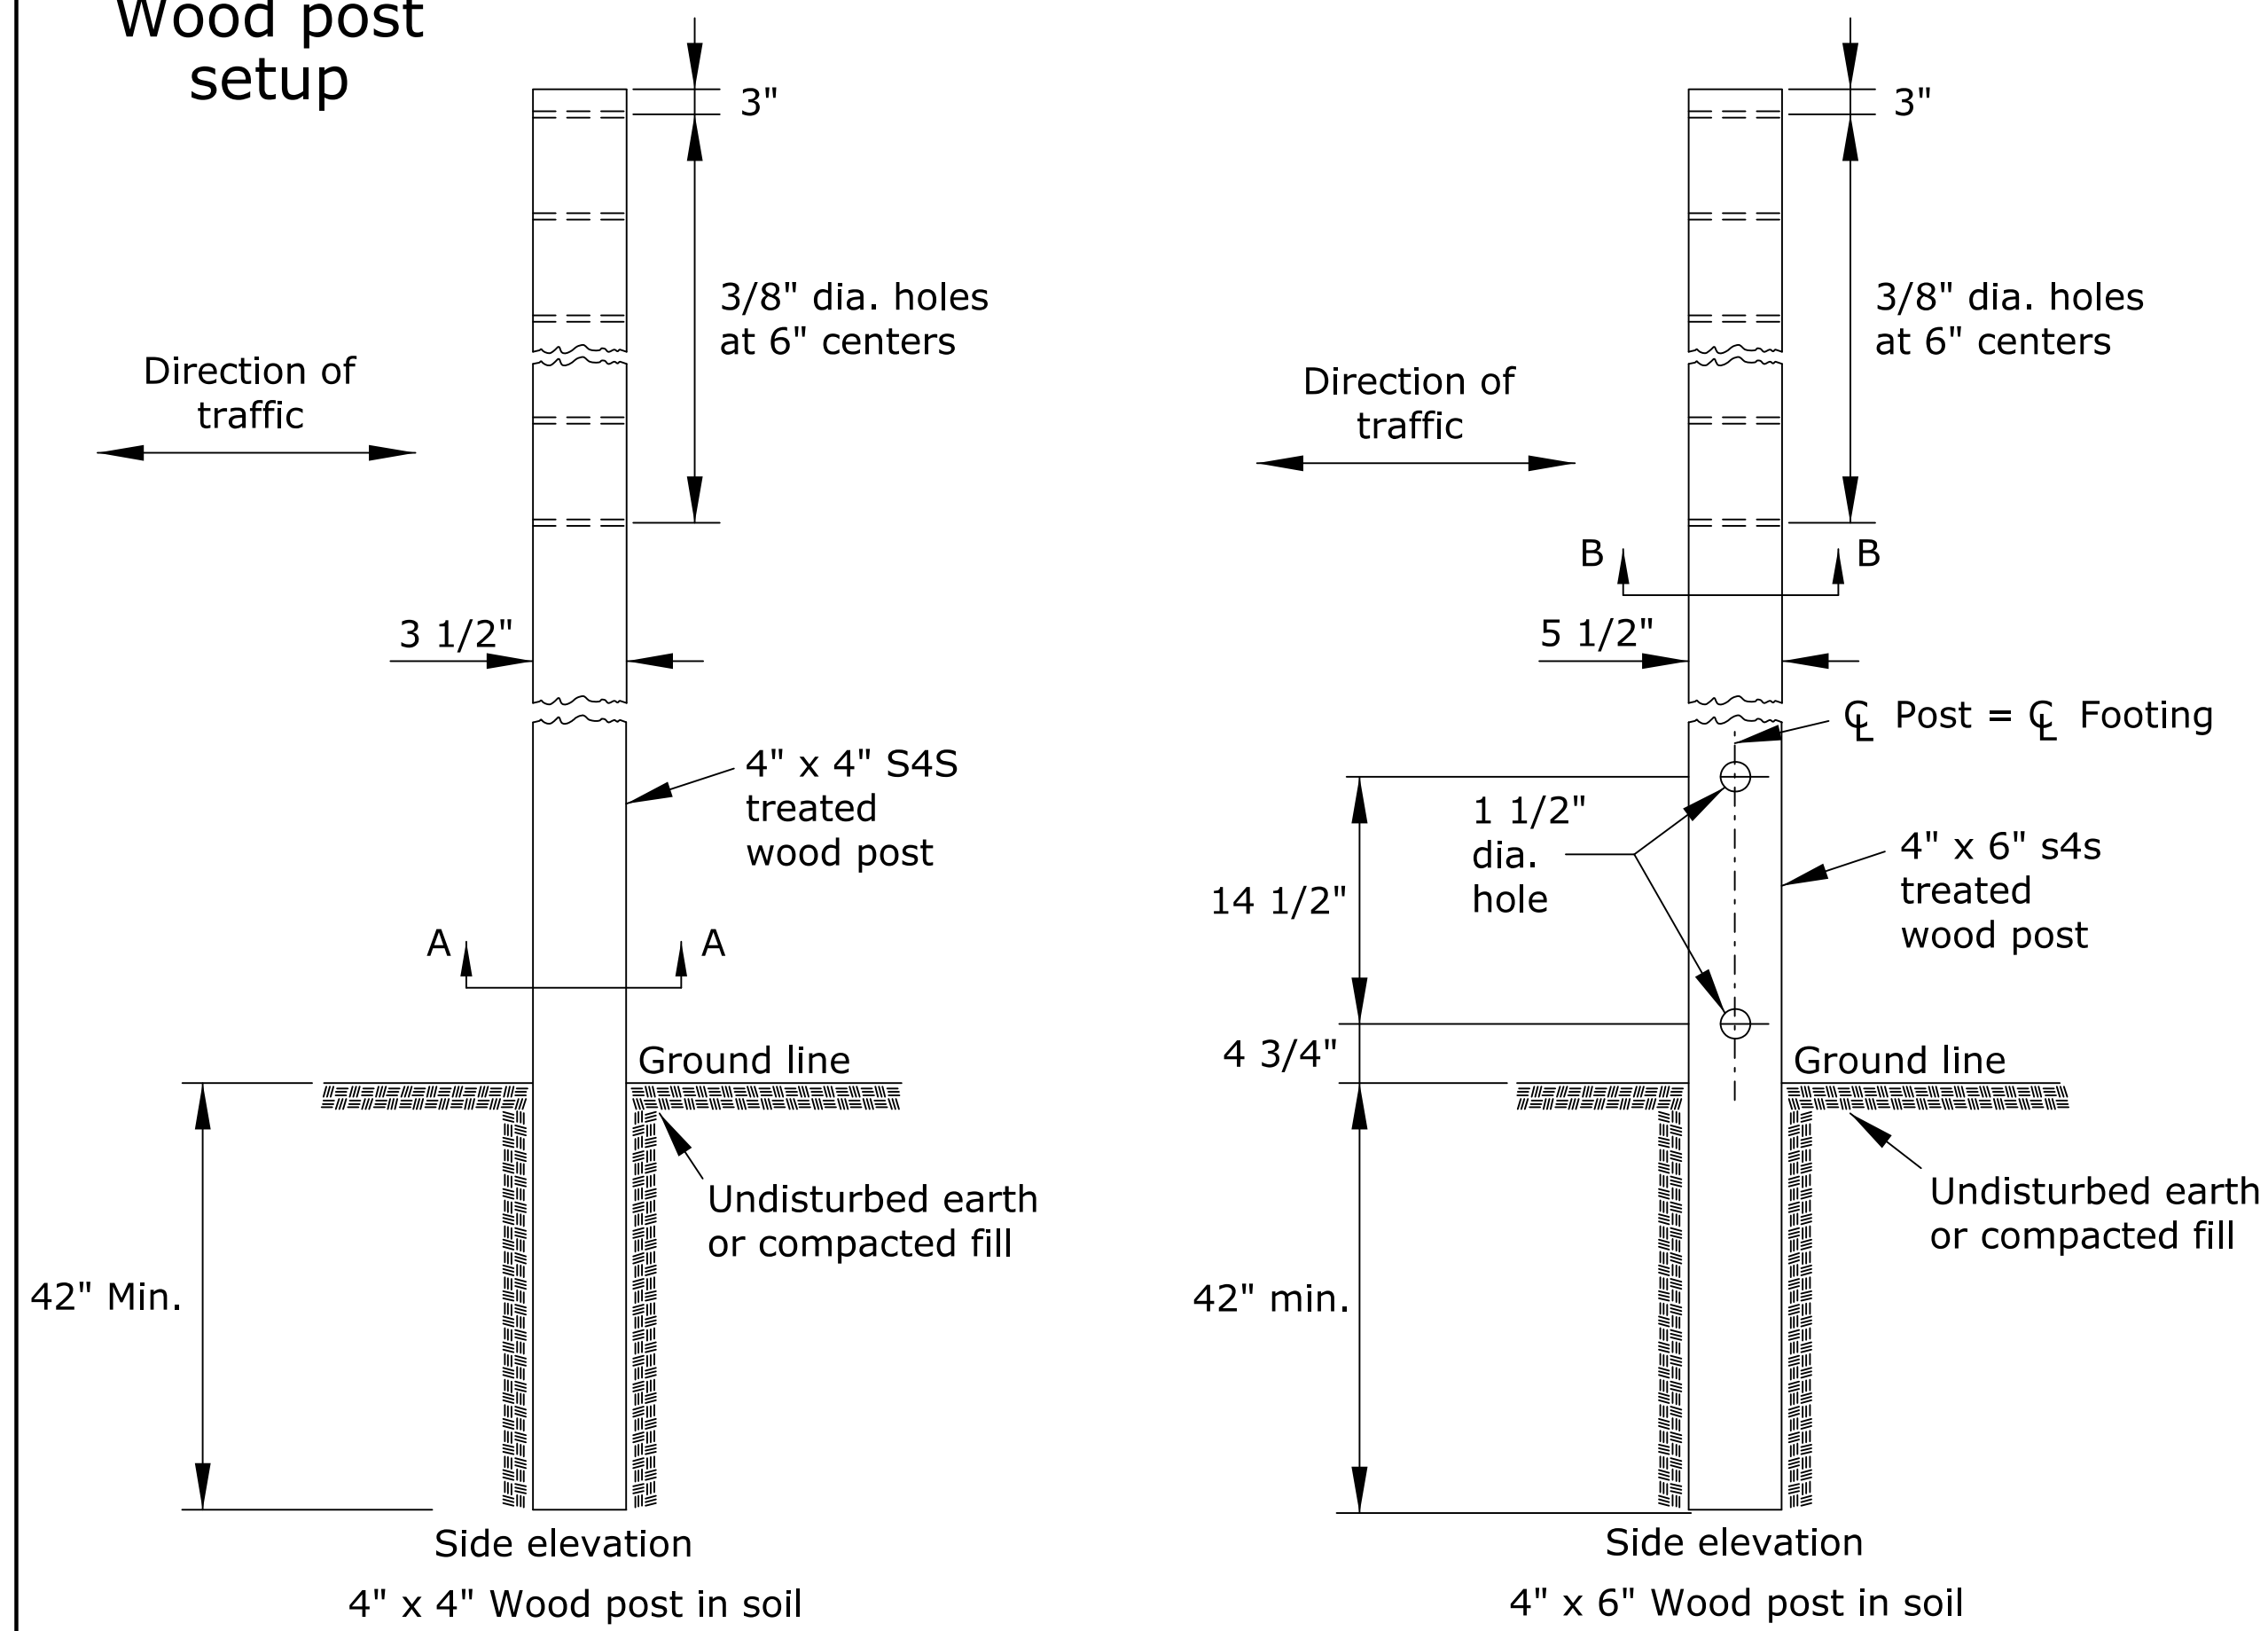


See TE710 for additional details and requirements

3 lb/f U-Channel setup

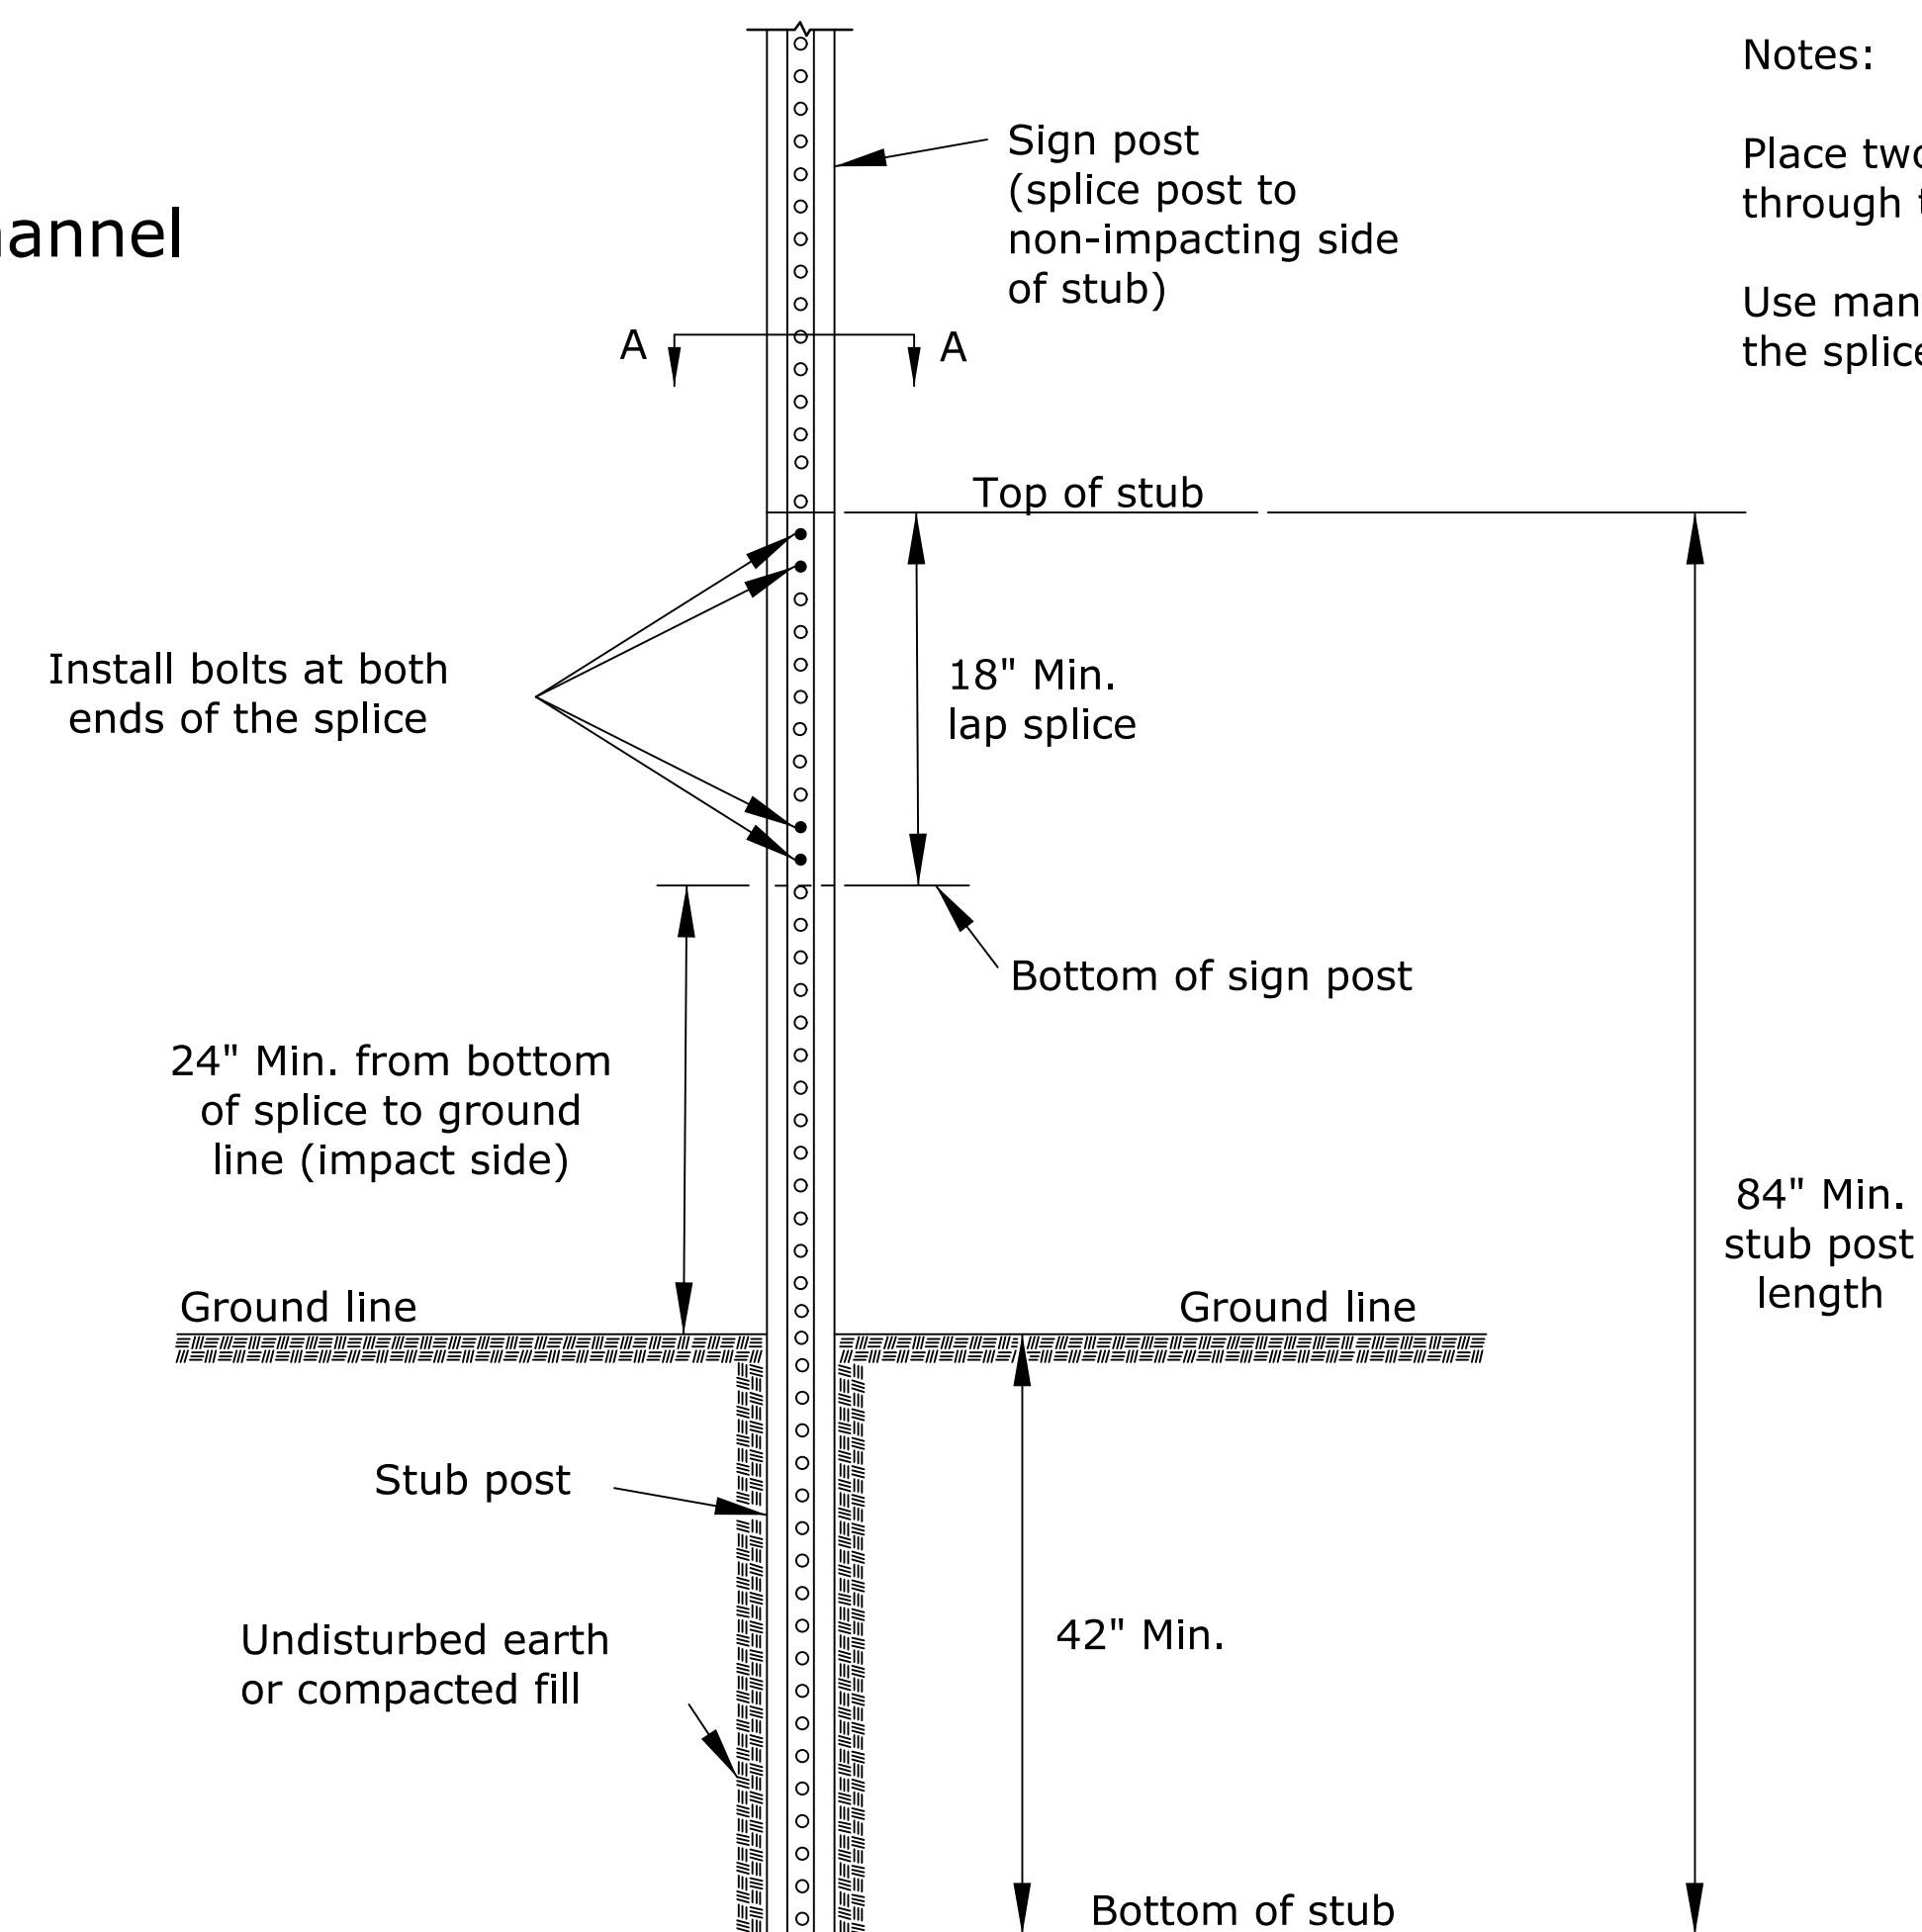

Notes:
 Place two bolts at both ends of the splice through the holes nearest the ends of the splice.
 Use manufacturer recommended spacers over the bolts between the spliced pieces of U-Channel.

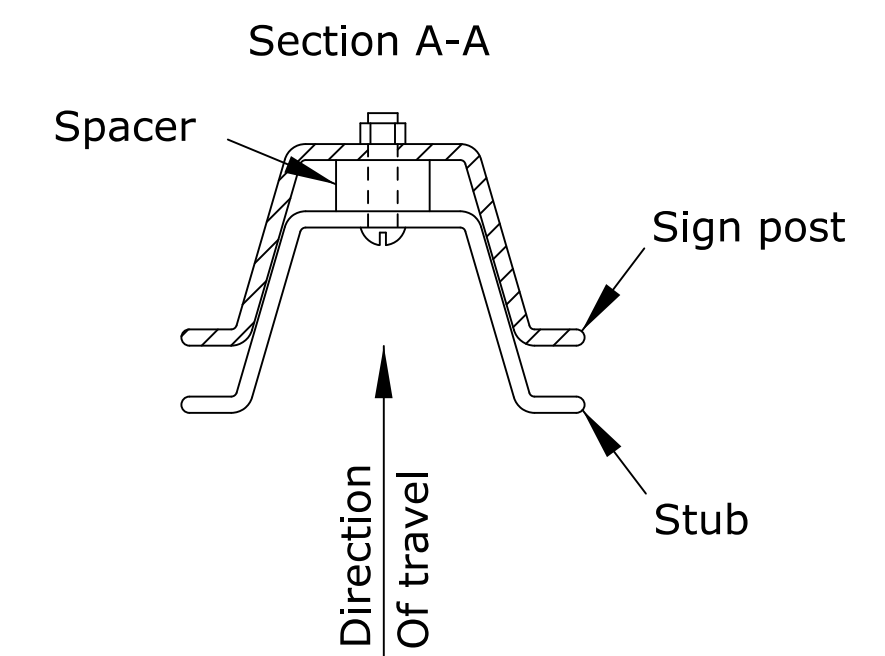

3					
2					
1					
NO.	DATE	REVISIONS	BY	APP'D	
KANSAS DEPARTMENT OF TRANSPORTATION					
TRAFFIC CONTROL SIGN POSTS					
TE712					
FHWA APPROVAL	06/01/15	APP'D	Kristina Pyle		
DESIGNED	B.A.H.	DETAILED	R.W.B.	QUANTITIES	TRACED
DESIGN CK.	DETAIL CK.	QUAN. CK.	TRACE CK.		