

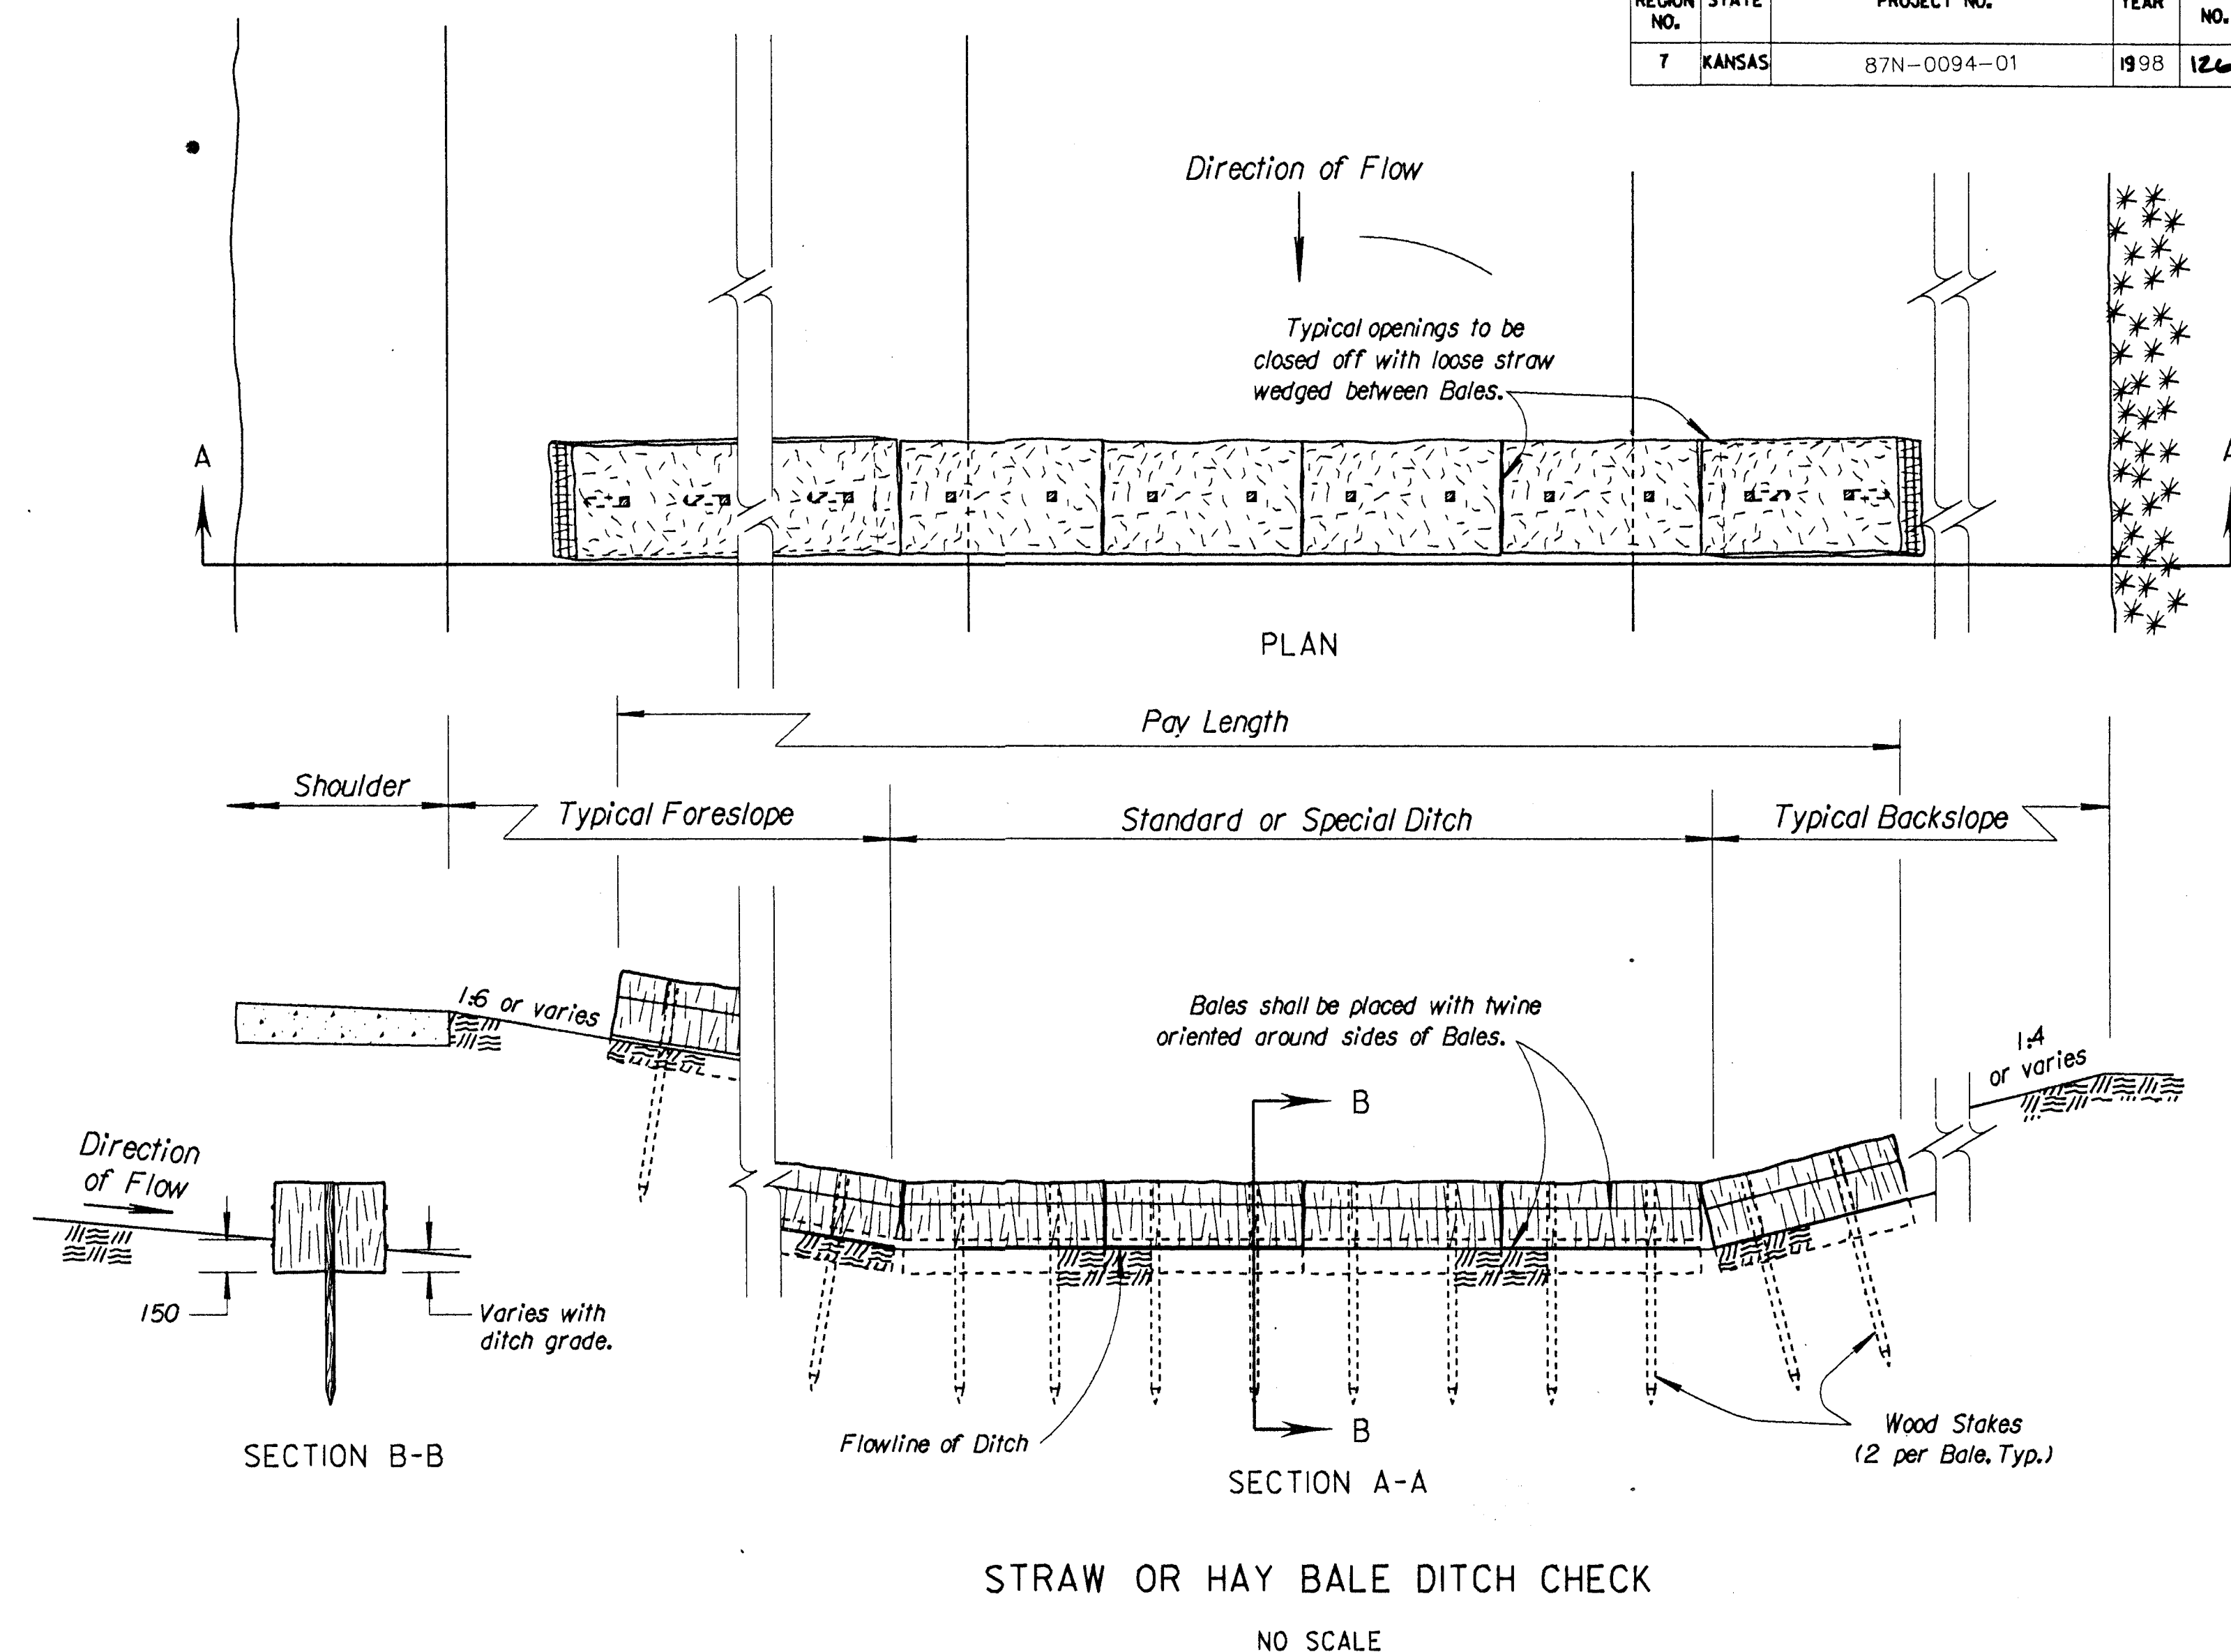
 Silt Fence Ditch Check

 Straw or Hay Bale Ditch Check

GENERAL NOTES

1. Place Bales tightly together, with loose straw or hay wedged between Bales to close off any openings.
2. Wood Stakes shall be 50 mm X 50 mm (nom.) x 1 200 mm long (min.)
3. Use as many Bales as necessary to completely block the entire width of ditch flowline, with excess Bale length cut into fore and back slopes.
4. Use as many Bales as necessary on fore and back slopes to insure water does not flow around barrier.
5. Use only twine to bind bales. The use of wire binding is prohibited because it does not readily biodegrade.

1. Wood Stakes shall be 50 mm x 50 mm (nom.) x 1 200 mm long (min.)
2. Attach Fence Fabric to wood stakes with staples, wire, or nails.
3. Use as many wood stakes as necessary to achieve a maximum spacing of 1 500 mm across ditch cross section.

[illegible]

3				
2	3-17-97	Revised Straw/Hay Bale Ditch Check	WCL	RDR
1	7-6-95	Convert to SI	WCL	RDR
NO.	DATE	REVISIONS	BY	APP'D.

KANSAS DEPARTMENT OF TRANSPORTATION
TEMPORARY PROJECT WATER
POLLUTION CONTROL
STRAW OR HAY BALE DITCH CHECKS
SILT FENCE DITCH CHECKS

LA852E SI			
F.H.W.A. APPROVAL	4/02/97	APP'D	Richard D. Ross
DESIGNED	WCL	DETAILED	WCL
QUANTITIES	TRACED	DAK	
DESIGN CK.	RDR	DETAIL CK.	WCL
QUAN.CK.	TRACE CK.	WCL	