




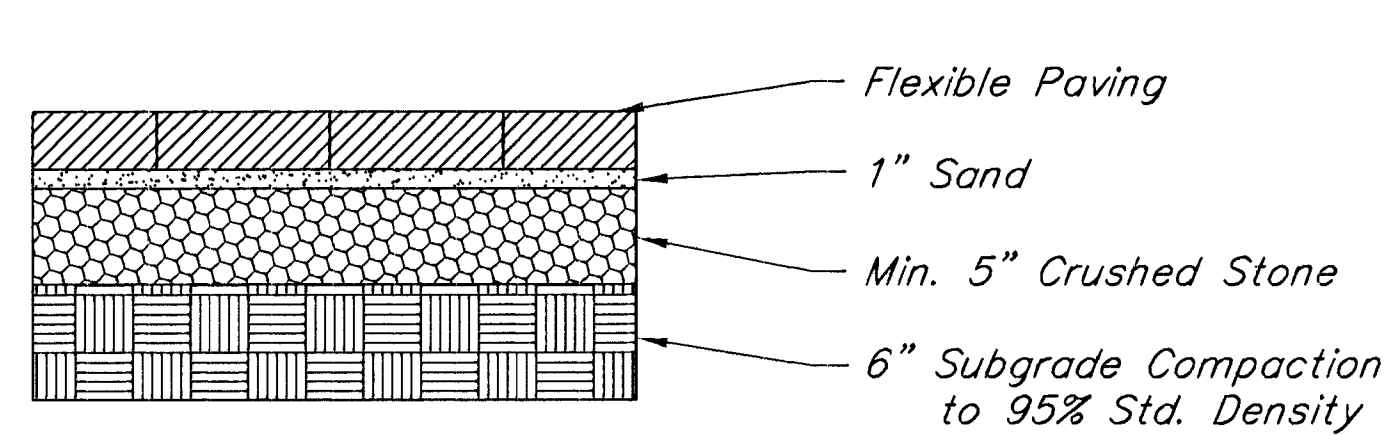

SIDEWALK PAVER TYPICAL DETAIL

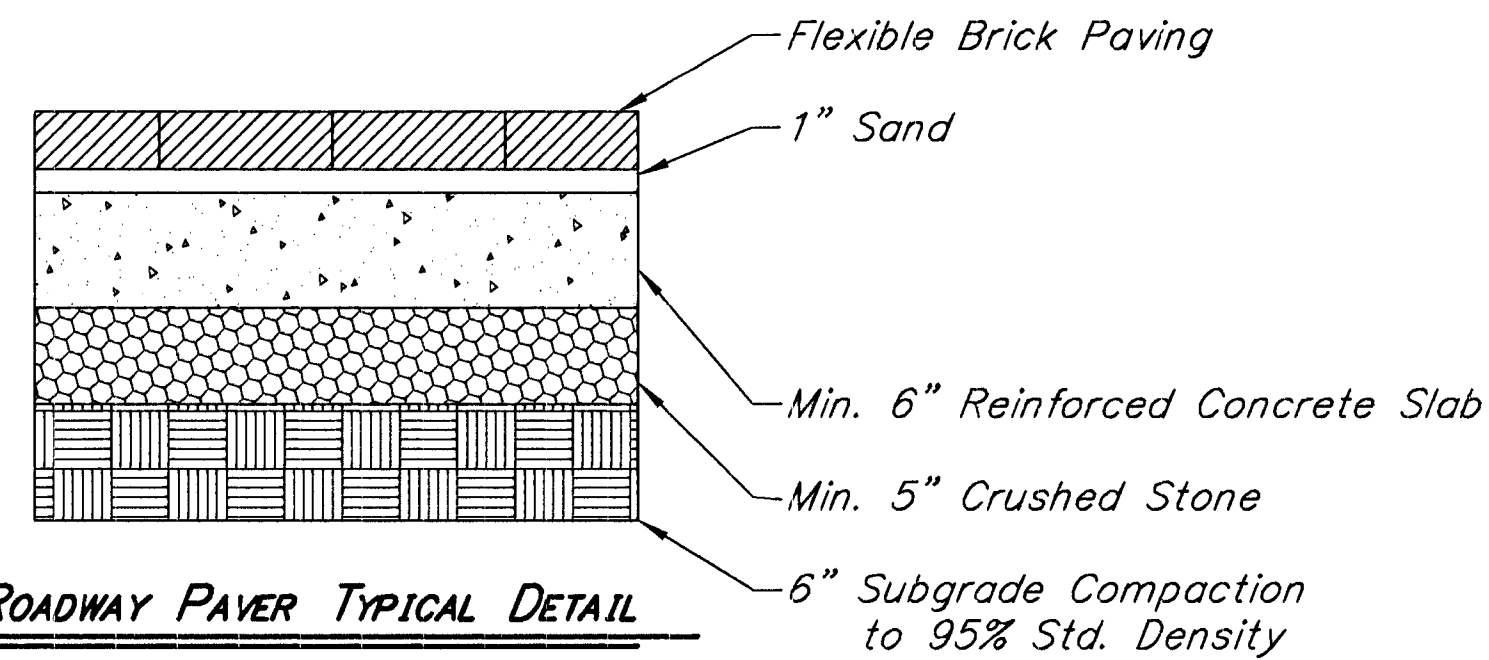

ROADWAY PAVER TYPICAL DETAIL

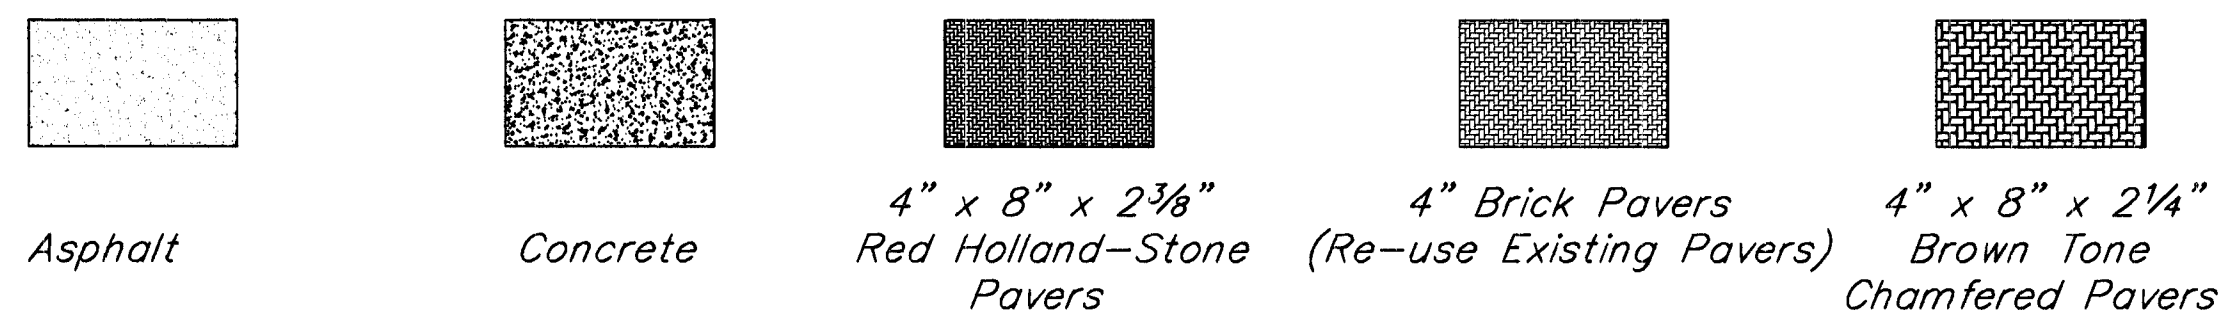


PAVING BRICK

- Installation:
1. Place bedding sand to a uniform depth and level to grade.
 2. Install Paving Bricks with an average $\frac{1}{8}$ " joint between units, with a minimum $\frac{1}{16}$ " and a maximum $\frac{1}{4}$ " joint.
 3. Where required, cut pavers with an approved cutter to fit accurately, neatly and without damaged edges.
 4. Tamp pavers with mechanical vibrator until uniformly level, true to grade, and free of movement.
 5. Fill joints with sand.

BOND PATTERN



The herringbone pattern 90° shall be used with all pavers.

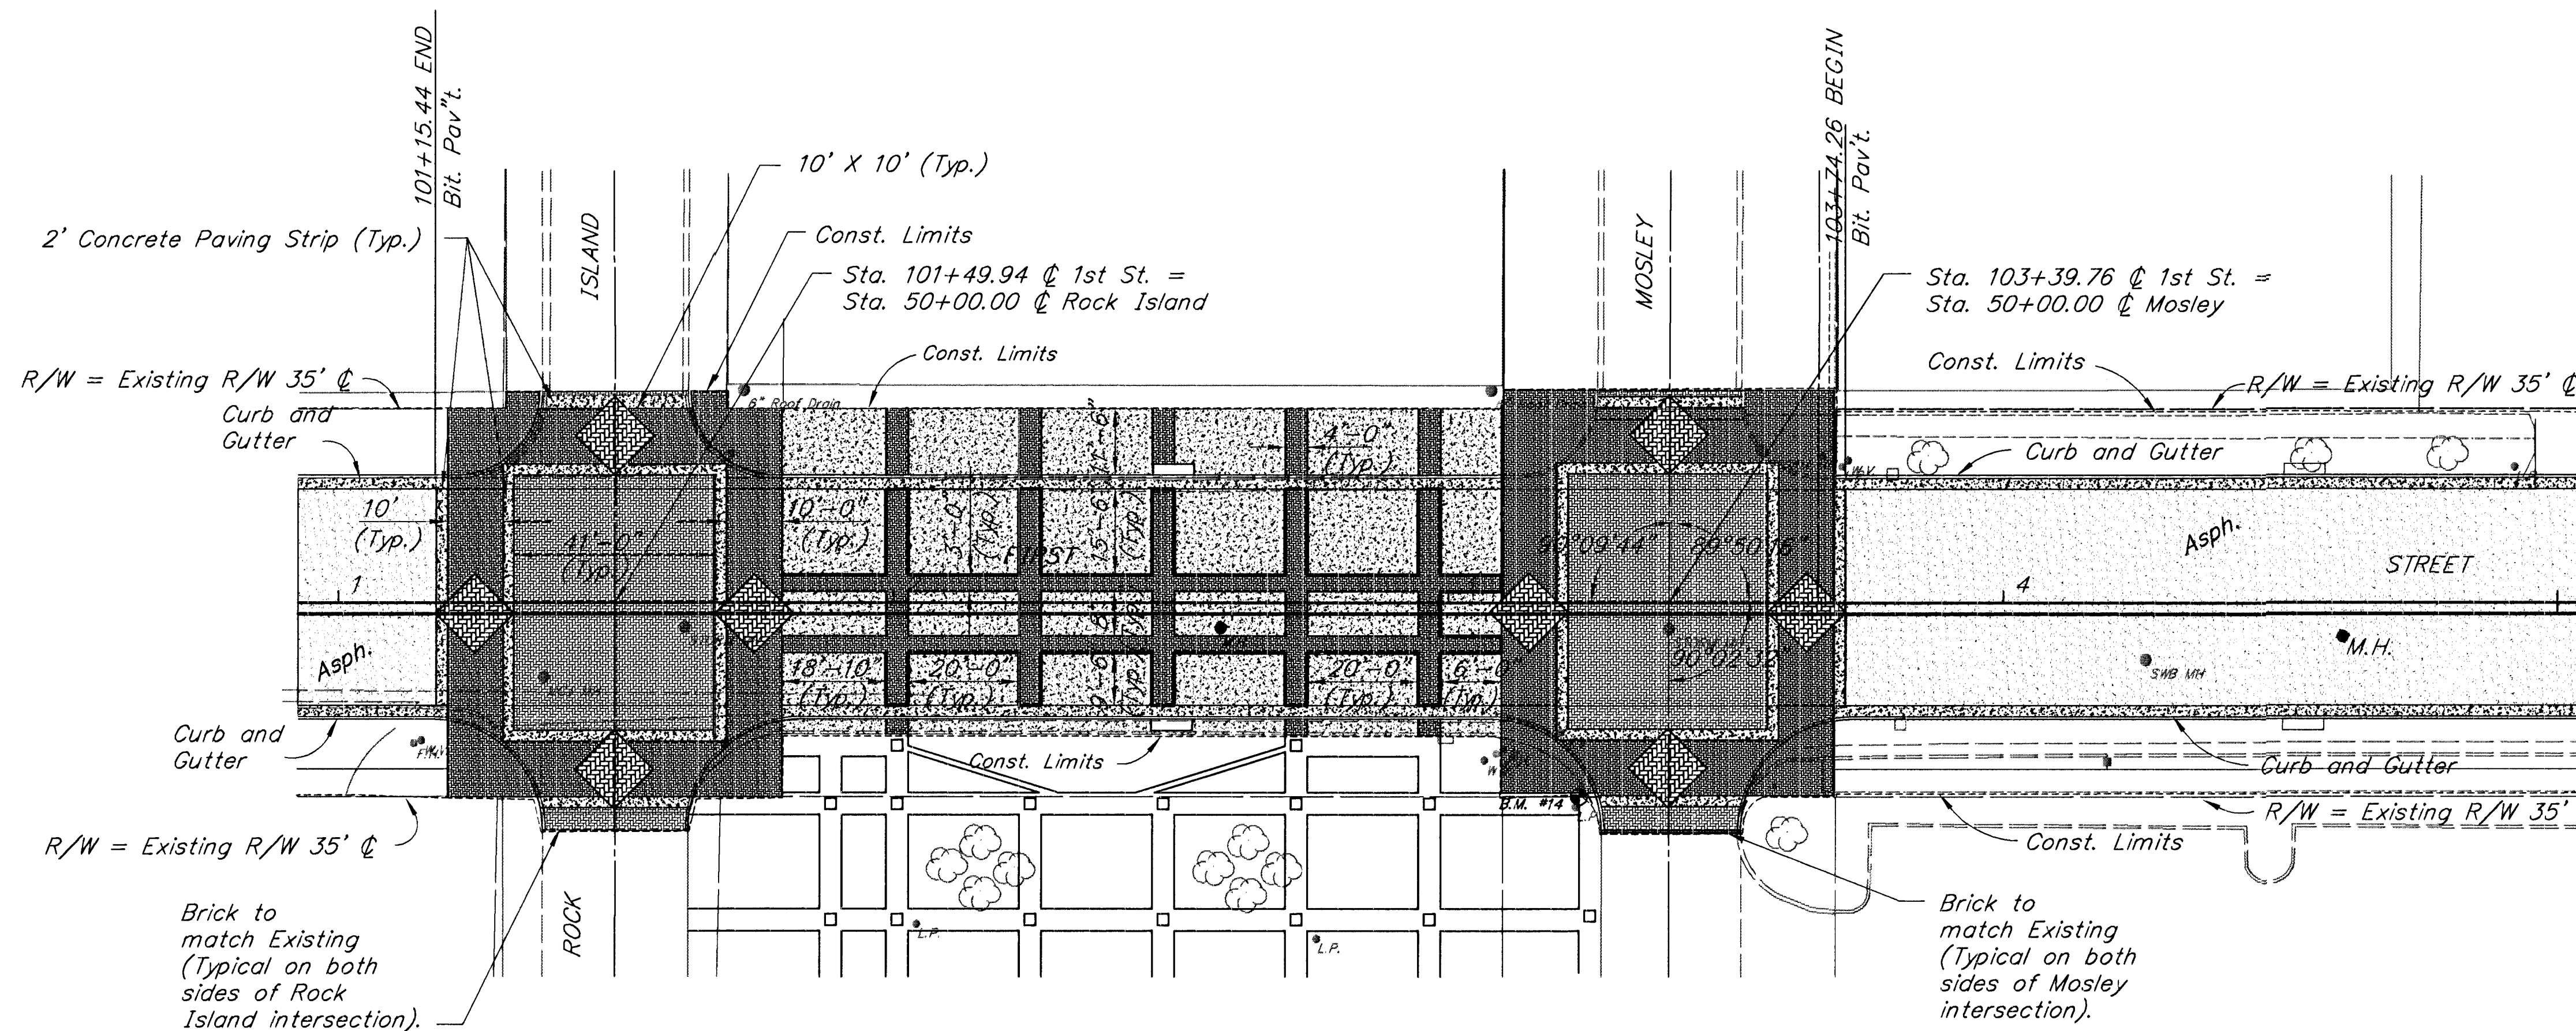

CITY OF WICHITA

FIRST STREET

BRICK PAVER DETAIL

Booker ASSOCIATES INC.
OF KANSAS
Wichita Kansas

SCALE 1"=20'	DATE MAY, 1997	DWG. NO. K9540
--------------	----------------	----------------

Plot-Time: 3:30 P.M.
Last Plot-Date: 01/07/97
APP. S.K.B.
CKD. M.W.
IR.
J.R.
DR.
CADD
DES. CADD
PLOT CADD
SURV.

F:\K9540\DETAIL
SCALE 1"=20'