


FHWA REGION NO.	STATE	PROJECT NO.	YEAR	SHEET NO.	TOTAL SHEETS
7	KANSAS	87 N-0137-01	1999	93	94

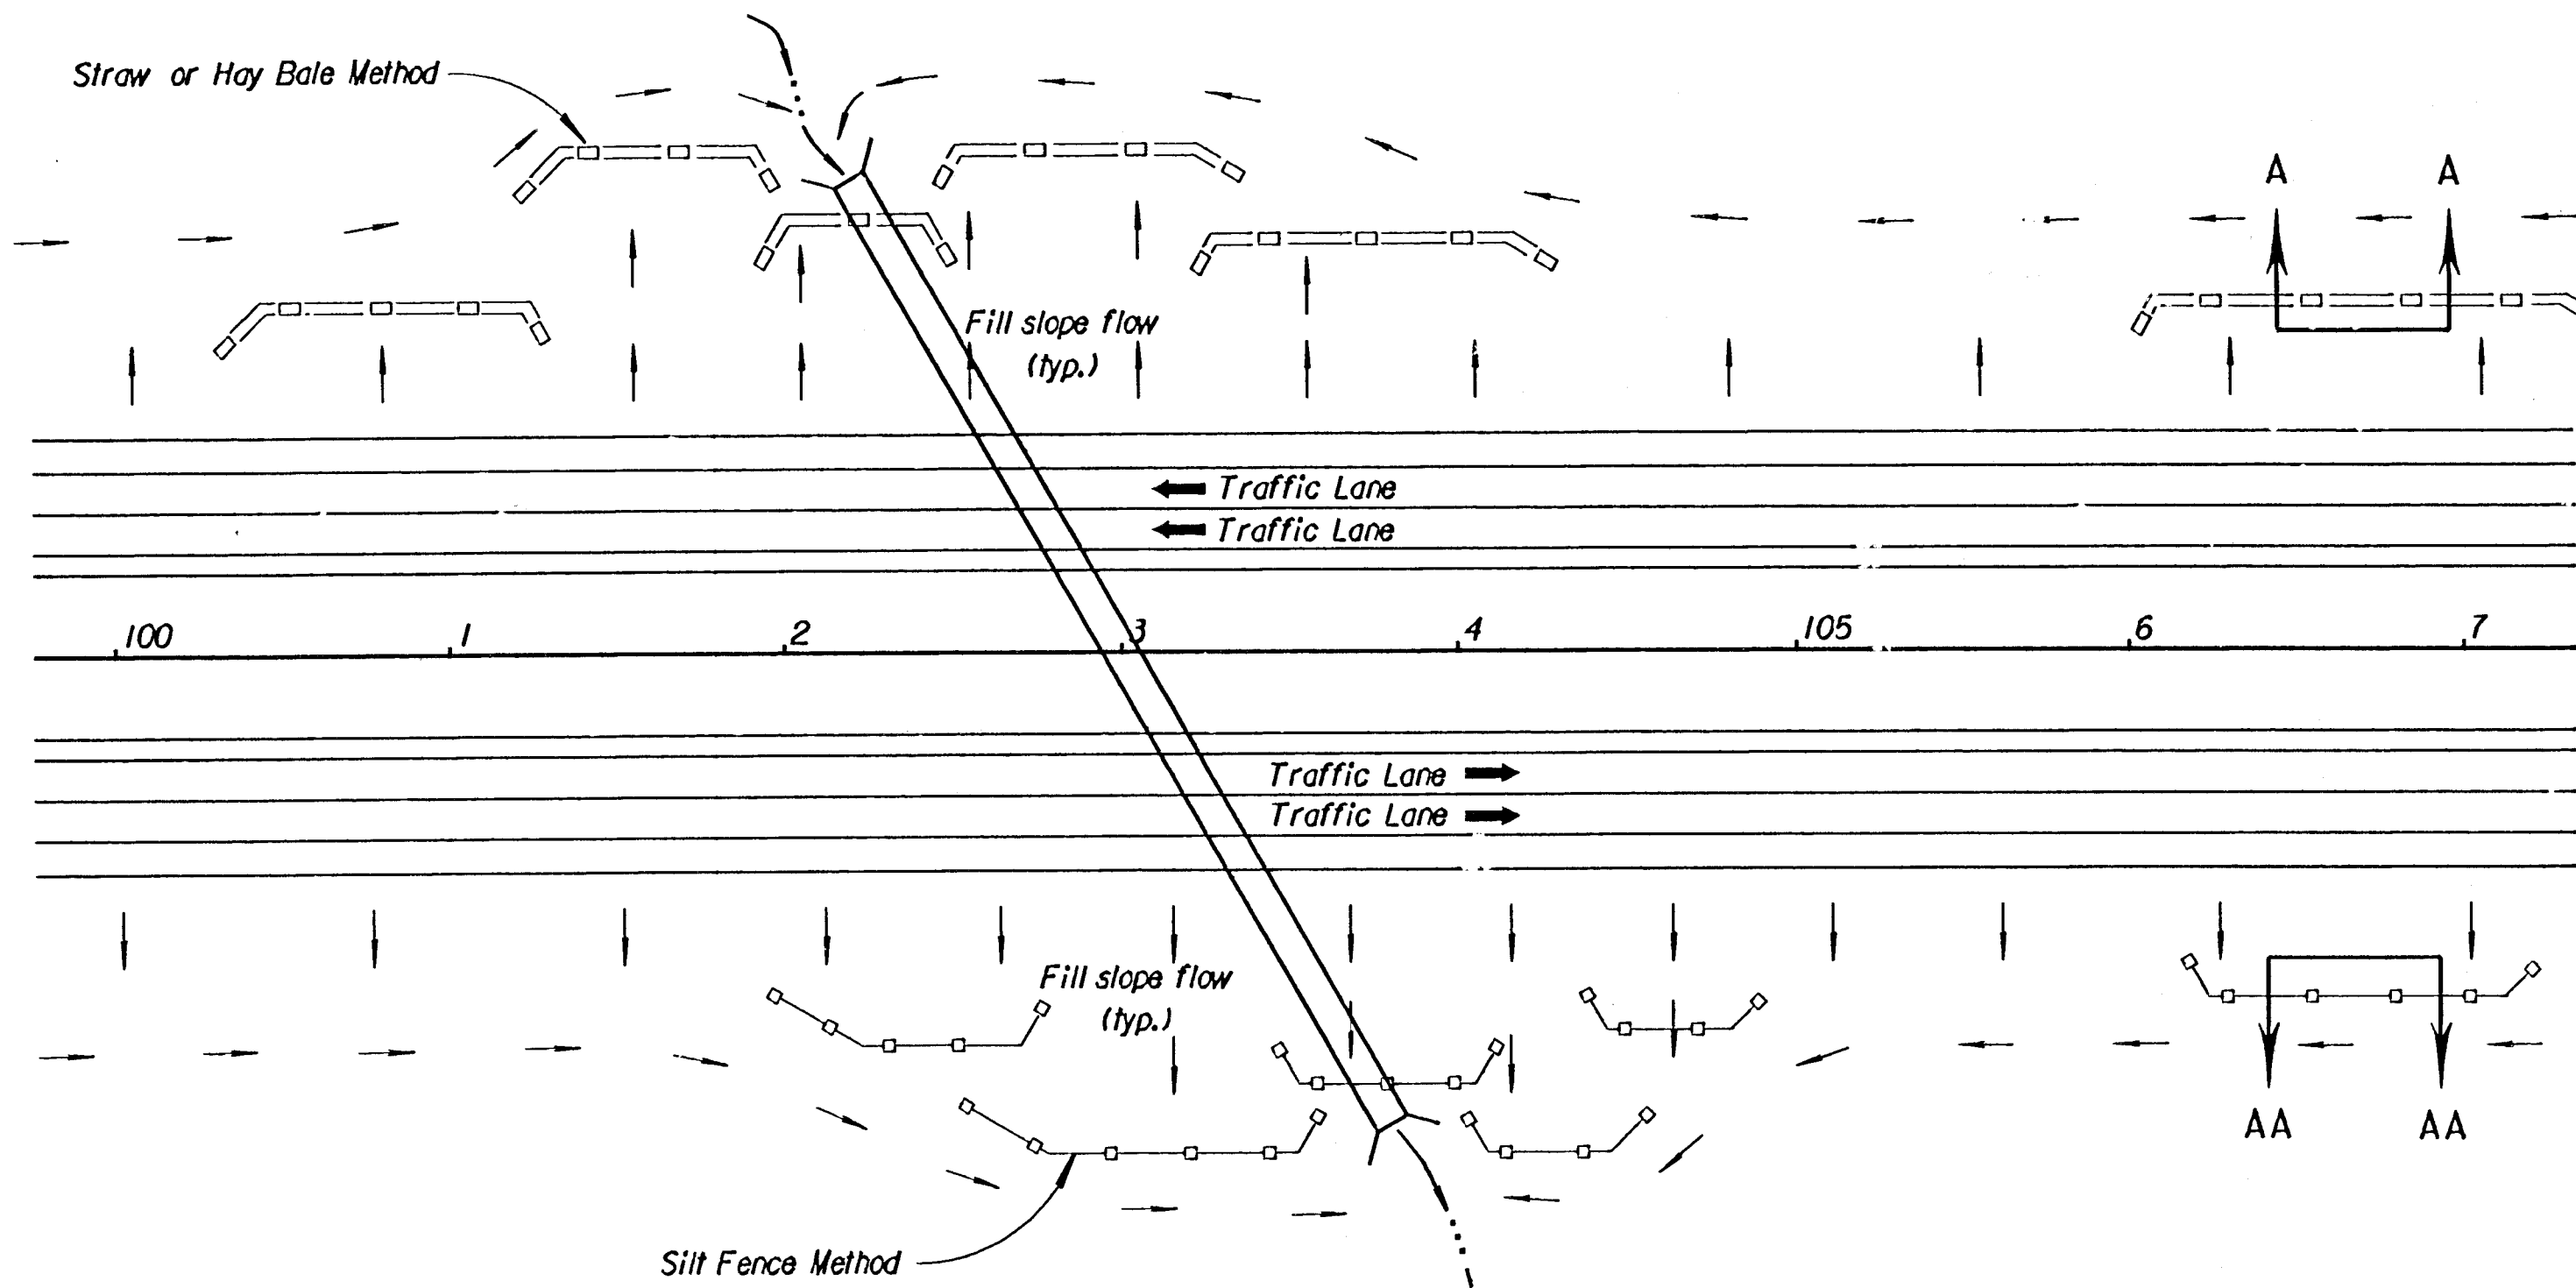

TYPICAL PLAN
NO SCALE

LEGEND OF TEMPORARY SLOPE SILT CONTROL METHODS	
	Silt Fence Barrier
	Straw or Hay Bale Barrier

GENERAL NOTES

- 1) The usage of Straw or Hay Bales or Silt Fence is at the option of the Contractor. The symbols shown in the Typical Plan shall in no way be interpreted nor implied as to the usage of Slope Barrier Types.
- 2) The slope barriers shall be placed along contour lines, with a short section turned upgrade at each end of the barrier.
- 3) At culverts, the Straw or Hay Bales or Silt Fence shall be placed over the culvert, not through the streambed flowline.


INSTALLATION NOTES

STRAW OR HAY BALES:

1. Place Bales tightly together, with loose straw or hay wedged between Bales to close off any openings.
2. Wood Stakes shall be 2" x 2" (nom.) x 4'-0" long (min.)
3. Refer to plan sheets to estimate the linear footage of Bales required.
4. Use only twine to bind bales. The use of wire binding is prohibited because it does not readily biodegrade.

SILT FENCE:


1. Wood Stakes shall be 2" x 2" (nom.) x 4'-0" (min.) long.
2. Attach Fence Fabric to wood stakes with staples, wire, or nails.
3. Refer to plan sheets to estimate the linear footage of Silt Fence required.

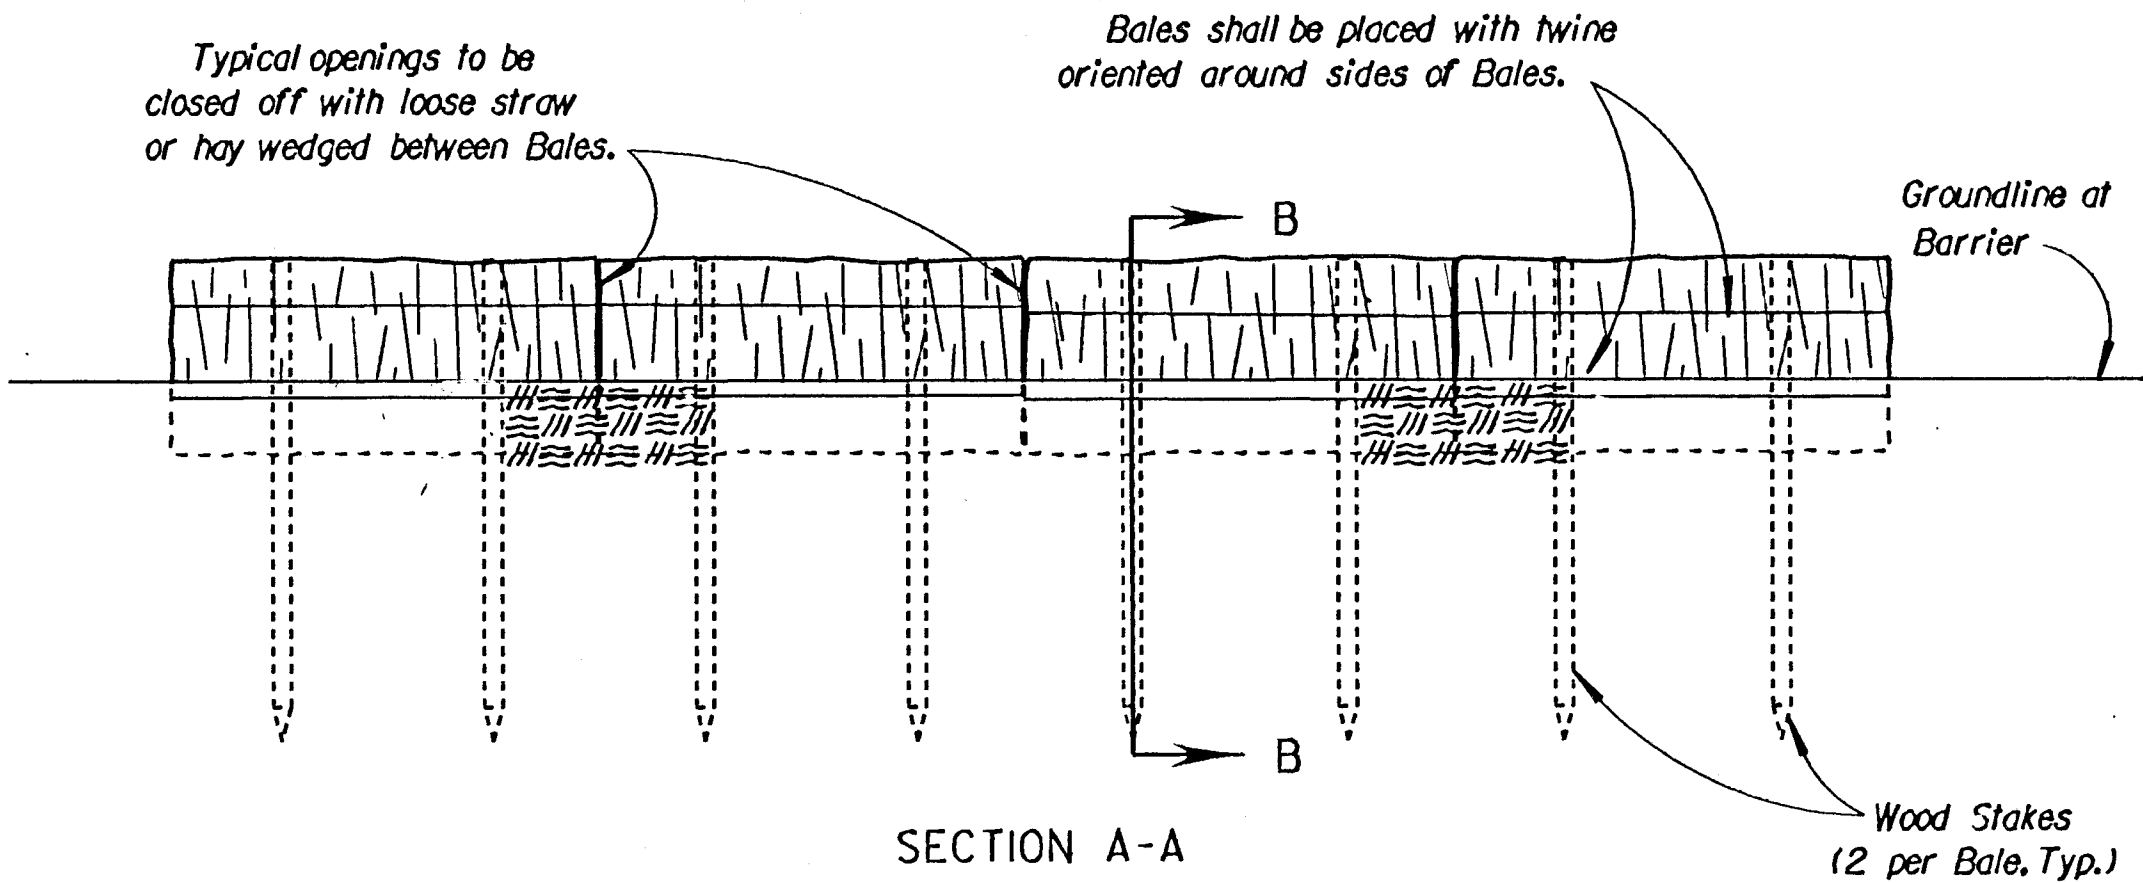


SECTION A-A

STRAW BALE SLOPE BARRIER

NO SCALE

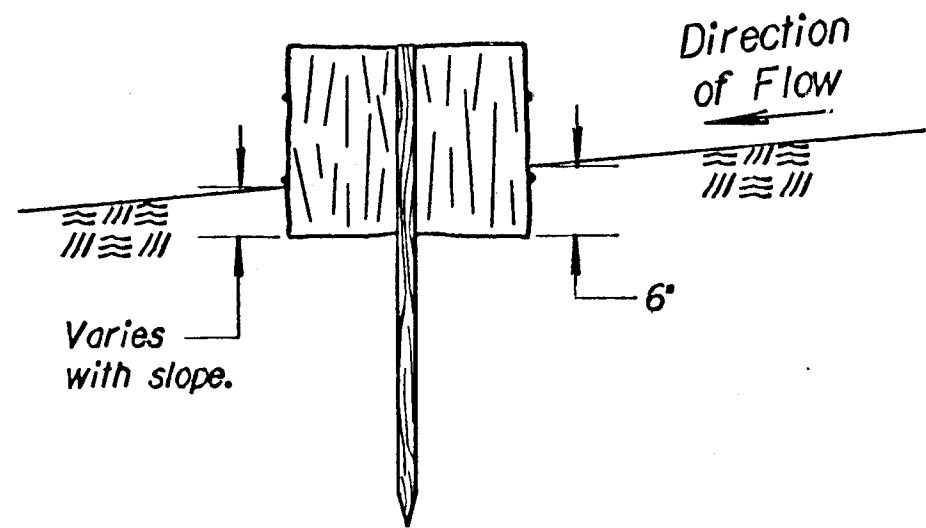


SECTION B-B

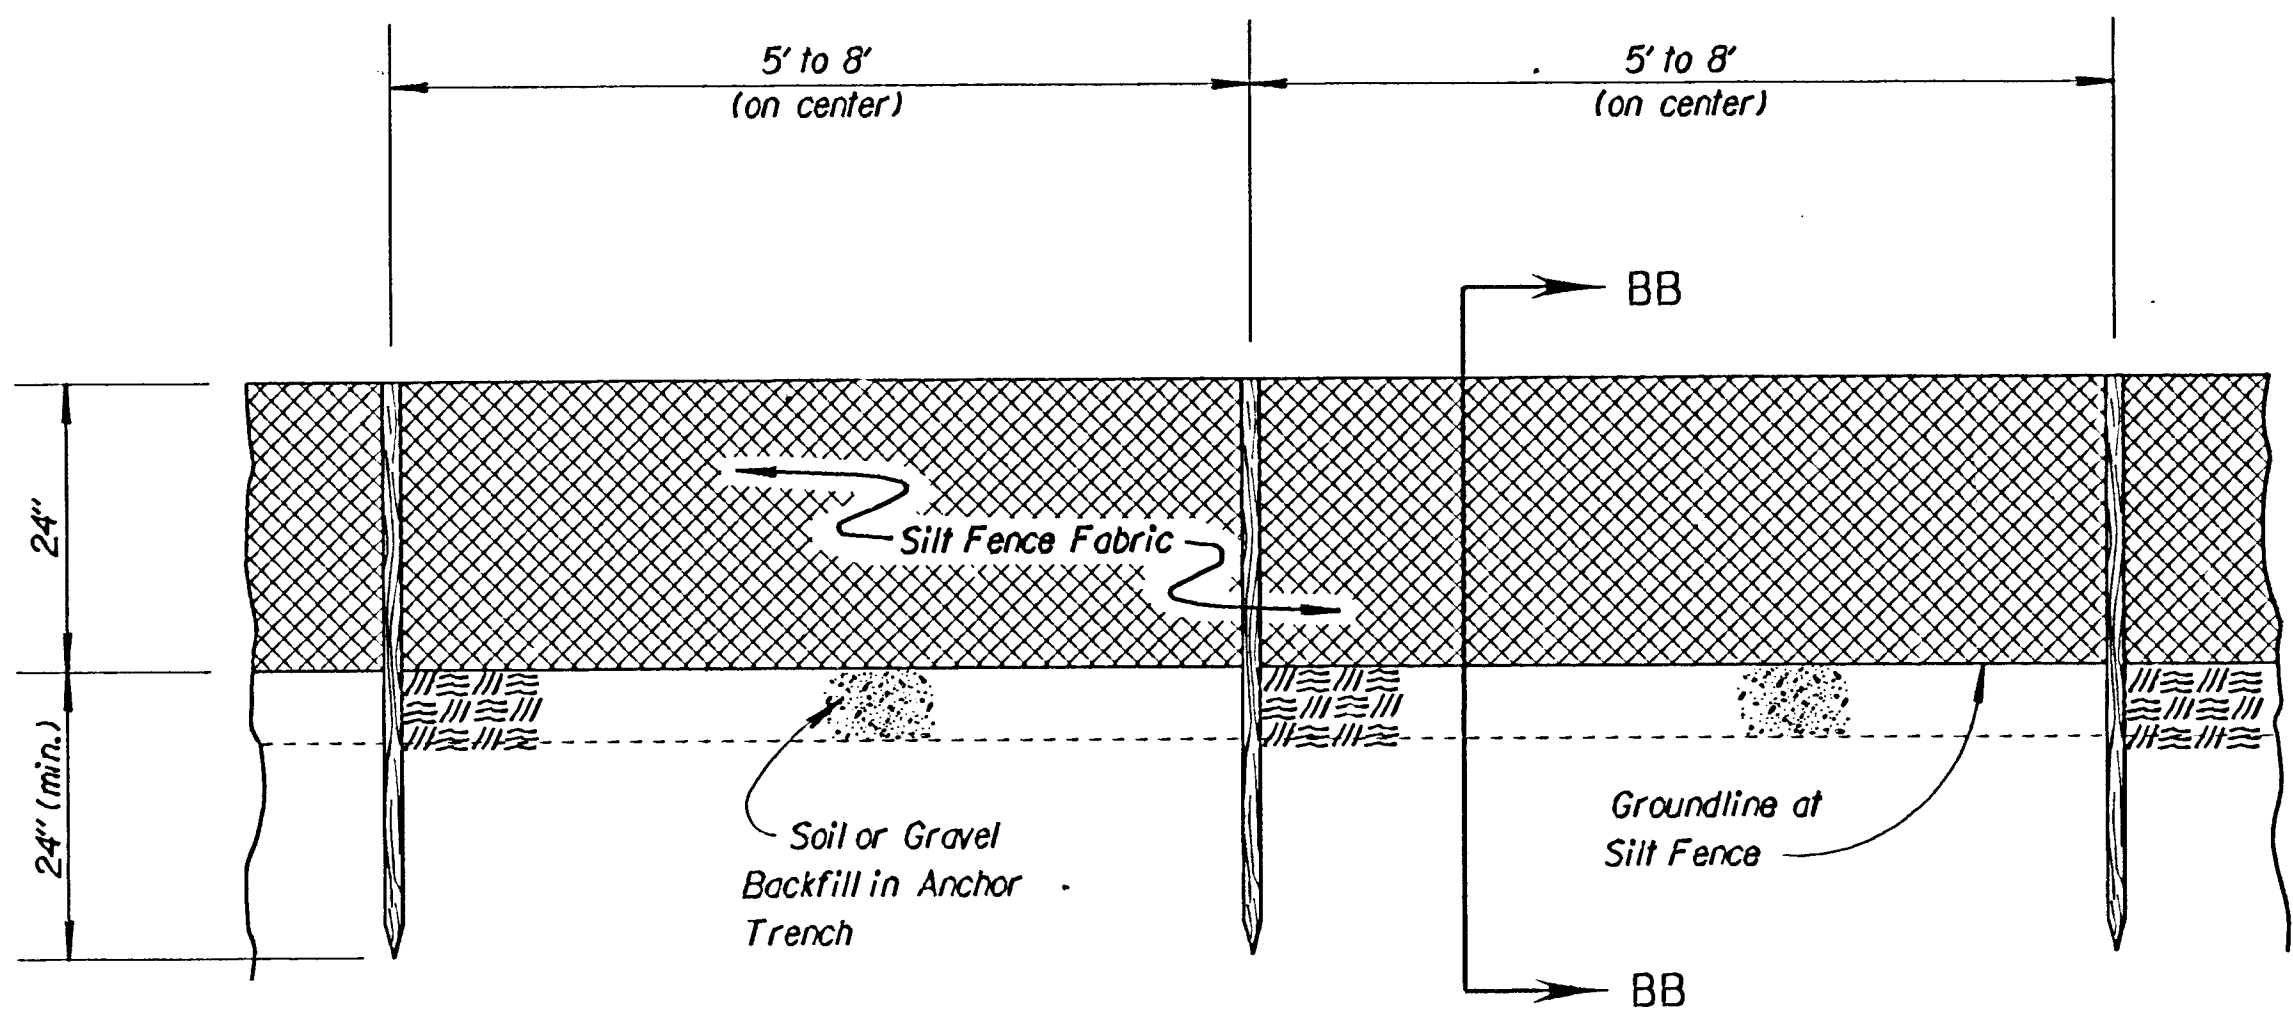

SECTION AA-AA

SILT FENCE SLOPE BARRIER

NO SCALE

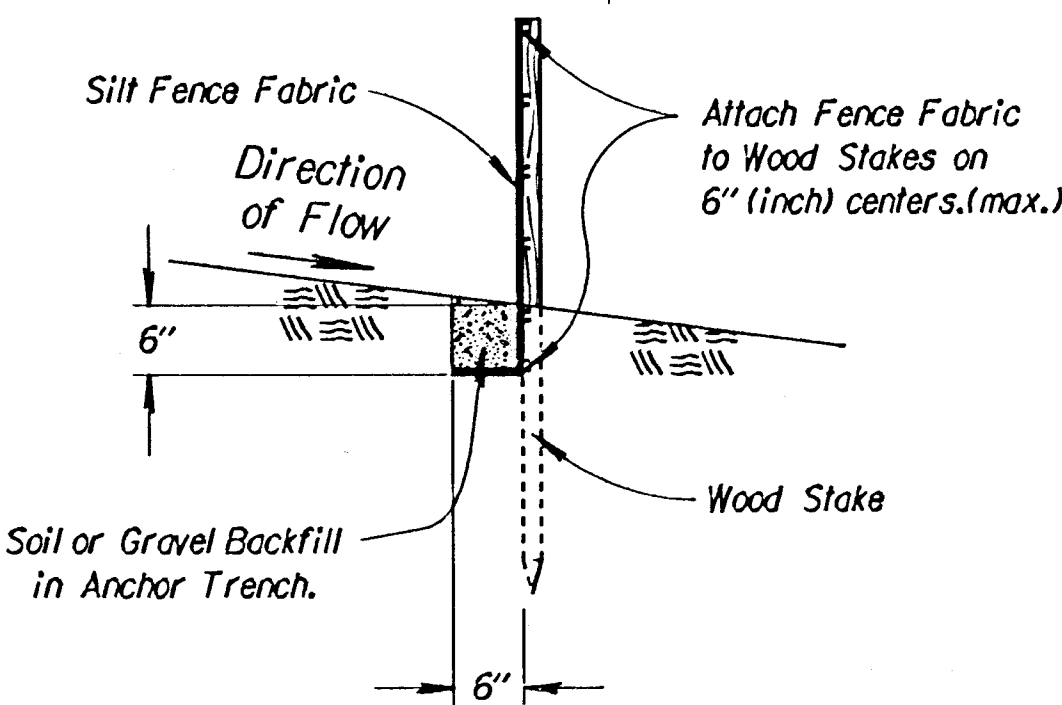

SECTION BB-BB

3					
2					
1	3/13/97	Revised Silt Fence Stake Length	WCL	RDR	
NO.	DATE	REVISIONS	BY	APP'D	
KANSAS DEPARTMENT OF TRANSPORTATION					
TEMPORARY PROJECT WATER POLLUTION CONTROL					
STRAW OR HAY BALE SLOPE BARRIERS					
SILT FENCE SLOPE BARRIERS					
LA852D					
DESIGNED	WCL	DETAILED	WCL	QUANTITIES	WCL
DESIGN CK.	RDR	DETAIL CK.	WCL	QUAN CK.	WCL
APPROVAL	4/02/97	APP'D	Richard D. Ross	TRACED	DEL