



FHWA REGION NO.	STATE	PROJECT NO.	YEAR	SHEET NO.	TOTAL SHEETS
7	KANSAS	87N-0211-01	2000	20	44

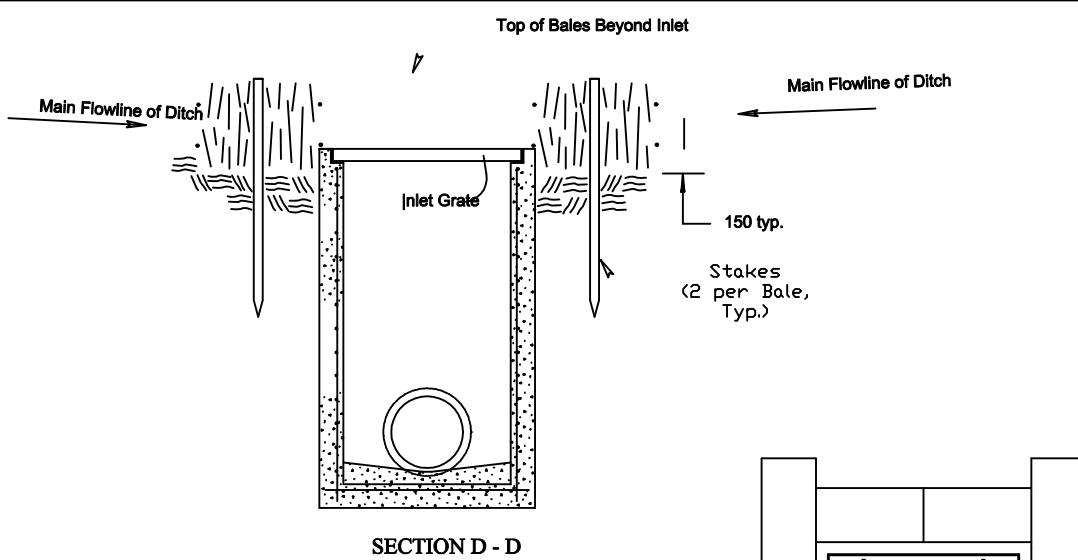


SECTION D - D

- STRAW OR HAY BALES:**
1. Place bales tightly together, with loose straw or hay wedged between bales to close off openings.
 2. Wood stakes shall be 50 mm x 50 mm (nom.) x 1 200 mm (min.) long.
 3. Refer to plans sheets to estimate the number of bales required.
 4. Use only twine to bind bales. The use of wire binding is prohibited because it does not readily biodegrade.

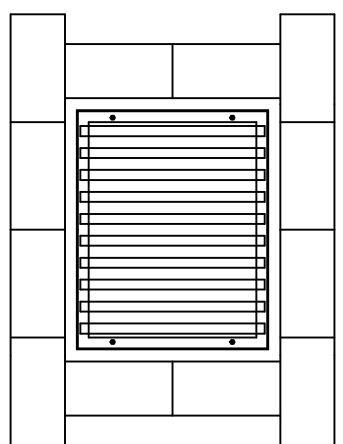


PLAN

NOTE: The use of Straw or Hay Bales, Silt Fence or Triangular Silt Dike for Temporary Inlet Sediment Barrier is at the option of the Contractor.

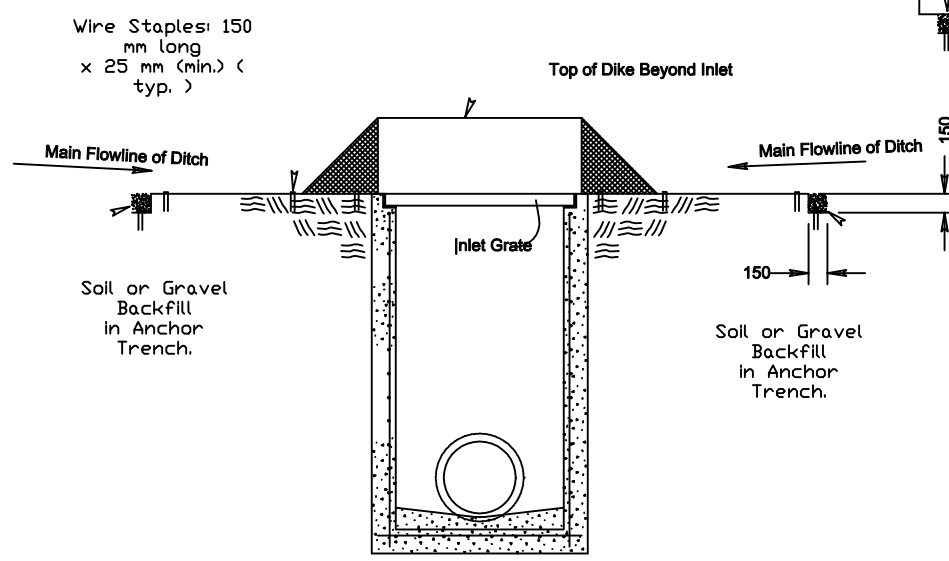


SECTION A - A

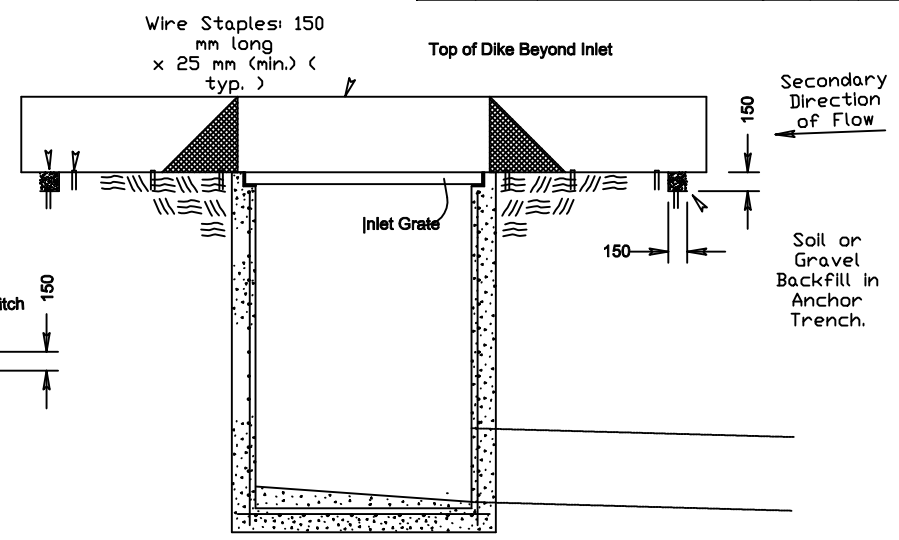

SECTION B - B

TEMPORARY INLET SEDIMENT BARRIER (STRAW OR HAY BALE METHOD)

NO SCALE

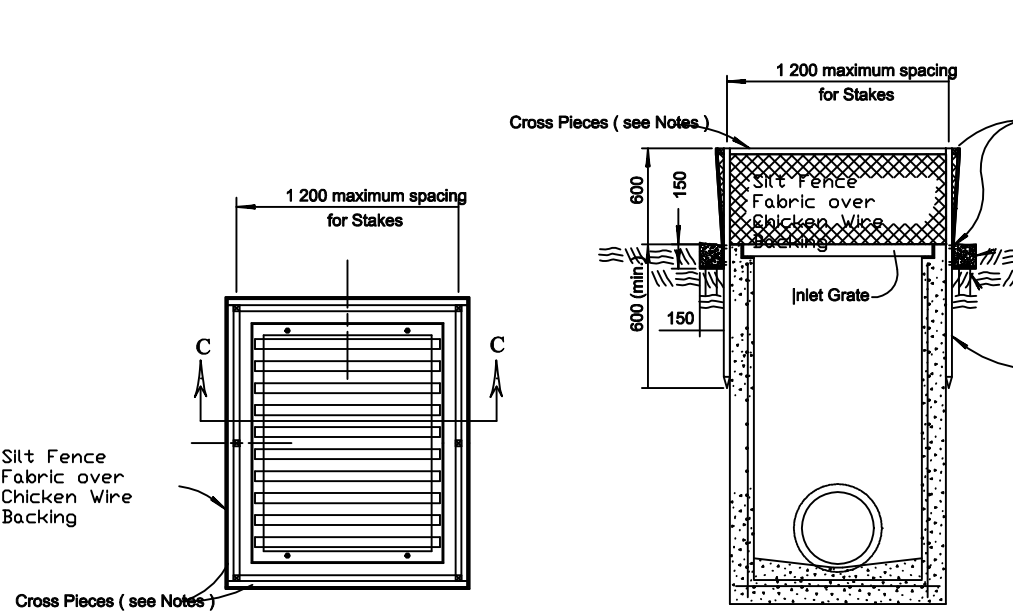

SECTION C - C

Silt Fence Fabric over Chicken Wire Backing


Cross Pieces (see Notes)

PLAN

- SILT FENCE:**
1. Stakes shall be 1 200 mm (min.) long and of one of the following materials:
 - a. Hardwood - 30 mm x 30 mm;
 - b. Southern Pine (No. 2) - 65 mm x 65 mm;
 - c. Steel U, T, L, or C Section - 600 grams per 300 mm; or
 - d. Synthetic - same strength as wood stakes.
 2. Cross Pieces shall be of same material as Stakes.
 3. Attach fence fabric to stakes with staples, wire or nails.
 4. Refer to plan sheets to estimate the length of Silt Fence required.

TEMPORARY INLET SEDIMENT BARRIER (SILT FENCE METHOD)

NO SCALE

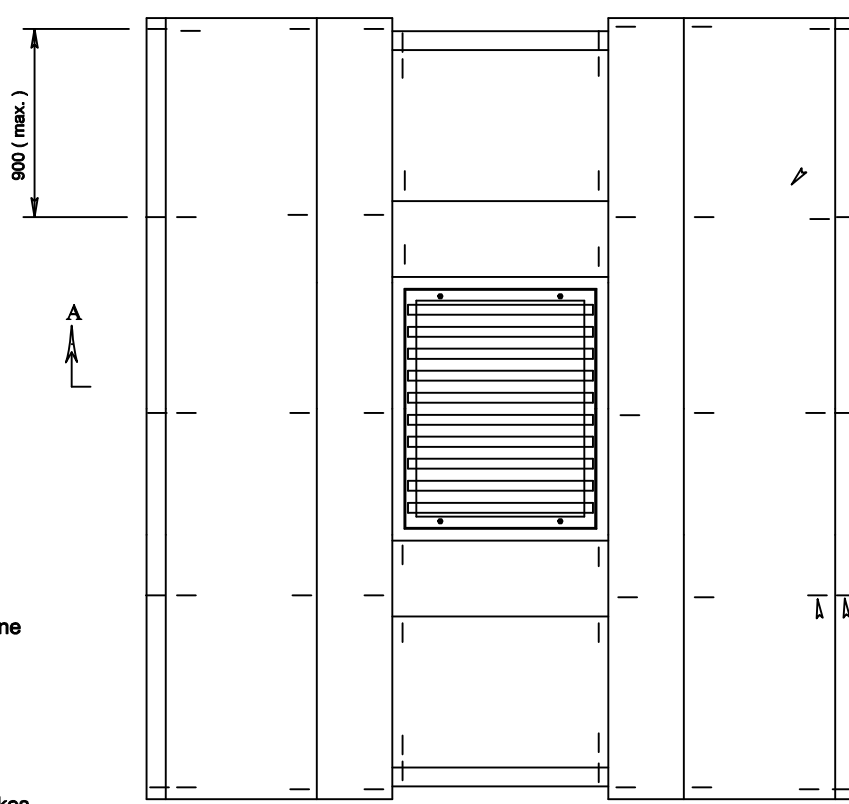

PLAN

TEMPORARY INLET SEDIMENT BARRIER (TRIANGULAR SILT DIKE METHOD)

NO SCALE

3					
2					
1	5/1/099	Revised Standard		WCL	RDR
NO.	DATE	REVISIONS		BY	APPD
KANSAS DEPARTMENT OF TRANSPORTATION POLLUTION CONTROL TEMP. INLET SEDIMENT BARRIER (SILT FENCE) TEMP. INLET SEDIMENT BARRIER (BALES) TEMP. INLET SEDIMENT BARRIER (T.S.D.)					
LA852C SI					
DESIGNED	WCL	5/20/99	APPD	Richard D. RDR	
DESIGN CK.	RDR	DETAIL CK.	RDR	QUAN. CK.	WCL
				TRACE CK.	RDR