



FHWA REGION NO.	STATE	PROJECT NO.	YEAR	SHEET NO.	TOTAL SHEETS
7	KANSAS	87N-0116-01	1999	54	110


- NOTES:
- 1) Temporary Slope Drain and Temporary Berm may be used on either project foreslopes or project backslopes.
 - 2) Discharge of Slope Drains shall be into stabilized ditch or area, or into Sediment Basin.
 - 3) Pipe shall be secured in place as approved by Engineer.

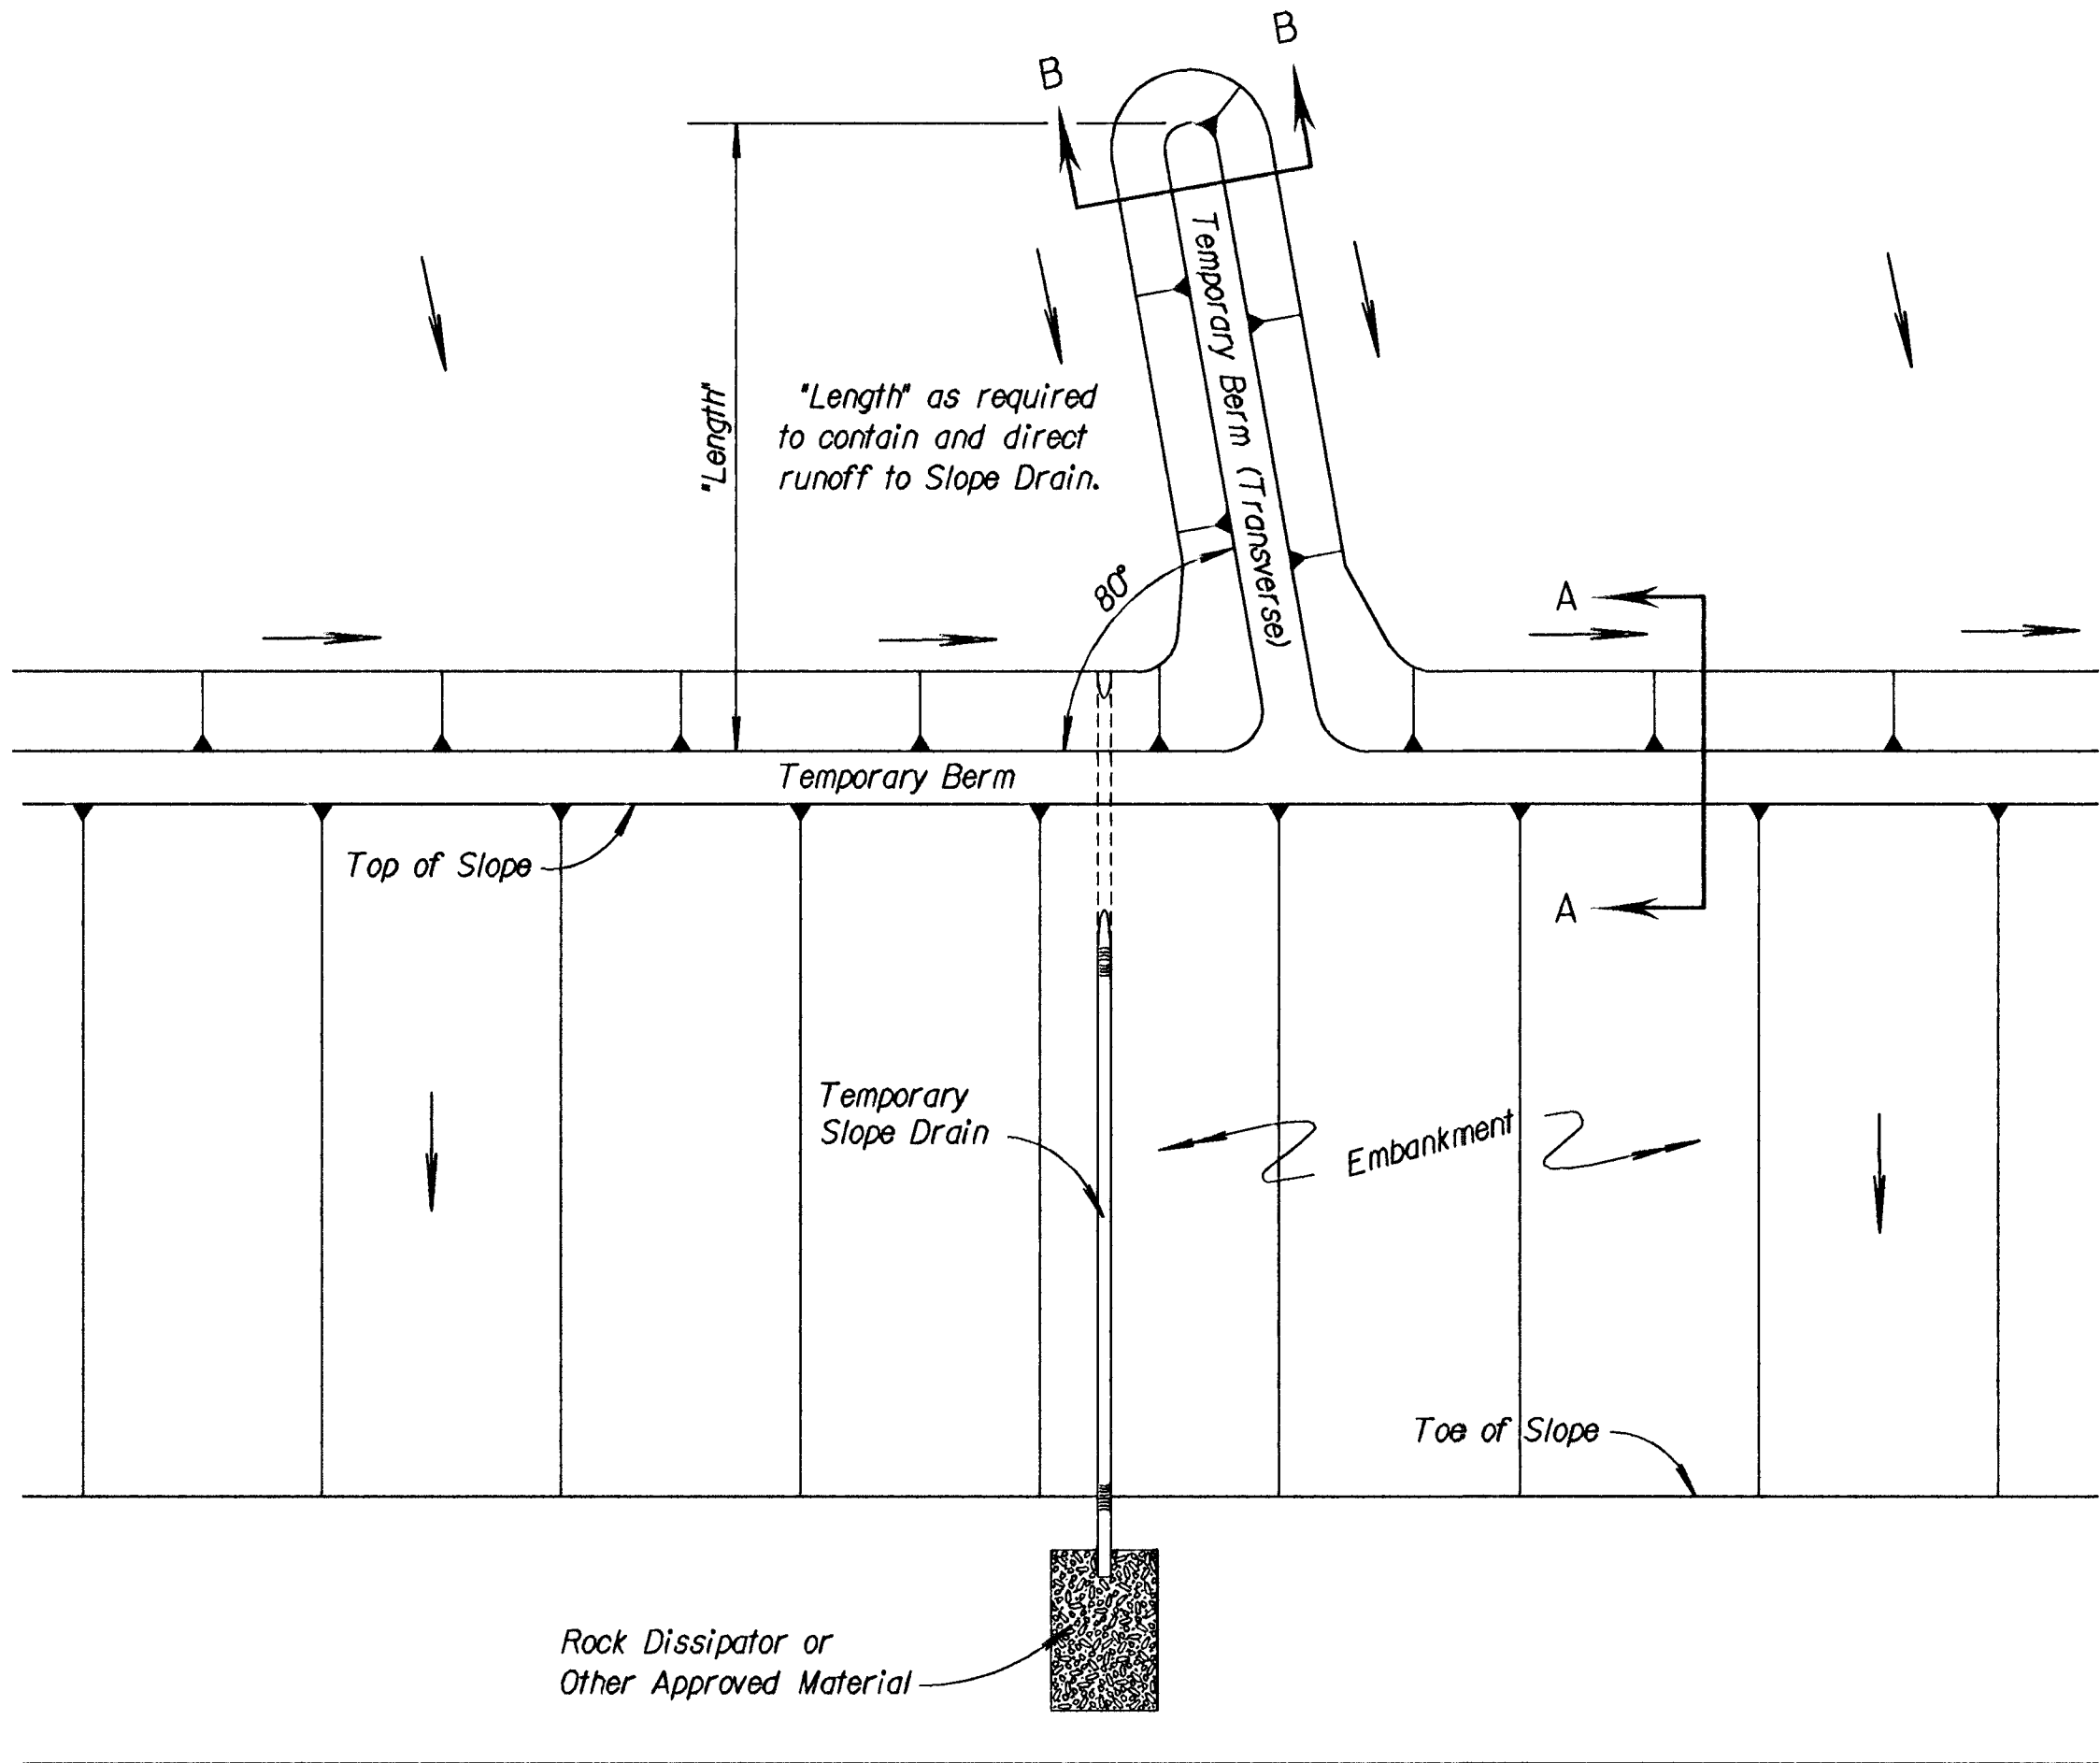


TYPICAL PLAN VIEW OF
TEMPORARY BERM AND
TEMPORARY SLOPE DRAIN
NO SCALE

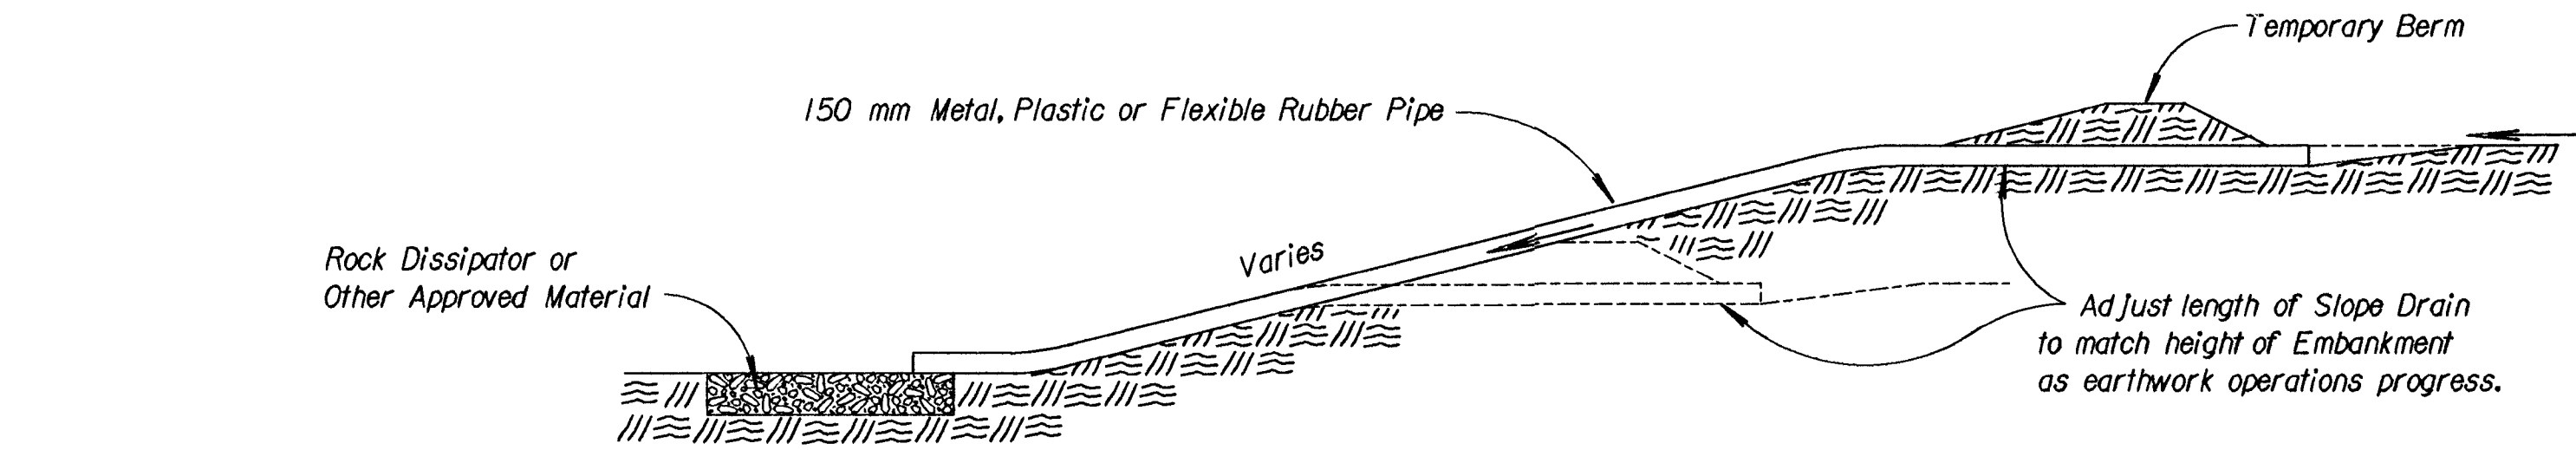

TYPICAL PROFILE OF TEMPORARY SLOPE DRAIN
NO SCALE

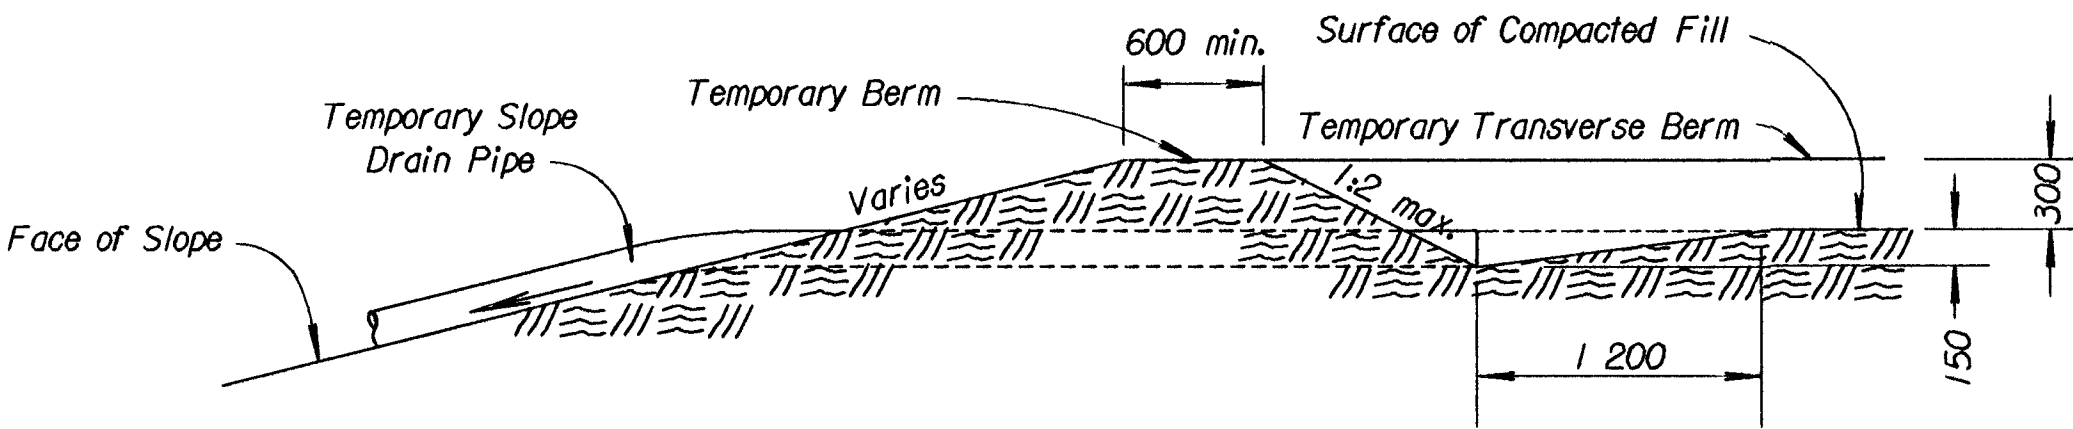


SECTION A-A
NO SCALE

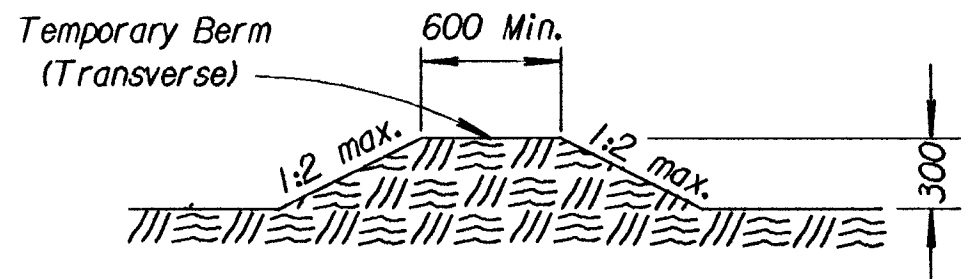


SECTION B-B
NO SCALE


TYPICAL PROFILE OF TEMPORARY BERM
NO SCALE

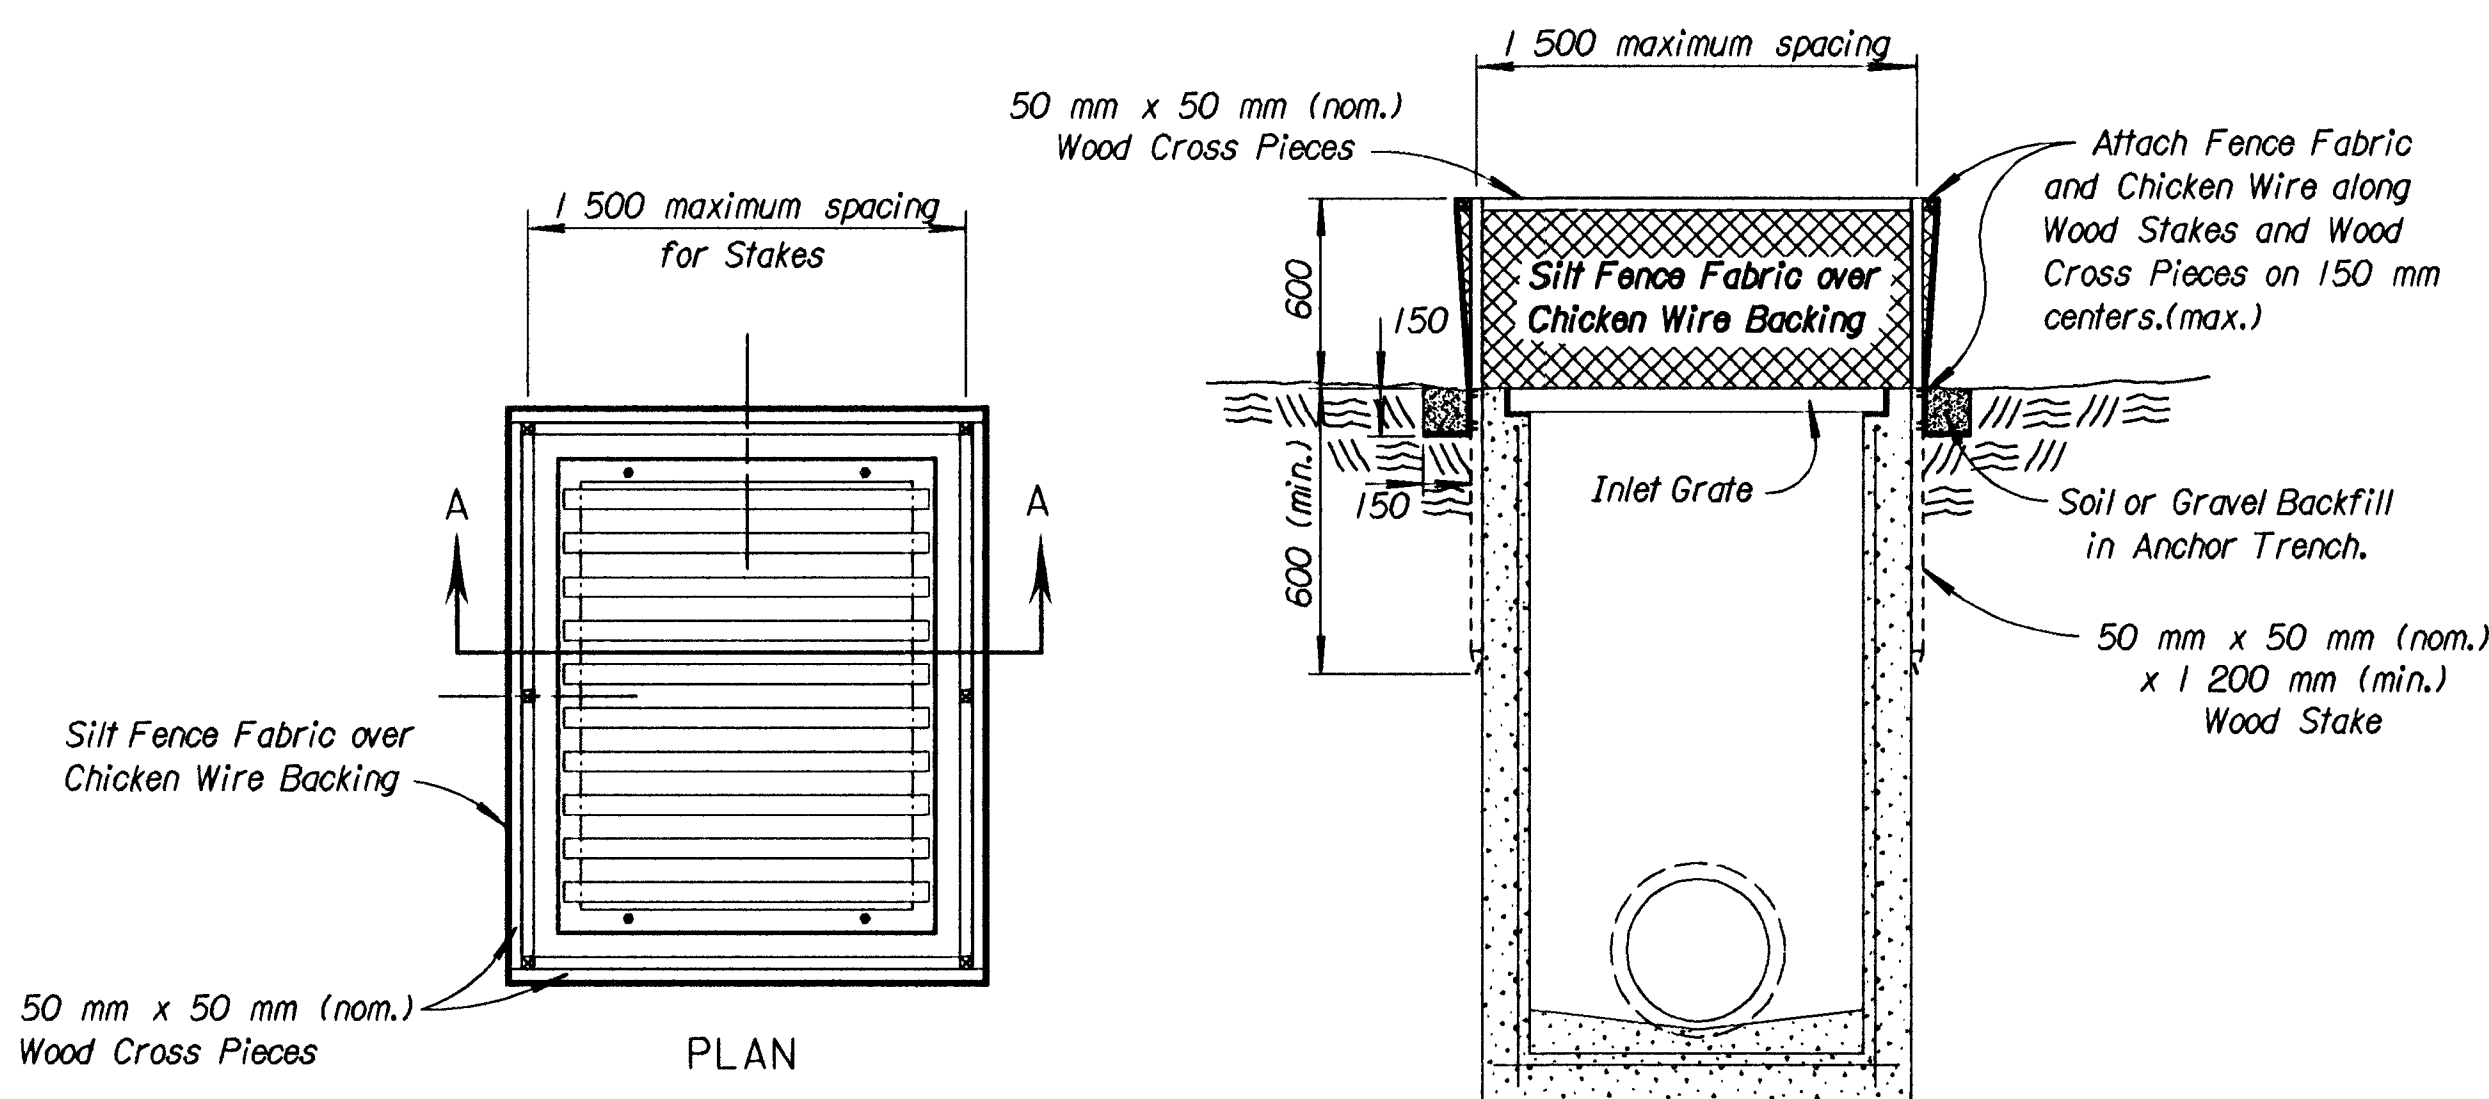

TEMPORARY INLET SEDIMENT BARRIER
NO SCALE

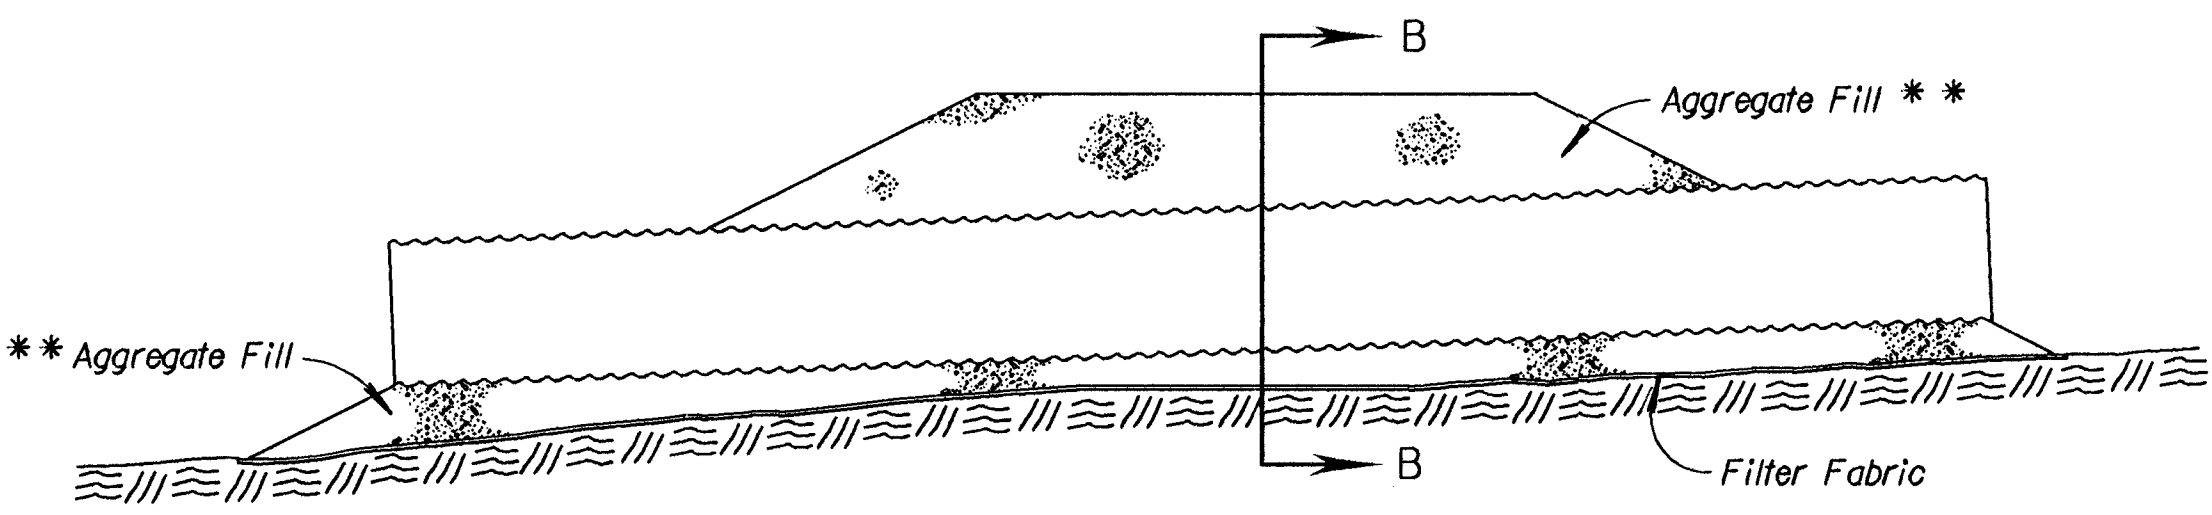

SECTION A-A

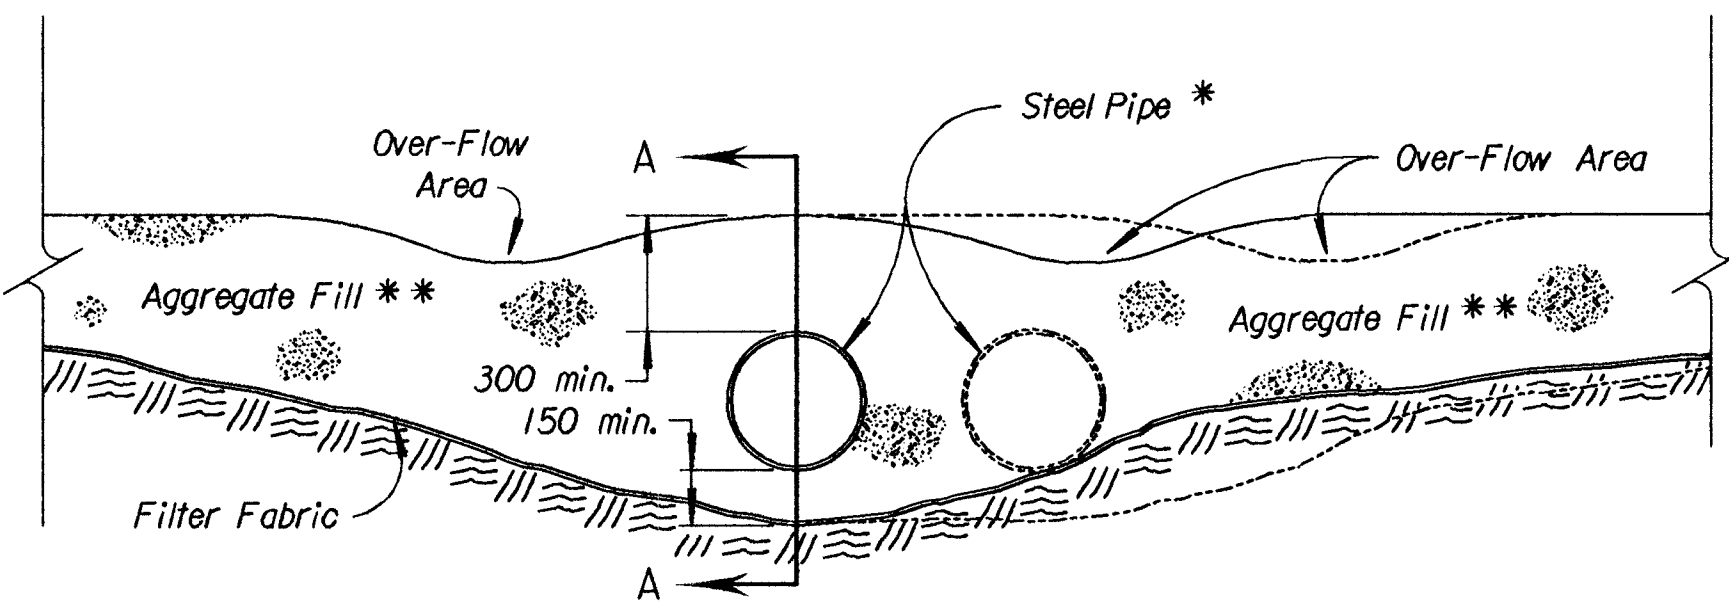

SECTION B-B

TEMPORARY STREAM CROSSING
NO SCALE

- * NOTE:
Quantity, length and diameter of steel pipe to be determined by design flow calculations.
- ** NOTE:
Alternate fill material may be used upon the approval of the Bureau of Construction and Maintenance, Field Construction Engineer.

3	3/17/97	Revised Temp. Stream Crossing	WCL	RDR
2	7-5-95	Convert to SI	WCL	RDR
1			BY	APP'D
NO.	DATE	REVISIONS		
KANSAS DEPARTMENT OF TRANSPORTATION				
TEMPORARY PROJECT WATER POLLUTION CONTROL				
TEMPORARY SLOPE DRAIN; STREAM CROSSING; INLET SEDIMENT BARRIER				
LA852C SI				
DESIGNED	WCL	DETAIL	WCL	QUANTITIES
DESIGN CK.	RDR	DETAIL CK.	WCL	QUANT CK.
APP'D	Richard D. Ross	TRACED	OAK	WCL