
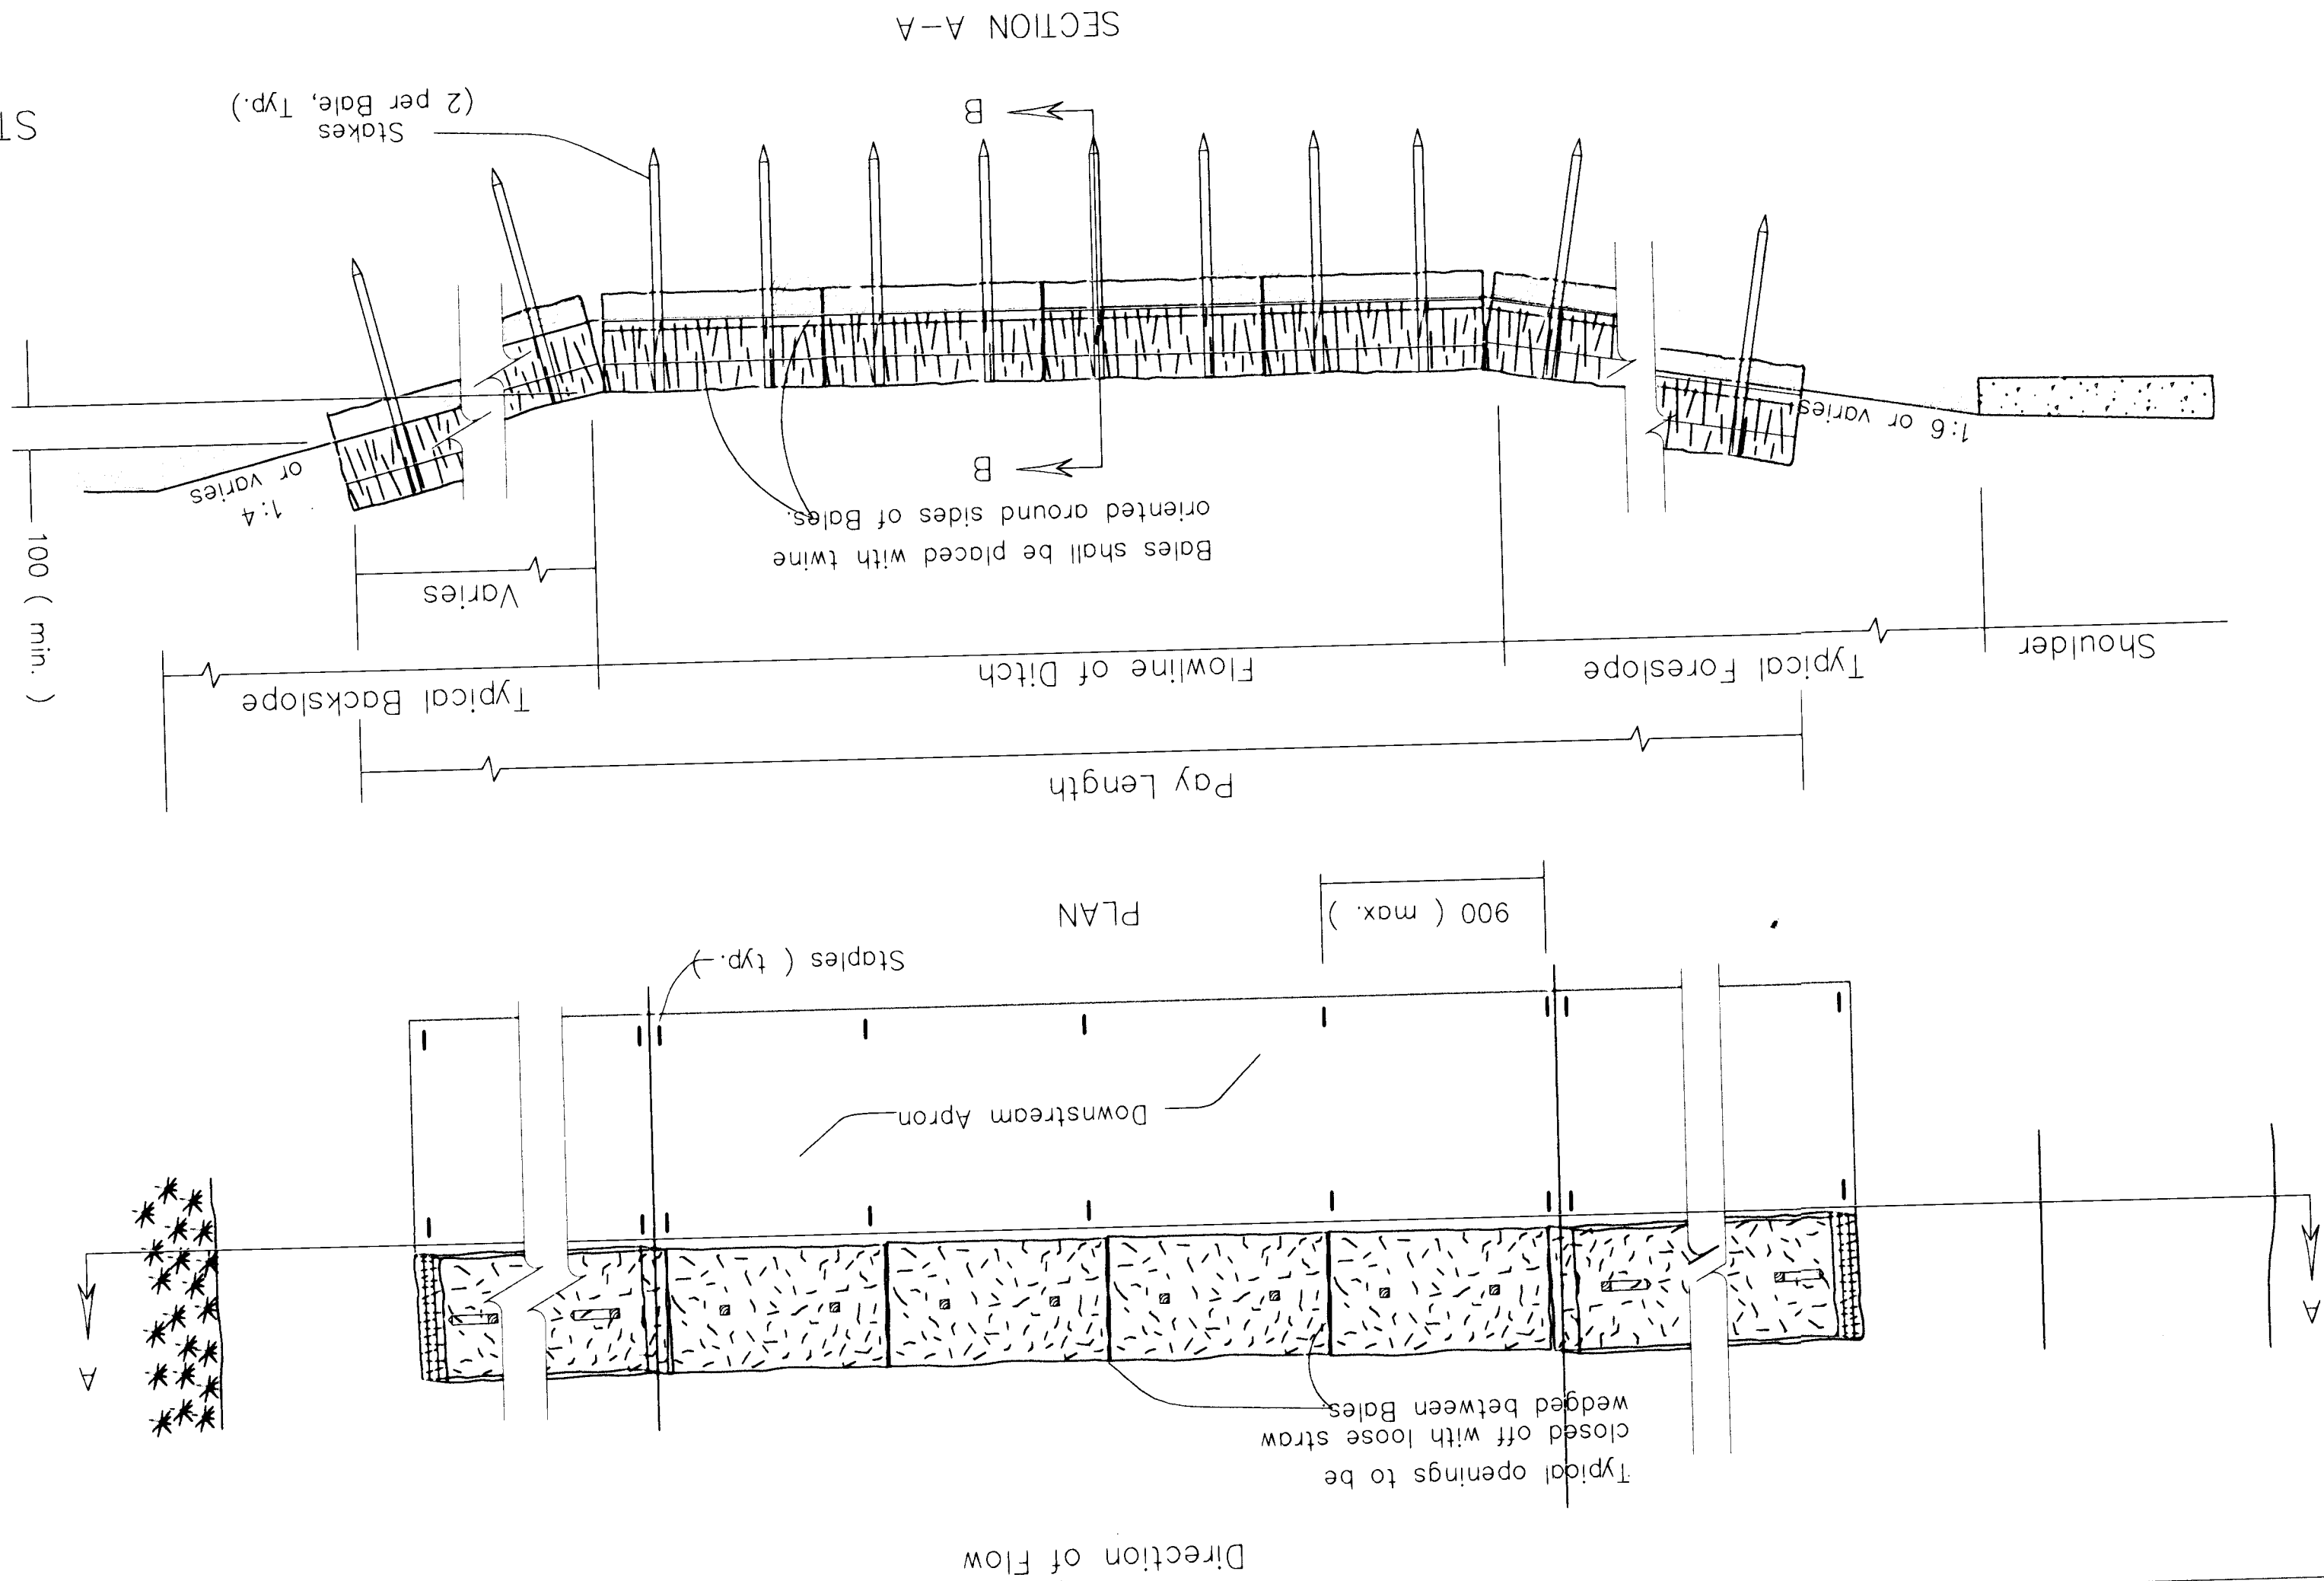


TEMPORARY DITCH CHECK SPACING	
DITCH & SLOPE (%)	SPACING INTERVAL (METERS)
1.0	61
2.0	30
3.0	20
4.0	15
5.0	12
6.0	10


NOTE: Use this spacing for all except Rock Use Ditch Checks.

- GENERAL NOTES:
- 1) The choice of ditch check methods is at the option of the Contractor.
- 2) Use only rock checks in situations where the ditch slope exceeds 6 percent.
- 3) Ditch checks damaged by Contractor's negligence, including improper maintenance or lack of maintenance, shall be repaired by Contractor at no extra cost to KDOT.

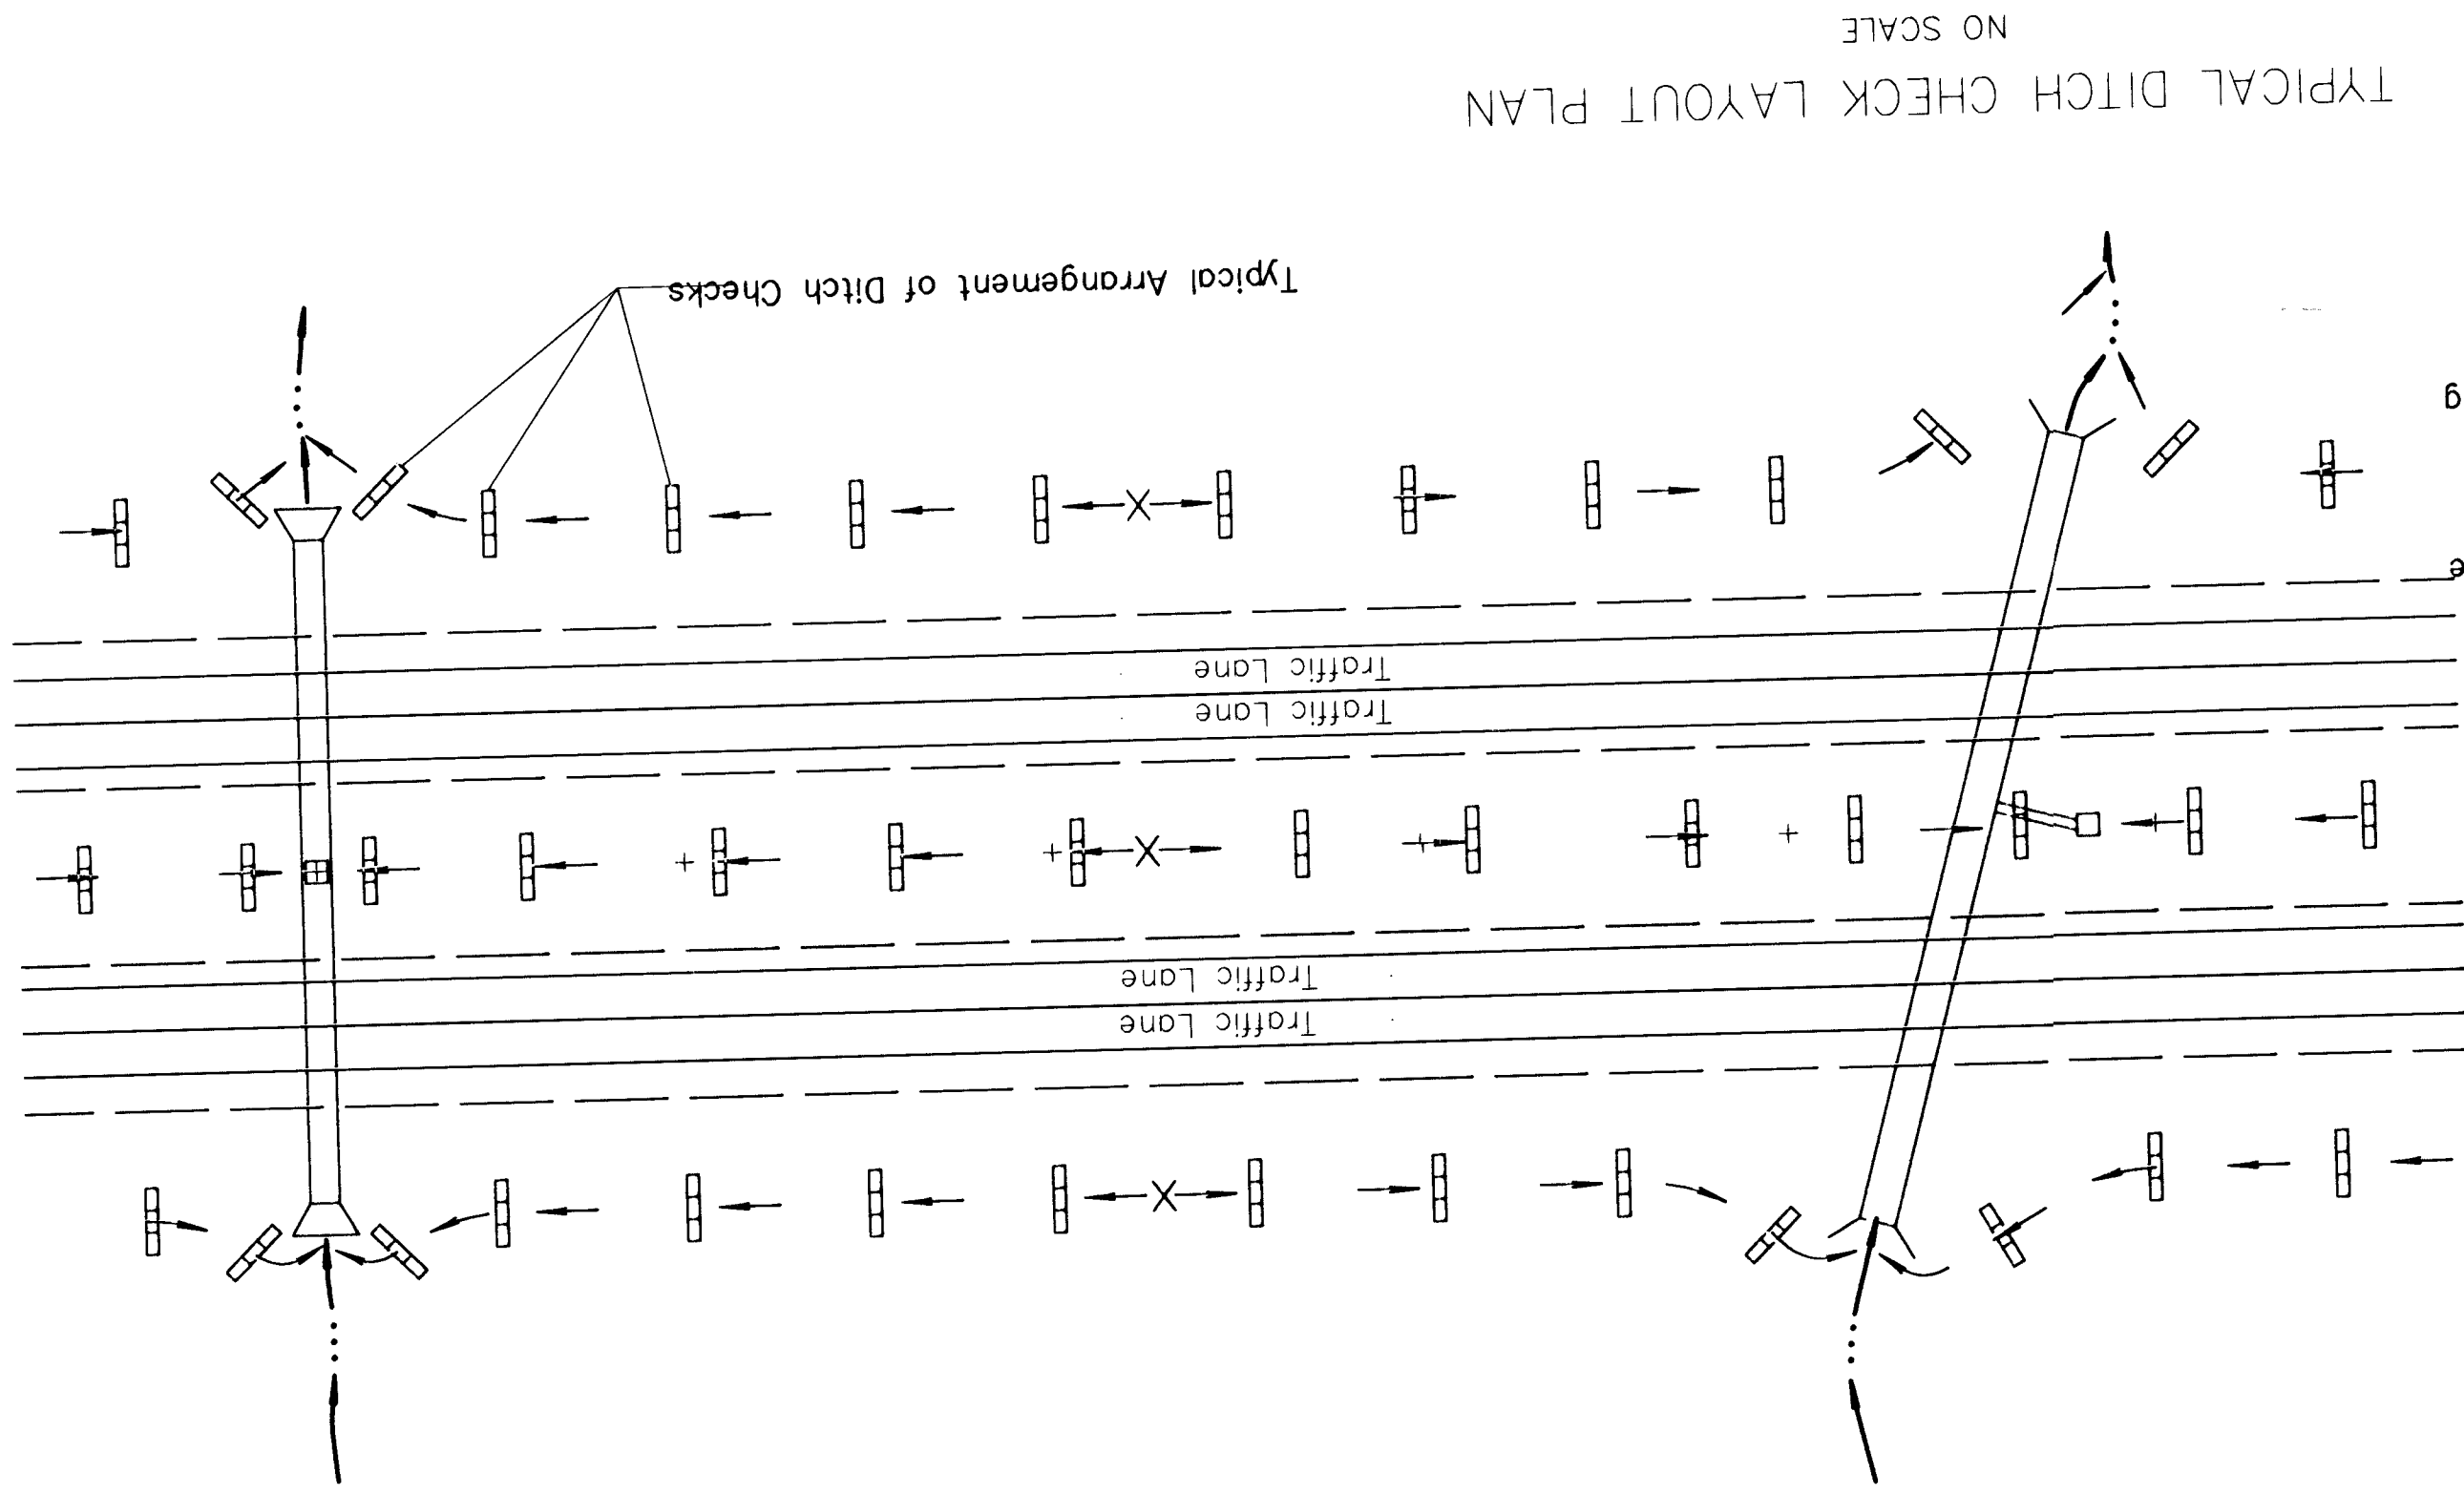

STRAW OR HAY BALE DITCH CHECK

- STRAW OR HAY BALE NOTES:**
1. Place bales tightly together, with loose straw or hay wedged between bales to close off openings.
 2. Wood stakes shall be 50 mm x 50 mm (nom.) x 1 200 mm (min.) long.
 3. Use as many bales as necessary to completely block the ditch and to prevent water from flowing around the ends of the ditch check.
 4. Use only twine to bind bales. The use of wire binding is prohibited because it does not readily biodegrade.
 5. Use silt fence material as the downstream apron to prevent scour below the ditch check.
 6. Wire staples shall be 150 mm long by 25 mm wide, minimum.

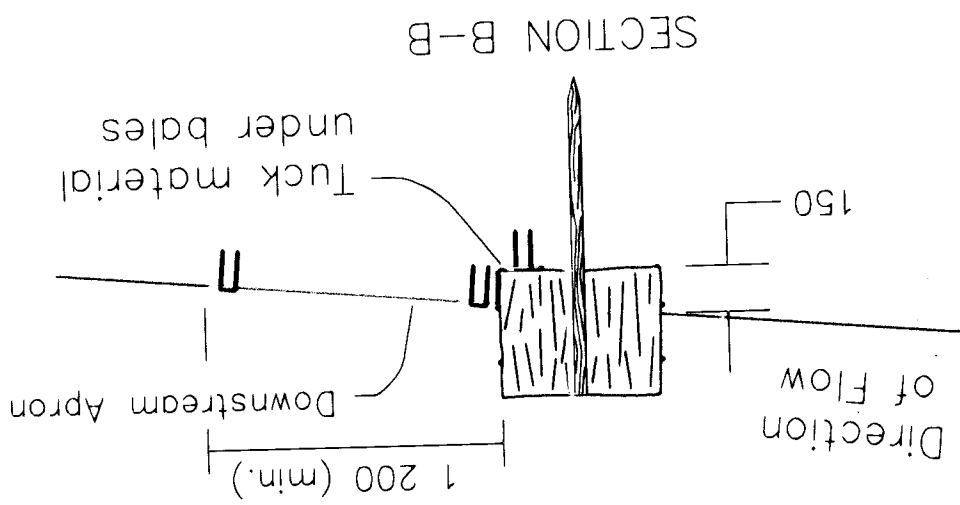

7	KANSAS	87TE-0115-01	1997	48	49
FHWA REGION NO.	STATE	PROJECT NO.	YEAR	SHEET NO.	TOTAL SHEETS

NO.		REVISIONS	
1	5/10/99	Revised Standard	
2			
3			
4			
5			

KANSAS DEPARTMENT OF TRANSPORTATION

TEMPORARY EROSION AND
POLLUTION CONTROL
STRAW OR HAY BALE DITCH CHECKS

6/20/99 APP'D _____
QUANTITIES WCL _____
RDR QUAN. CK. _____

RICHARD D. ROSS
TRACE CK. _____
WCL TRACED _____
RDR _____

F.H.W.A. APPROVAL SLA852E SI

DESIGNED WCL DETAILLED RDR
DESIGN CK. RDR