



STATE	PROJECT NO.	YEAR	SHEET NO.	TOTAL SHEETS
KANSAS	472-85395	2019	32	45

### PERFORATED SQUARE STEEL TUBE (P.S.S.T.) POST SETUP

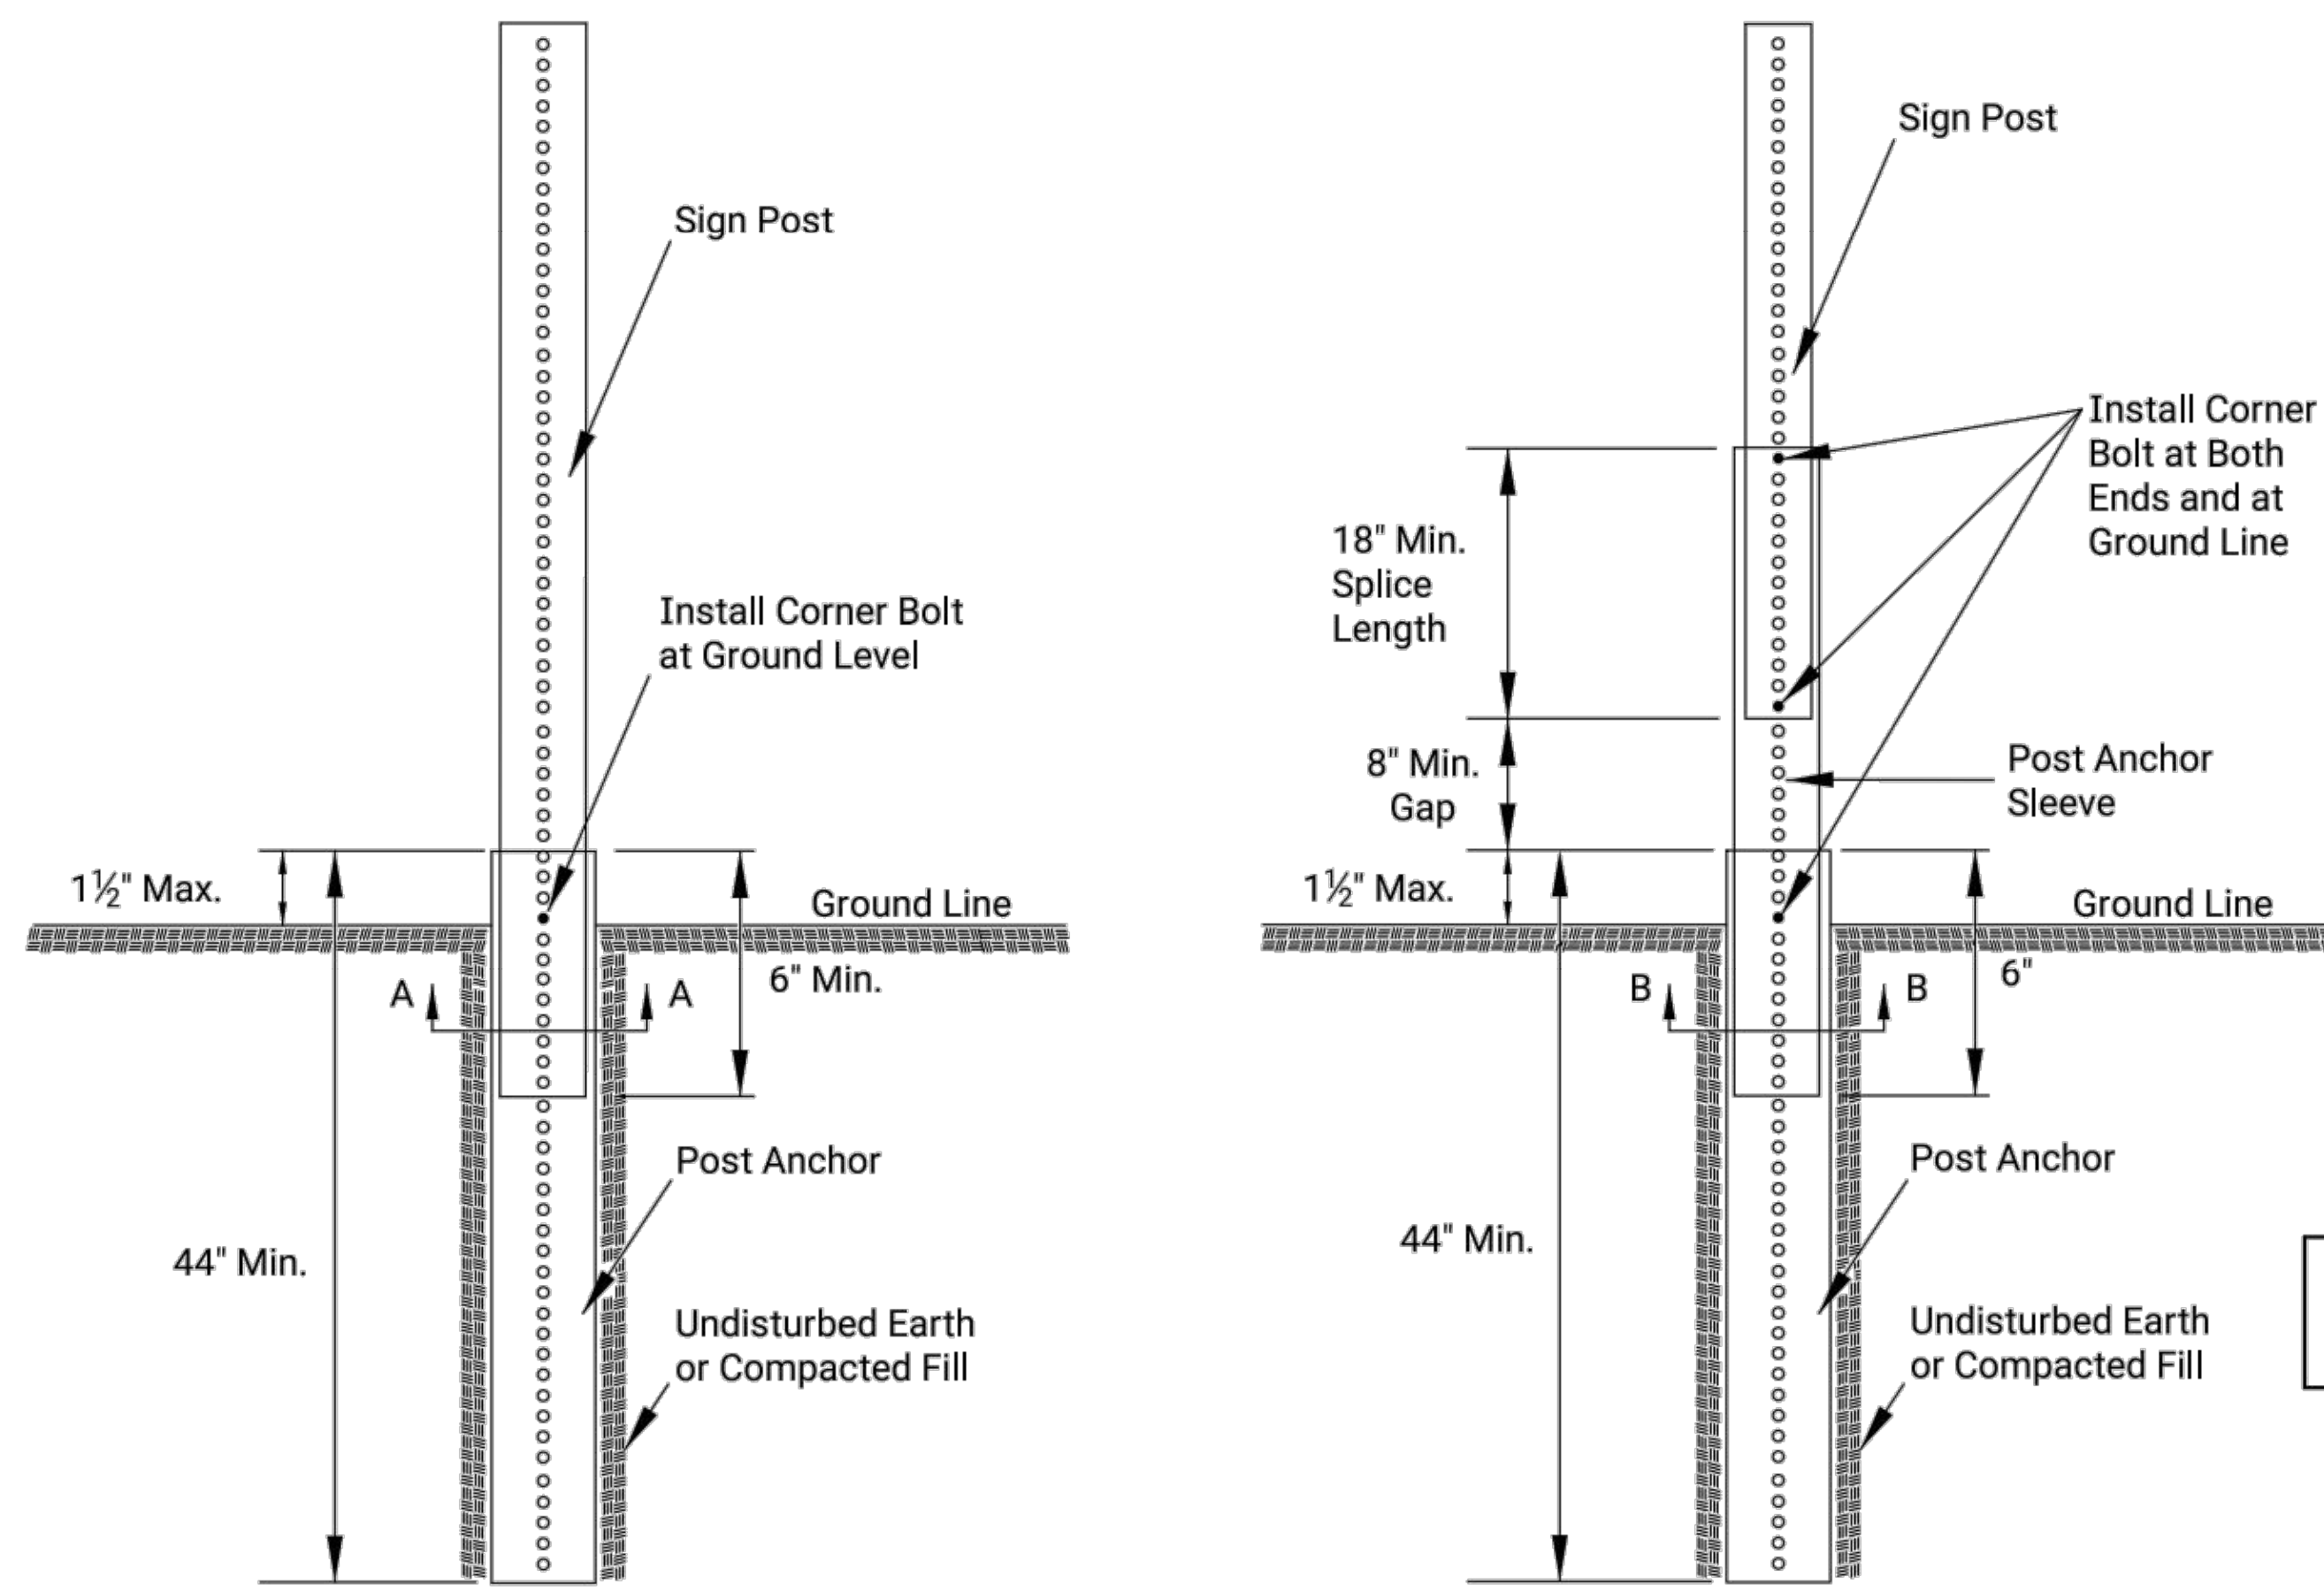


P.S.S.T. Detail

Telescoping P.S.S.T. Detail

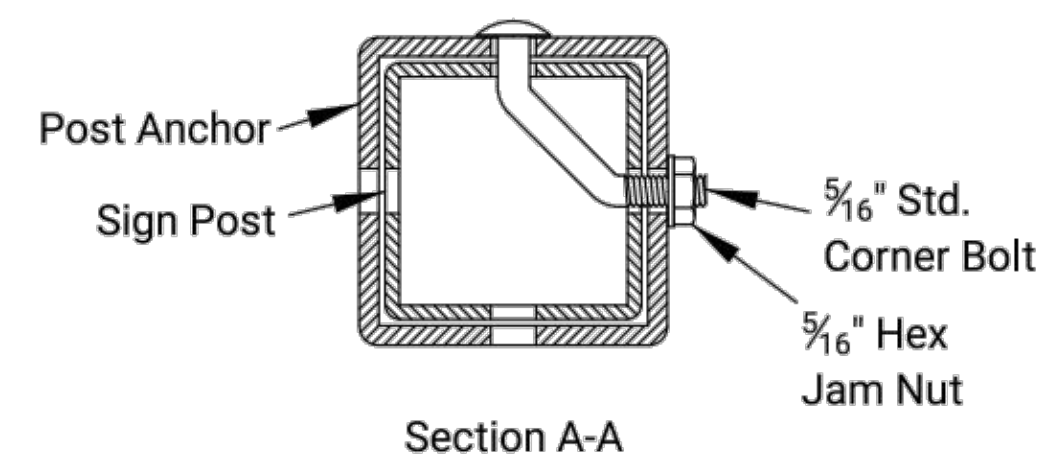

Section A-A

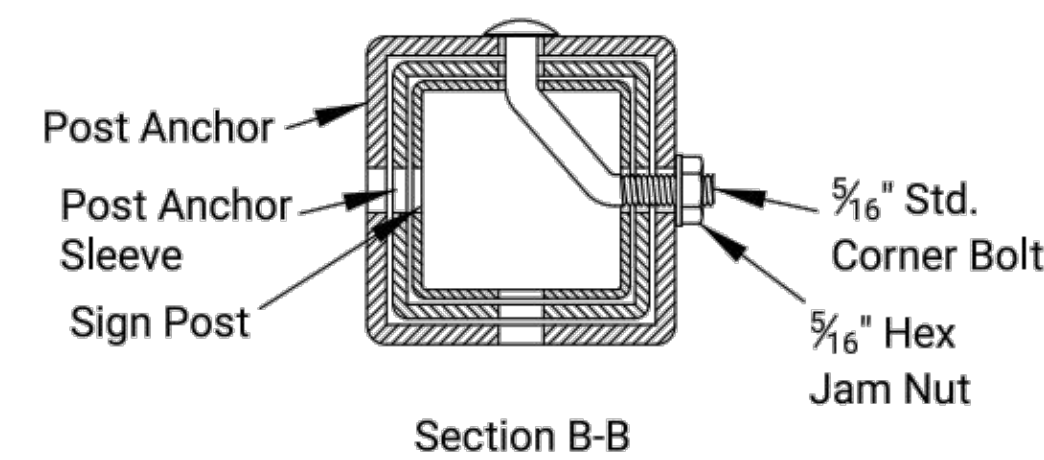


Section B-B

Details for 2", 2 1/4", or 2 1/2" sign posts


Place bolts in the same corner along each sign post.

### WOOD POST SETUP

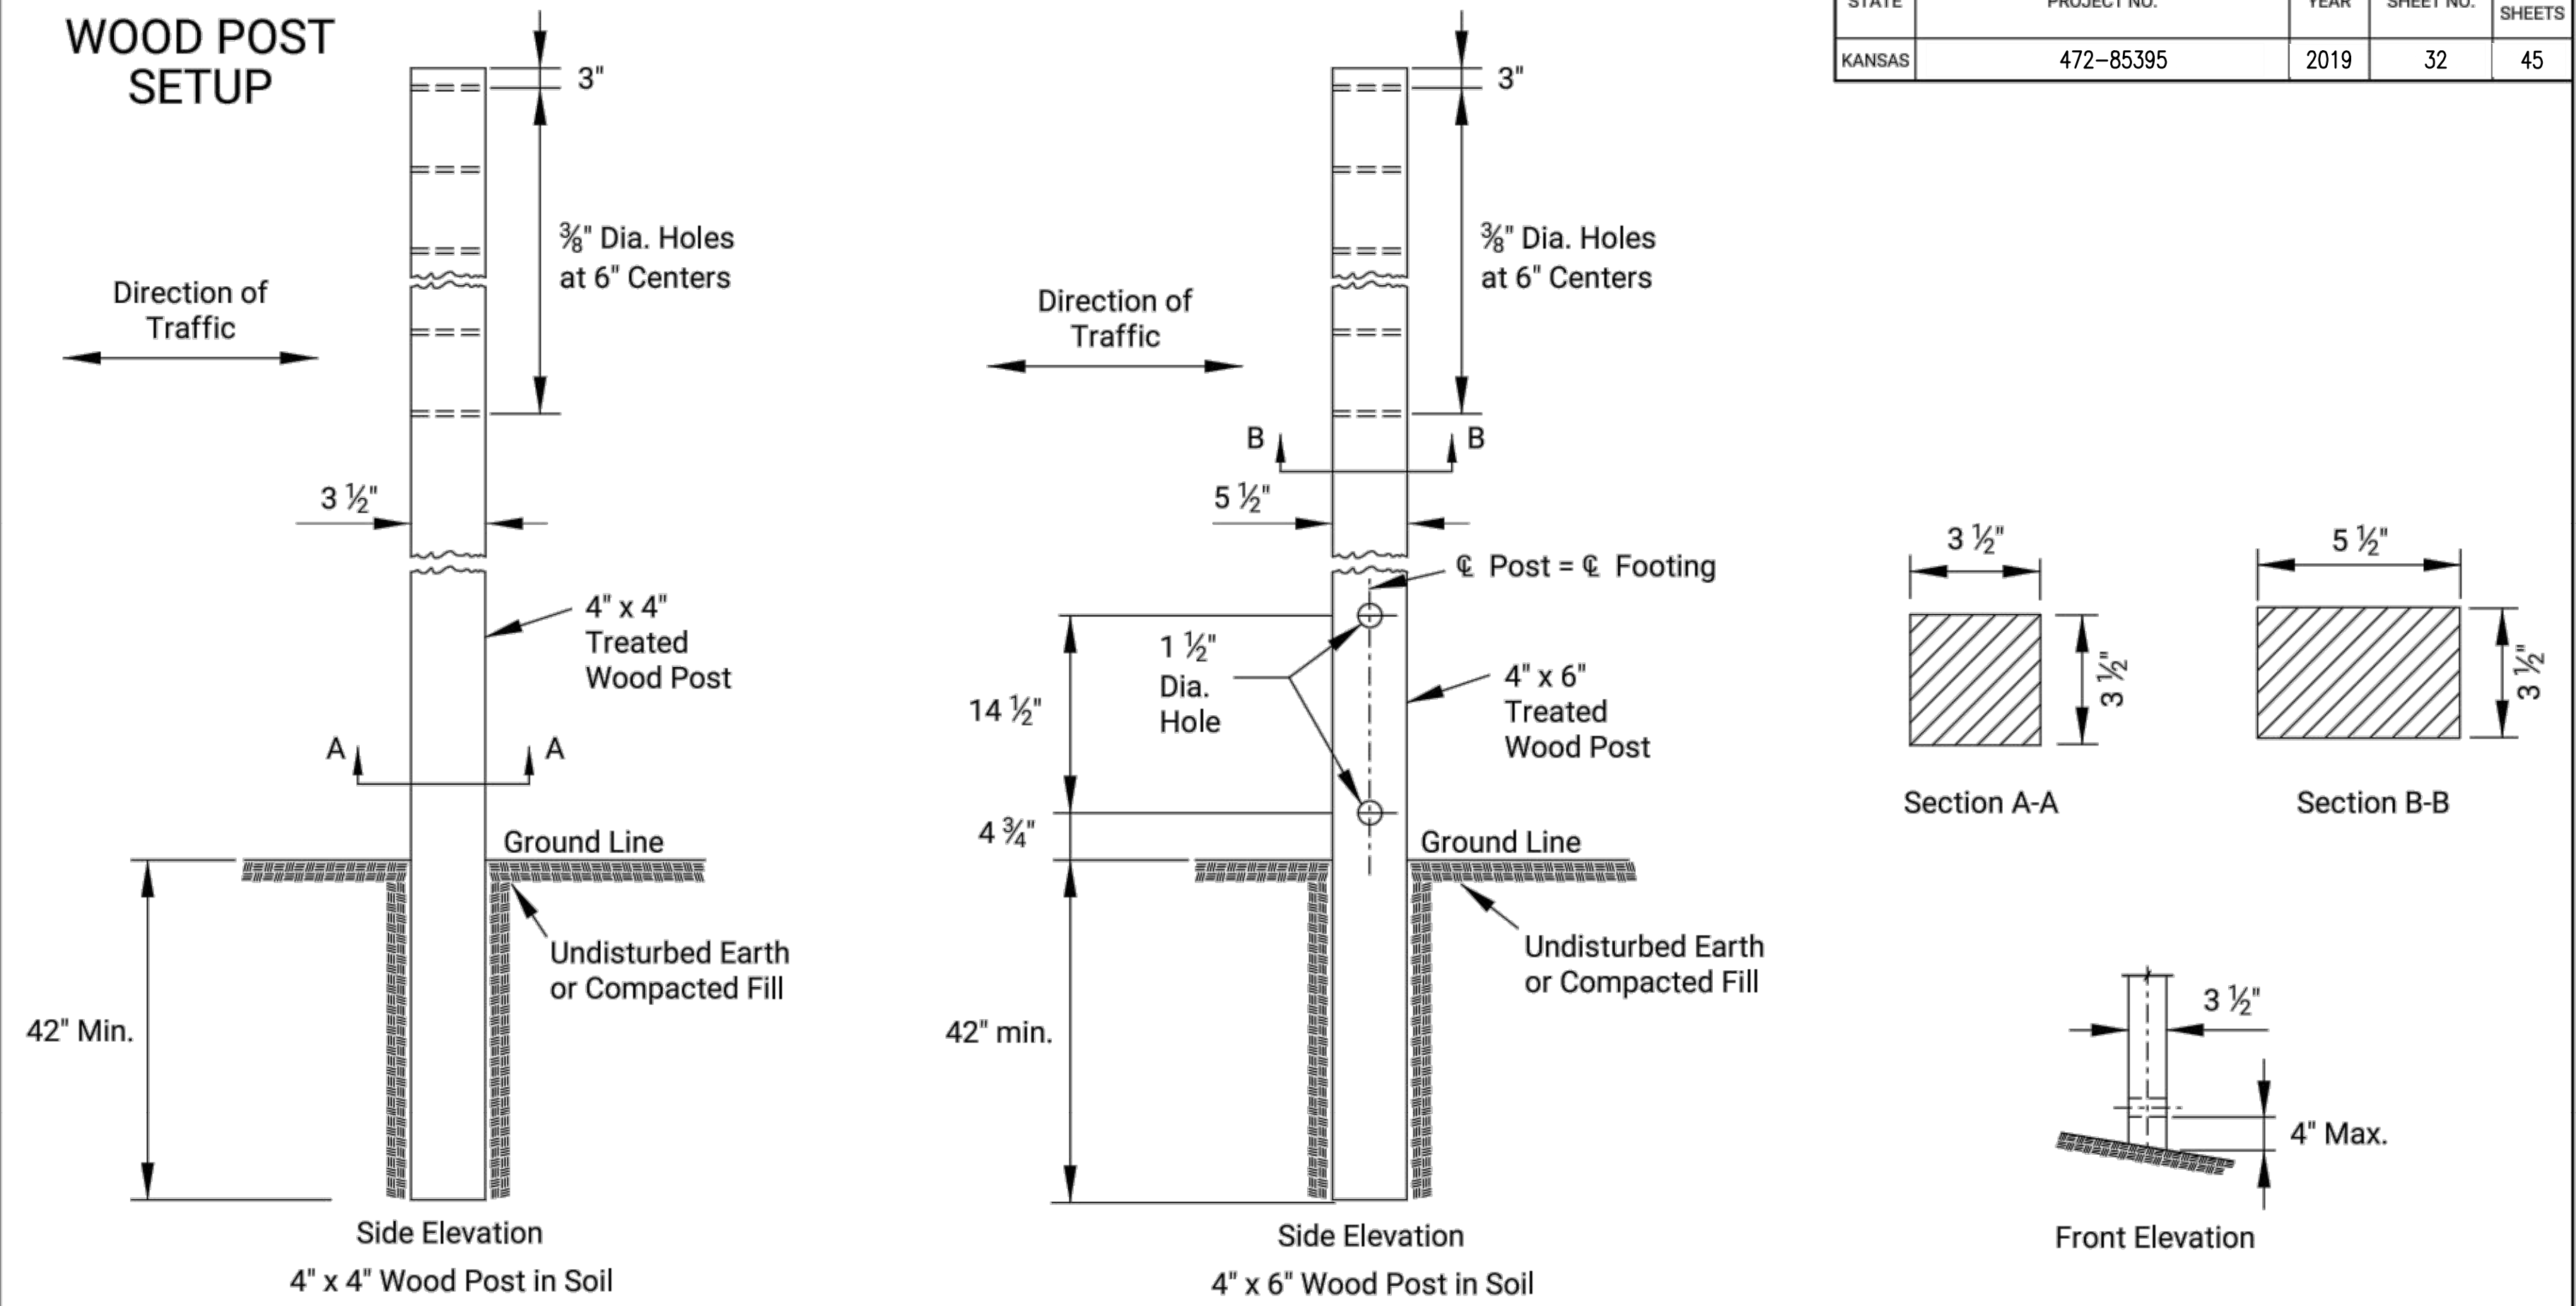


See TE710 for Additional Details and Requirements

### 3 LB/F U-CHANNEL SETUP

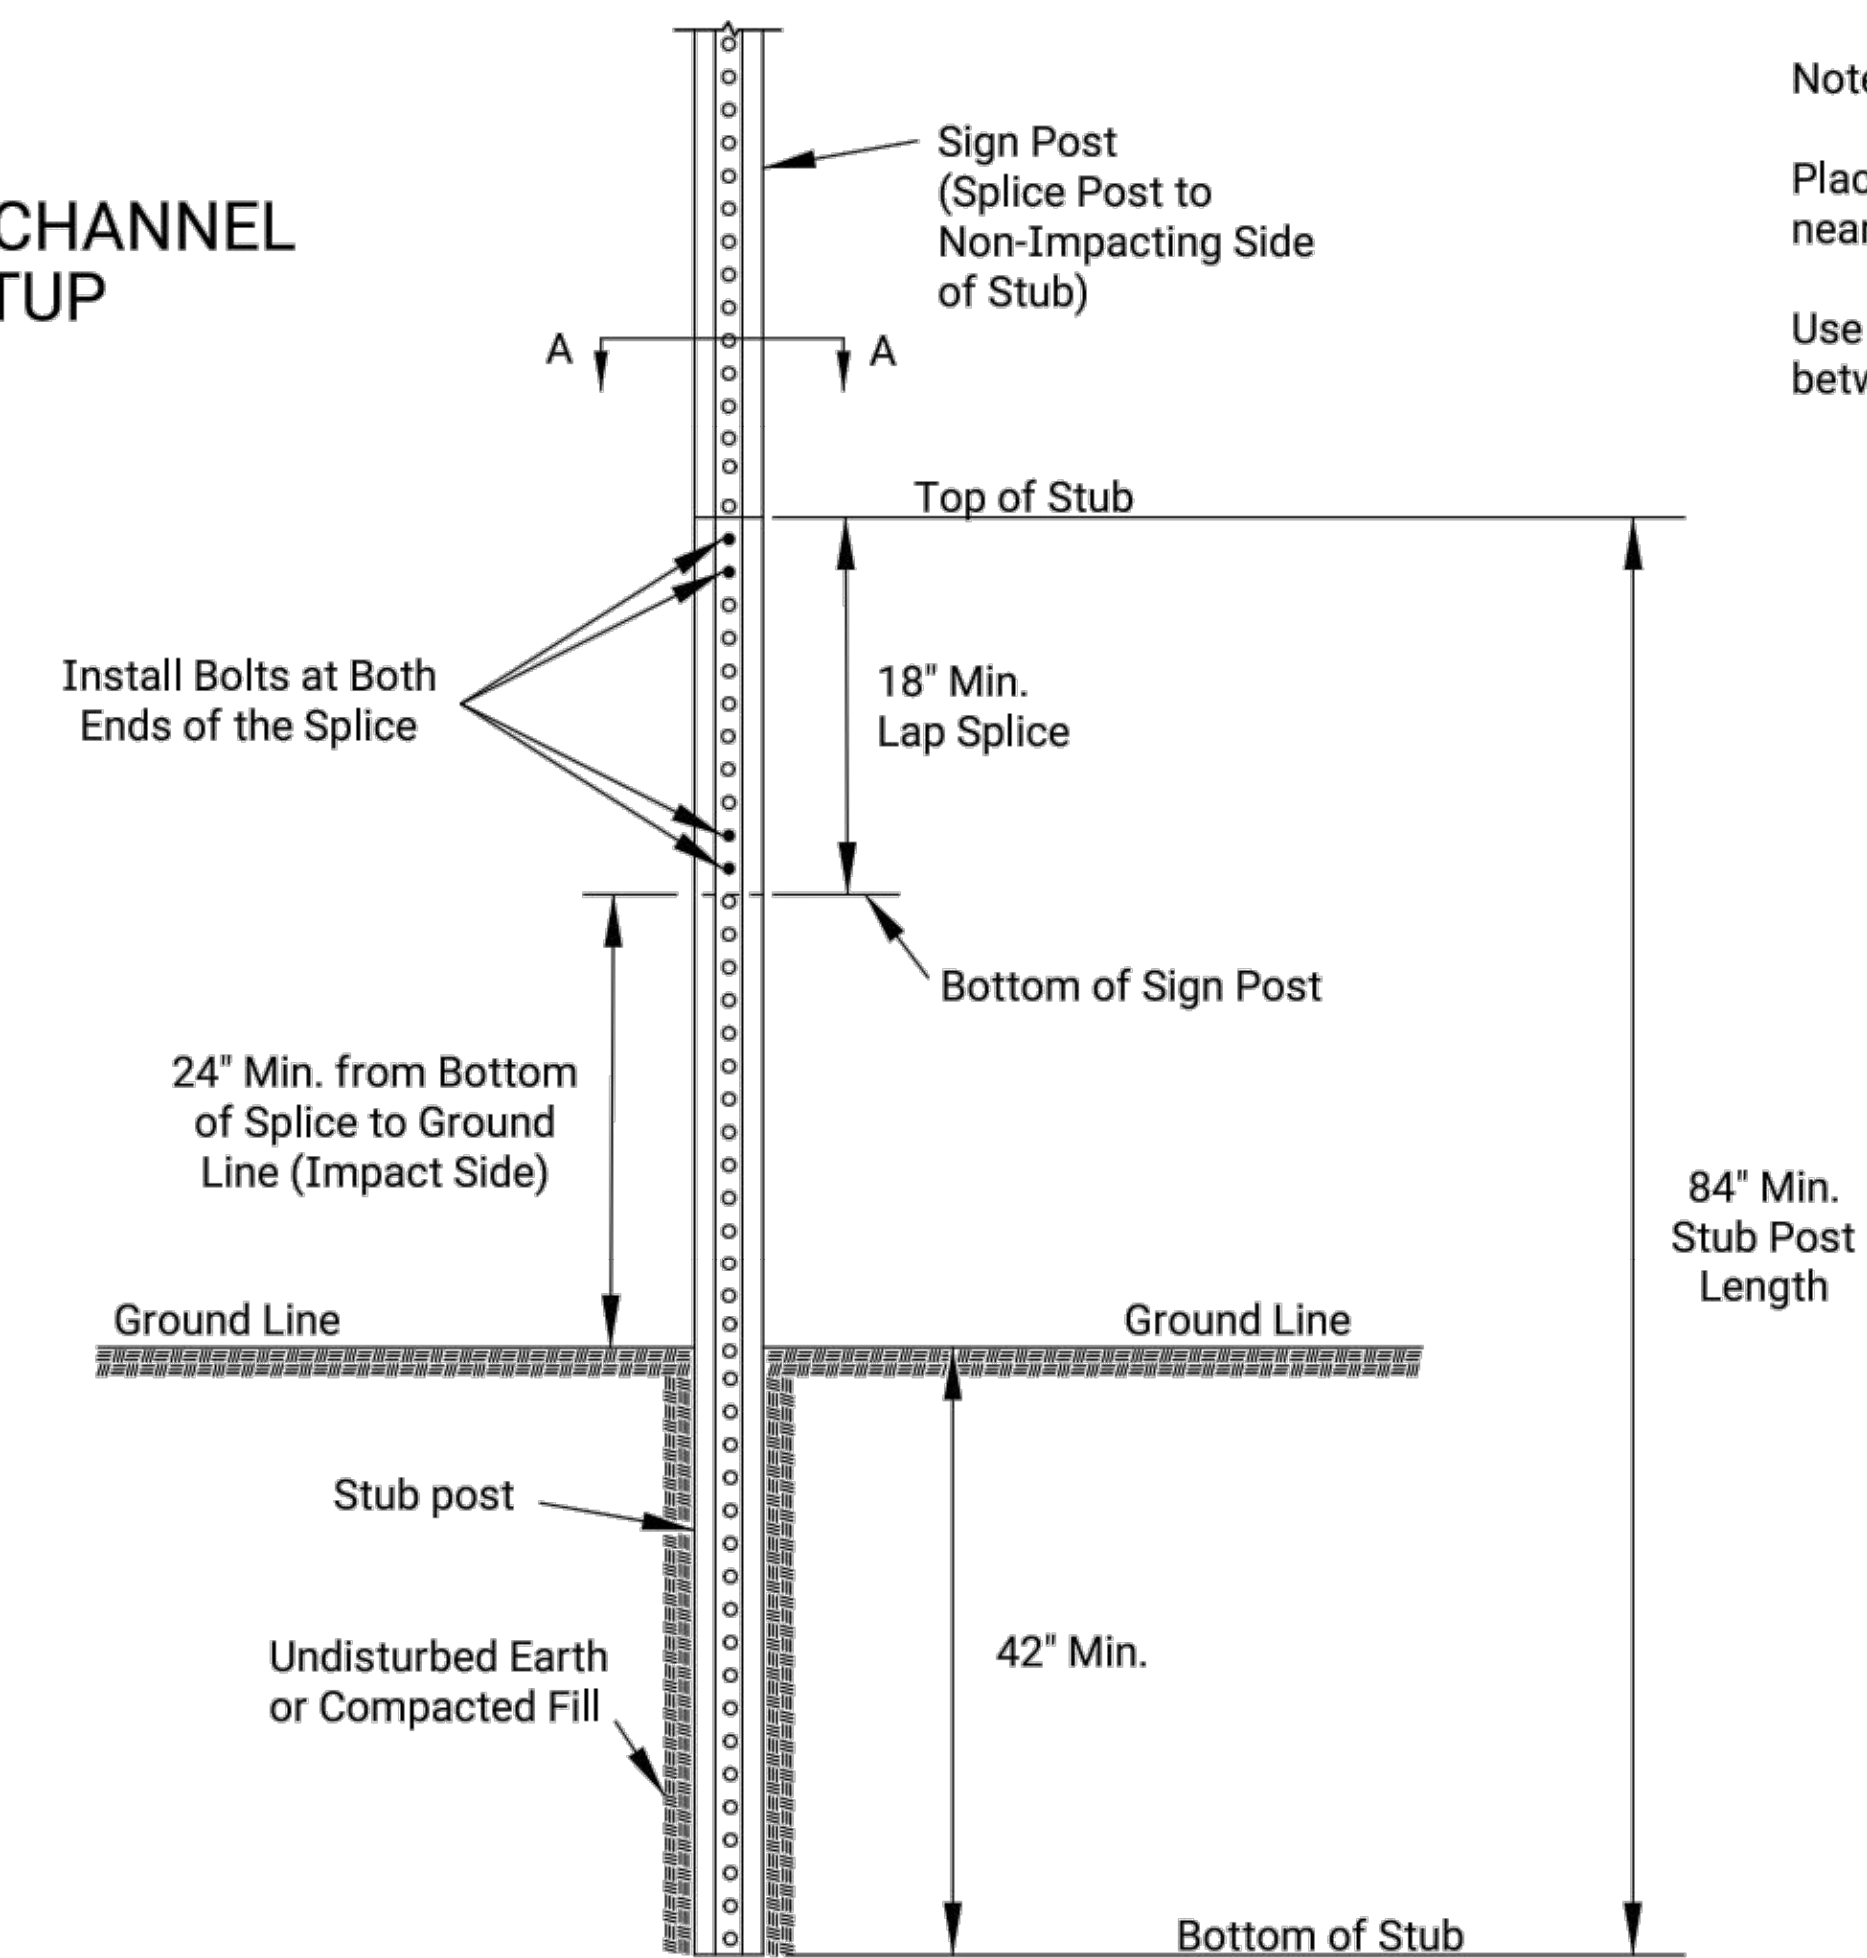

Notes:  
Place two bolts at both ends of the splice through the holes nearest the ends of the splice.  
Use manufacturer recommended spacers over the bolts between the spliced pieces of U-Channel.

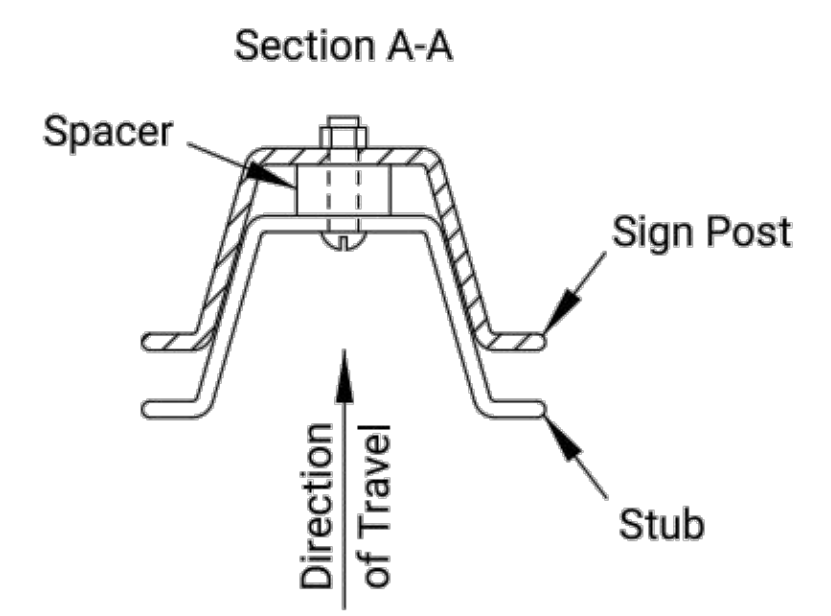

3					
2					
1					
NO.	DATE	REVISIONS	BY	APPD	

KANSAS DEPARTMENT OF TRANSPORTATION

TRAFFIC CONTROL SIGN POSTS

TE712

DESIGNED	B.A.H.	APPD	Kristina Pyle
DESIGN CK.	DETAIL CK.	QUAN. CK.	TRACE CK.

06/01/15