
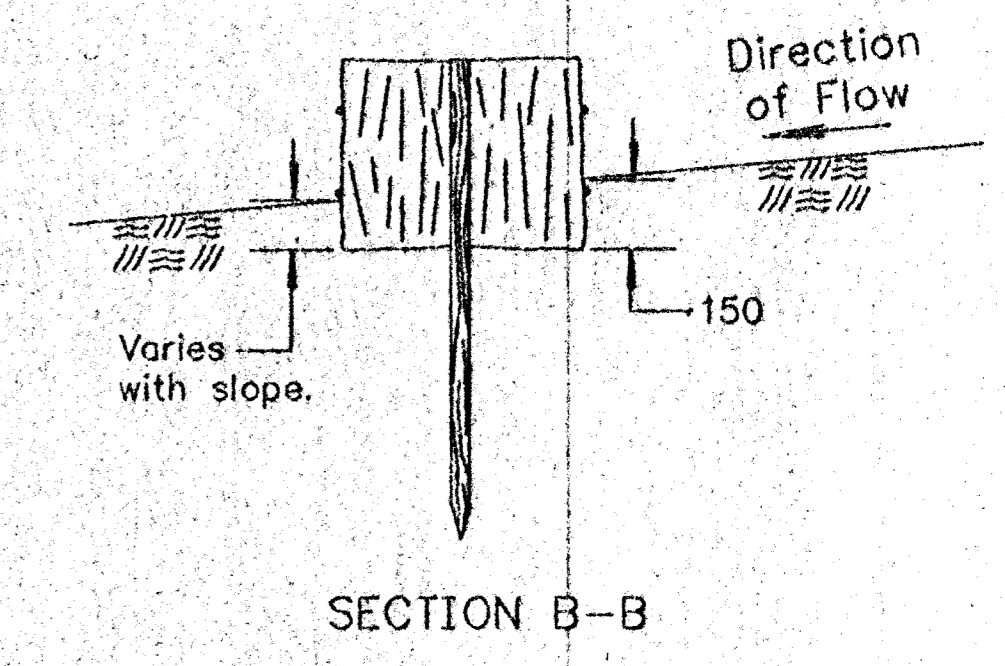


GENERAL NOTES

- 1) The usage of Straw or Hay Bales or Silt Fence is at the option of the Contractor. The symbols shown in the Typical Plan shall in no way be interpreted nor implied as to the usage of Slope Barrier Types.
- 2) The slope barriers shall be placed along contour lines, with a short section turned upgrade at each end of the barrier.
- 3) At culverts, the Straw or Hay Bales or Silt Fence shall be placed over the culvert, not through the streambed flowline.


INSTALLATION NOTES

- STRAW OR HAY BALES:
1. Place Bales tightly together, with loose straw or hay wedged between Bales to close off any openings.
 2. Wood Stakes shall be 50 mm x 50 mm (nom.) x 1 200 mm long (min.)
 3. Refer to plan sheets to estimate the linear footage of Bales required.
 4. Use only twine to bind bales. The use of wire binding is prohibited because it does not readily biodegrade.
- SILT FENCE:
1. Wood Stakes shall be 50 mm x 50 mm (nom.) x 1 200 mm long (min.)
 2. Attach Fence Fabric to wood stakes with staples, wire, or nails.
 3. Refer to plan sheets to estimate the linear footage of Silt Fence required.

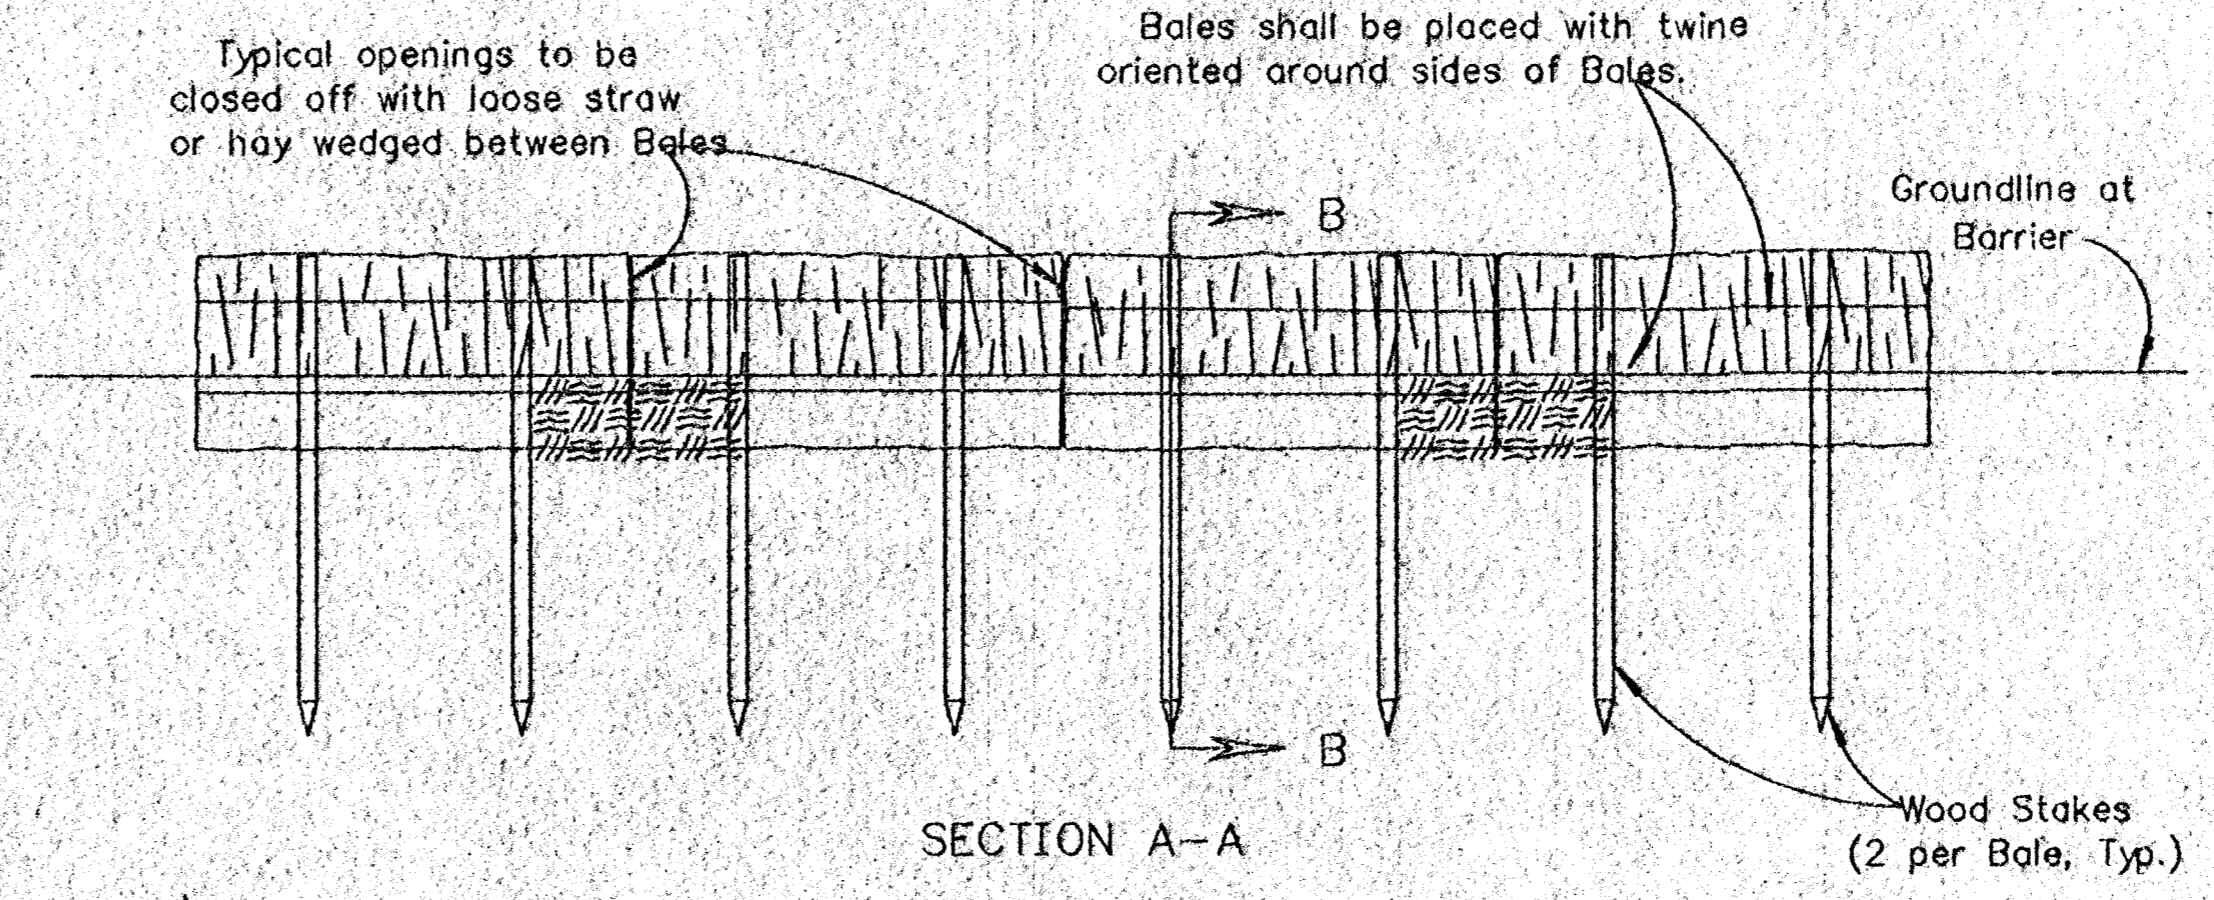


STRAW BALE SLOPE BARRIER

NO SCALE

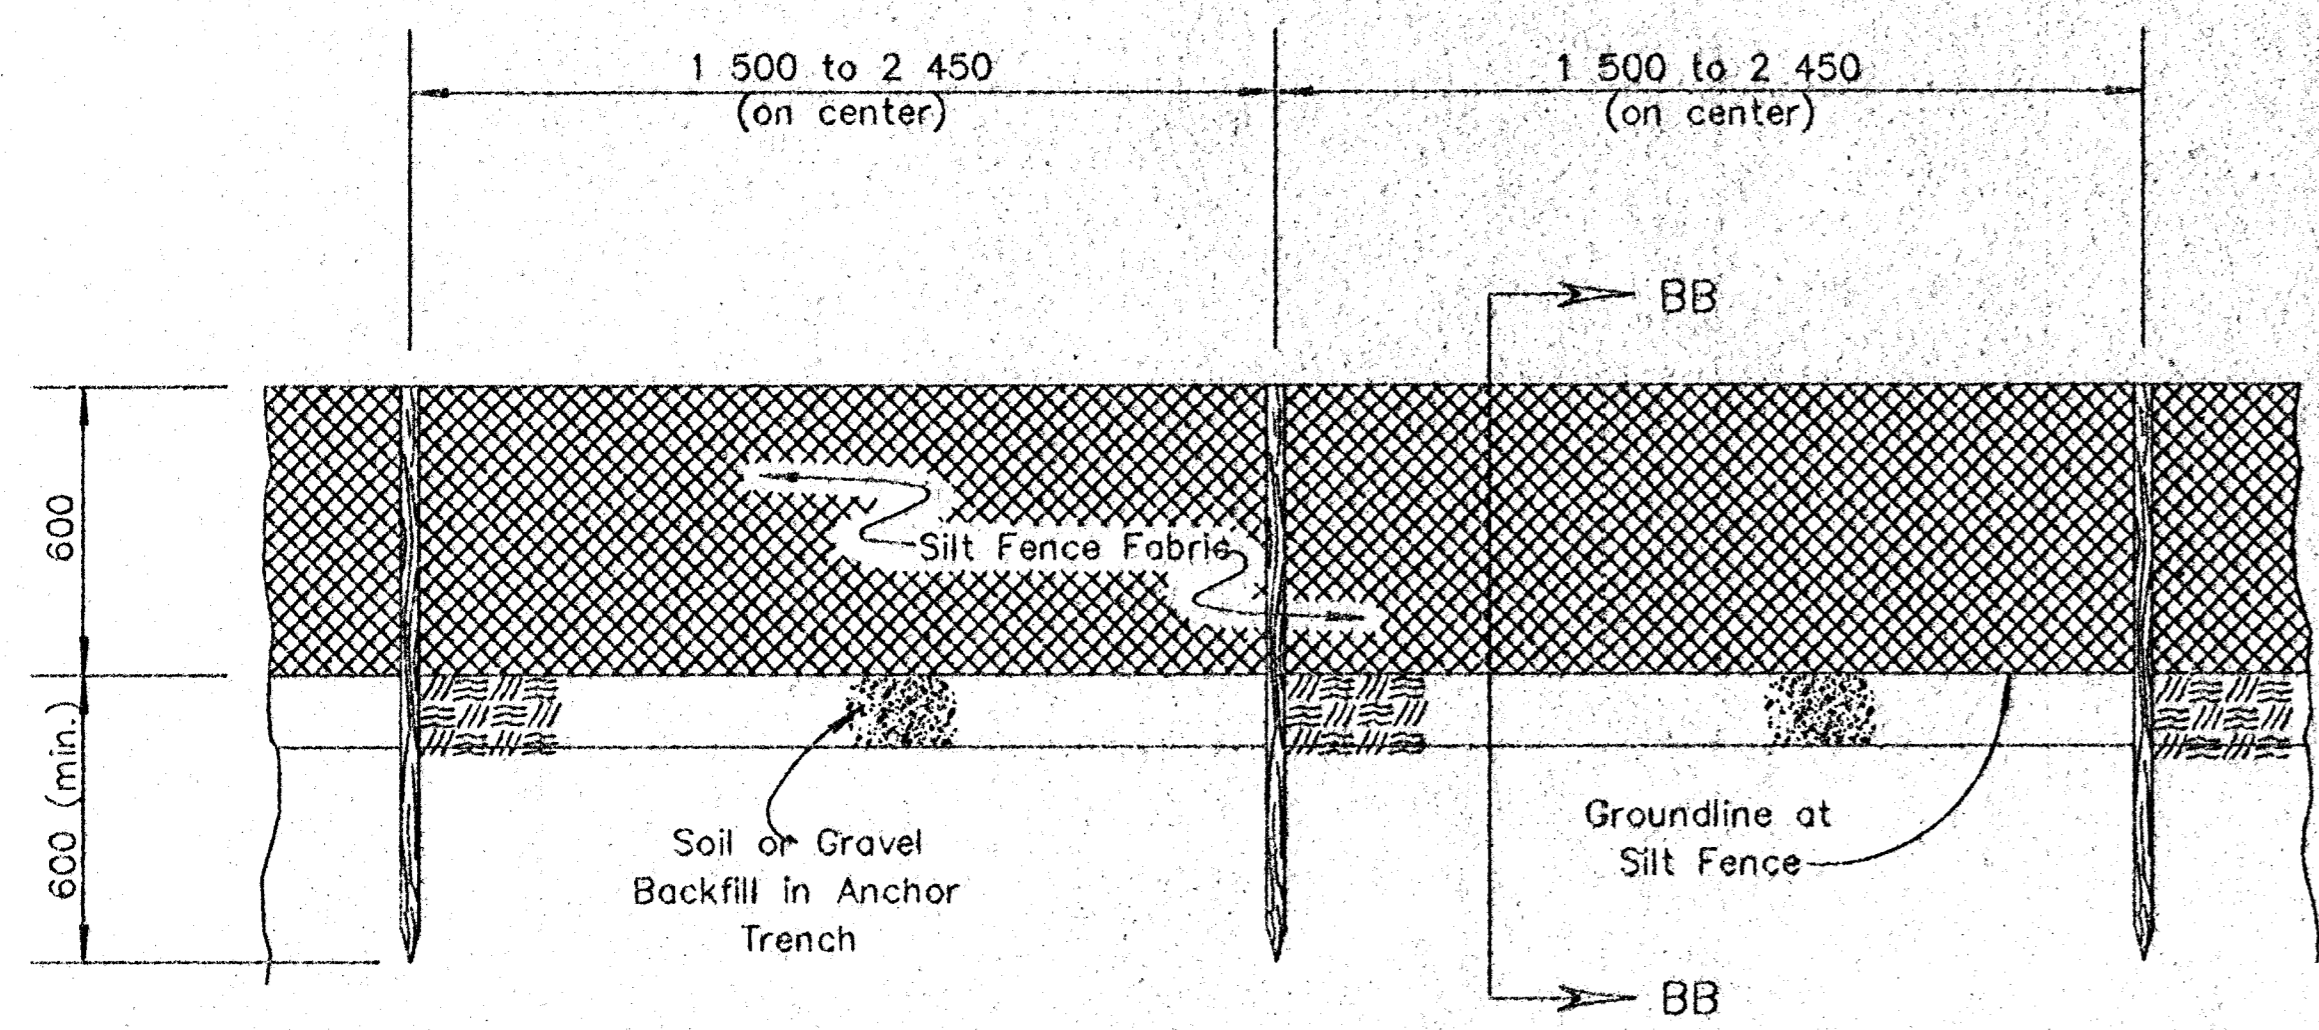

SILT FENCE SLOPE BARRIER

NO SCALE

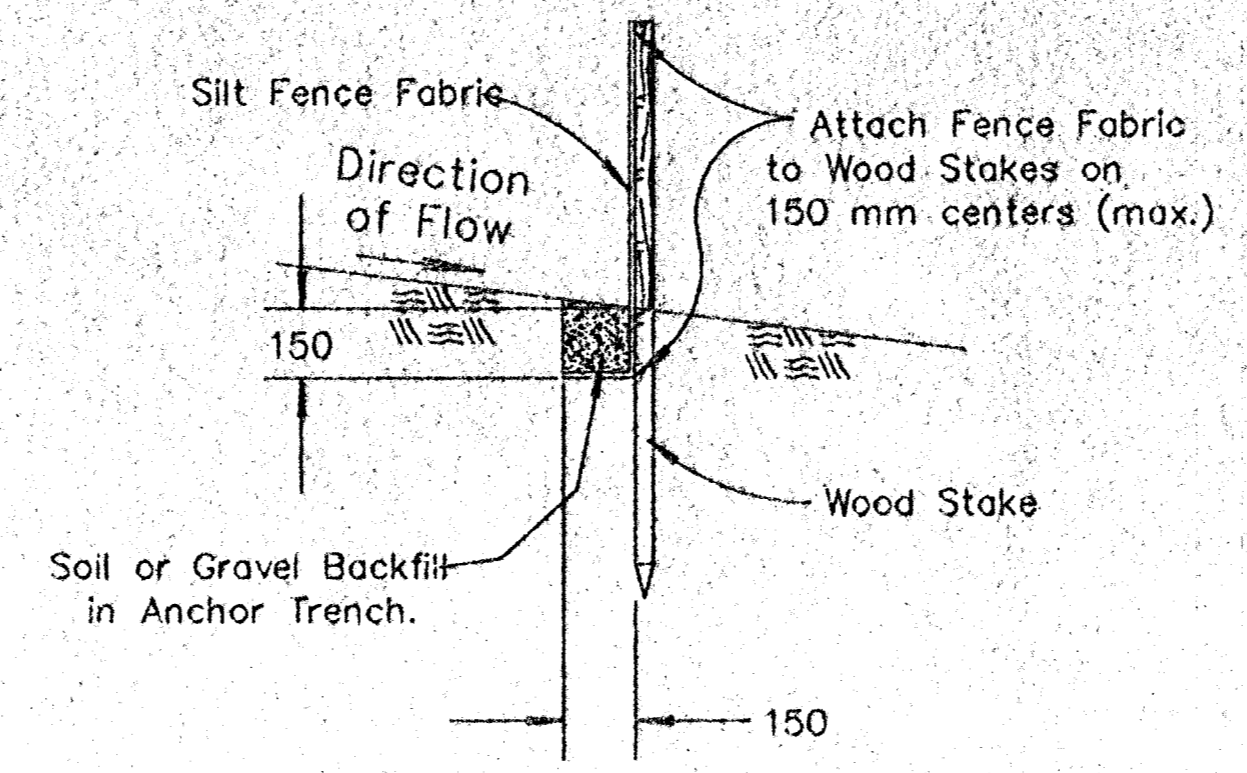

SECTION BB-BB

3					
2	3/17/97	Revise Silt Fence Stake Length	WCL	RDR	
1	7-5-95	Convert to SI	WCL	RDR	
NO. DATE		REVISIONS	BY	APP'D	
KANSAS DEPARTMENT OF TRANSPORTATION					
TEMPORARY PROJECT WATER POLLUTION CONTROL					
STRAW OR HAY BALE SLOPE BARRIERS					
SILT FENCE SLOPE BARRIERS					
LA852D SI					
DESIGNED	WCL	4/02/97	APP'D	Richard D. Ross	
WCL	WCL	WCL	WCL	WCL	WCL
WCL	WCL	WCL	WCL	WCL	WCL

Drawn By: DGN File: PLOTTED View= PLOT
 USERNAME: DGN:SPEC: PLOTTED
 PLOTTED: PLOTTED