



FHWA REGION NO.	STATE	PROJECT NO.	YEAR	SHEET NO.	TOTAL SHEETS
7	KANSAS	07TE-0073-01	1997	64	66


- NOTES:
- 1) Temporary Slope Drain and Temporary Berm may be used on either project foreslopes or project backslopes.
 - 2) Discharge of Slope Drains shall be into stabilized ditch or area, or into Sediment Basin.
 - 3) Pipe shall be secured in place as approved by Engineer.

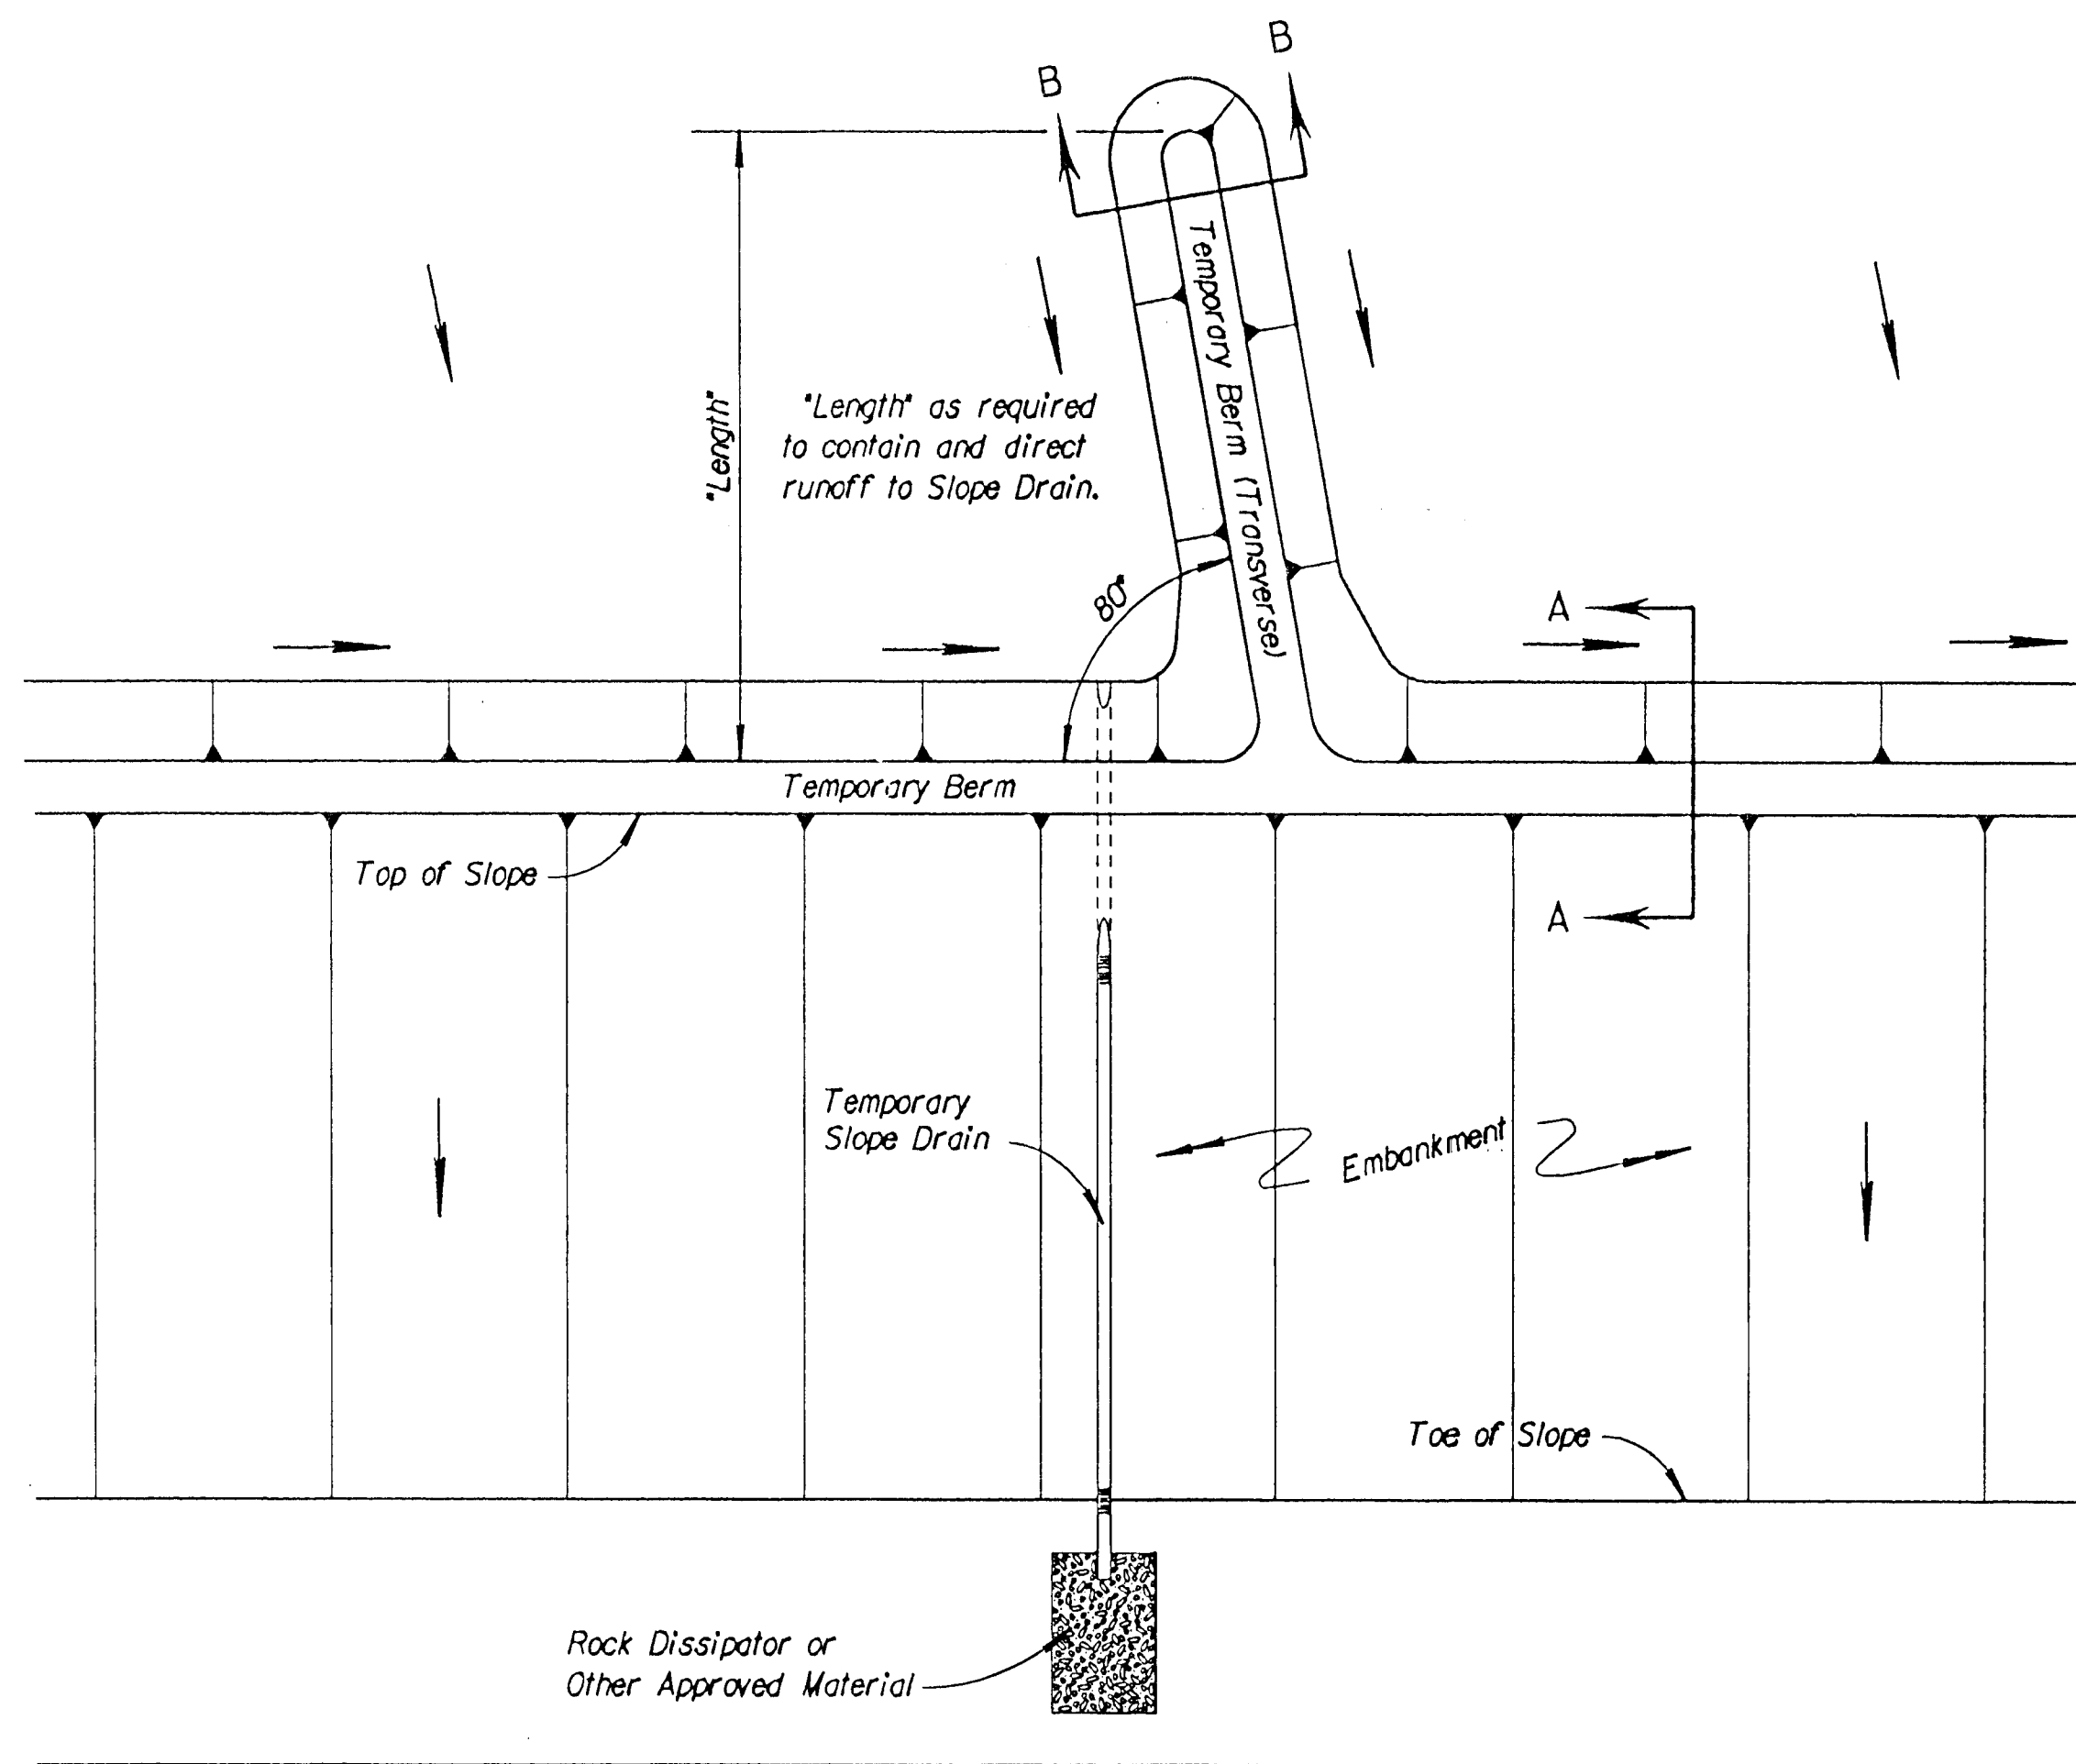


TYPICAL PLAN VIEW OF
TEMPORARY BERM AND
TEMPORARY SLOPE DRAIN
NO SCALE

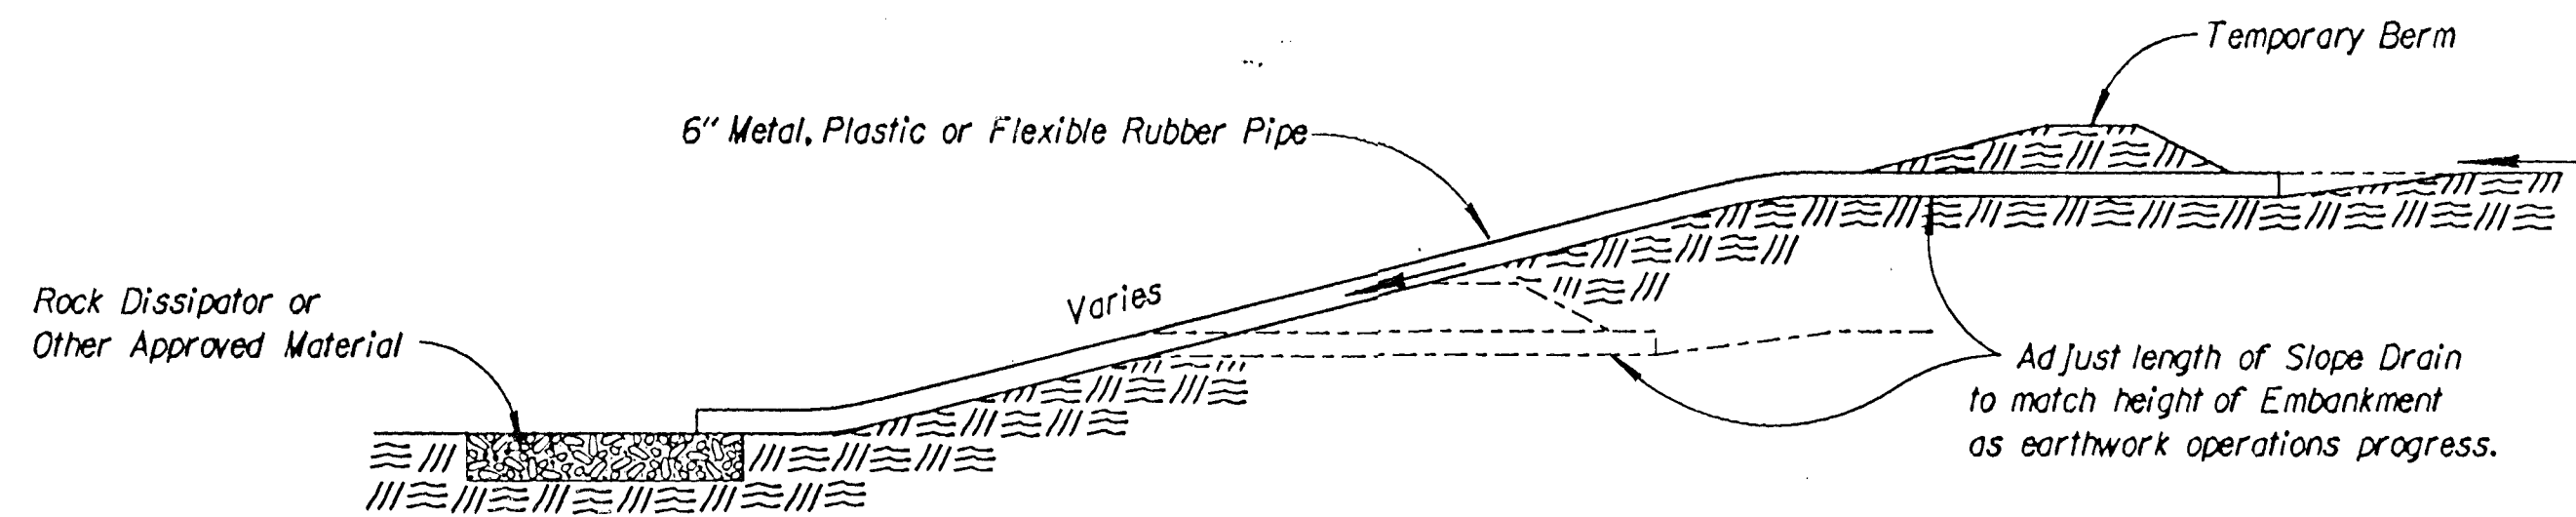

TYPICAL PROFILE OF TEMPORARY SLOPE DRAIN
NO SCALE

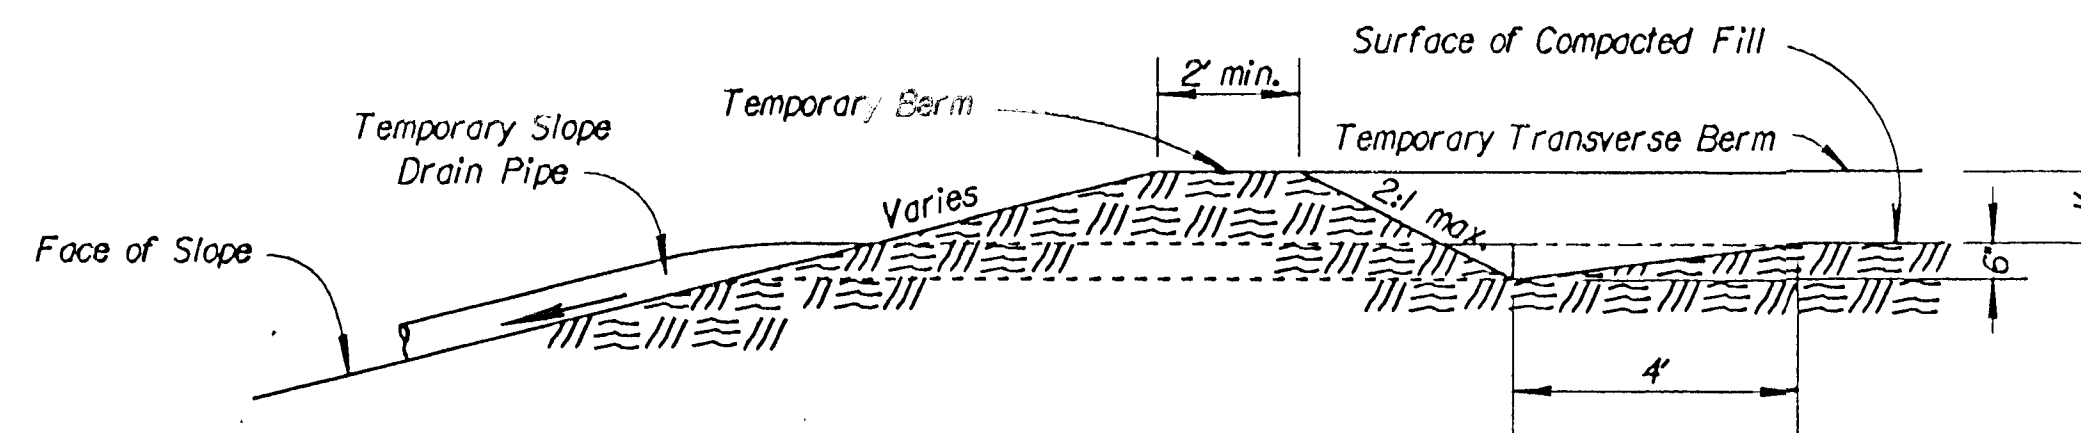


SECTION A-A
NO SCALE

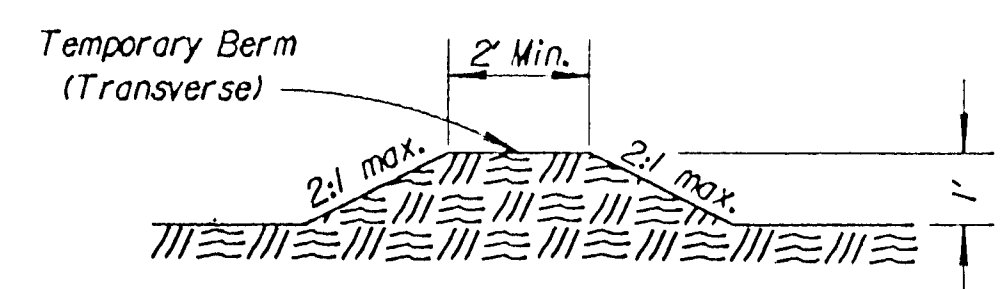


SECTION B-B
NO SCALE


TYPICAL PROFILE OF TEMPORARY BERM
NO SCALE

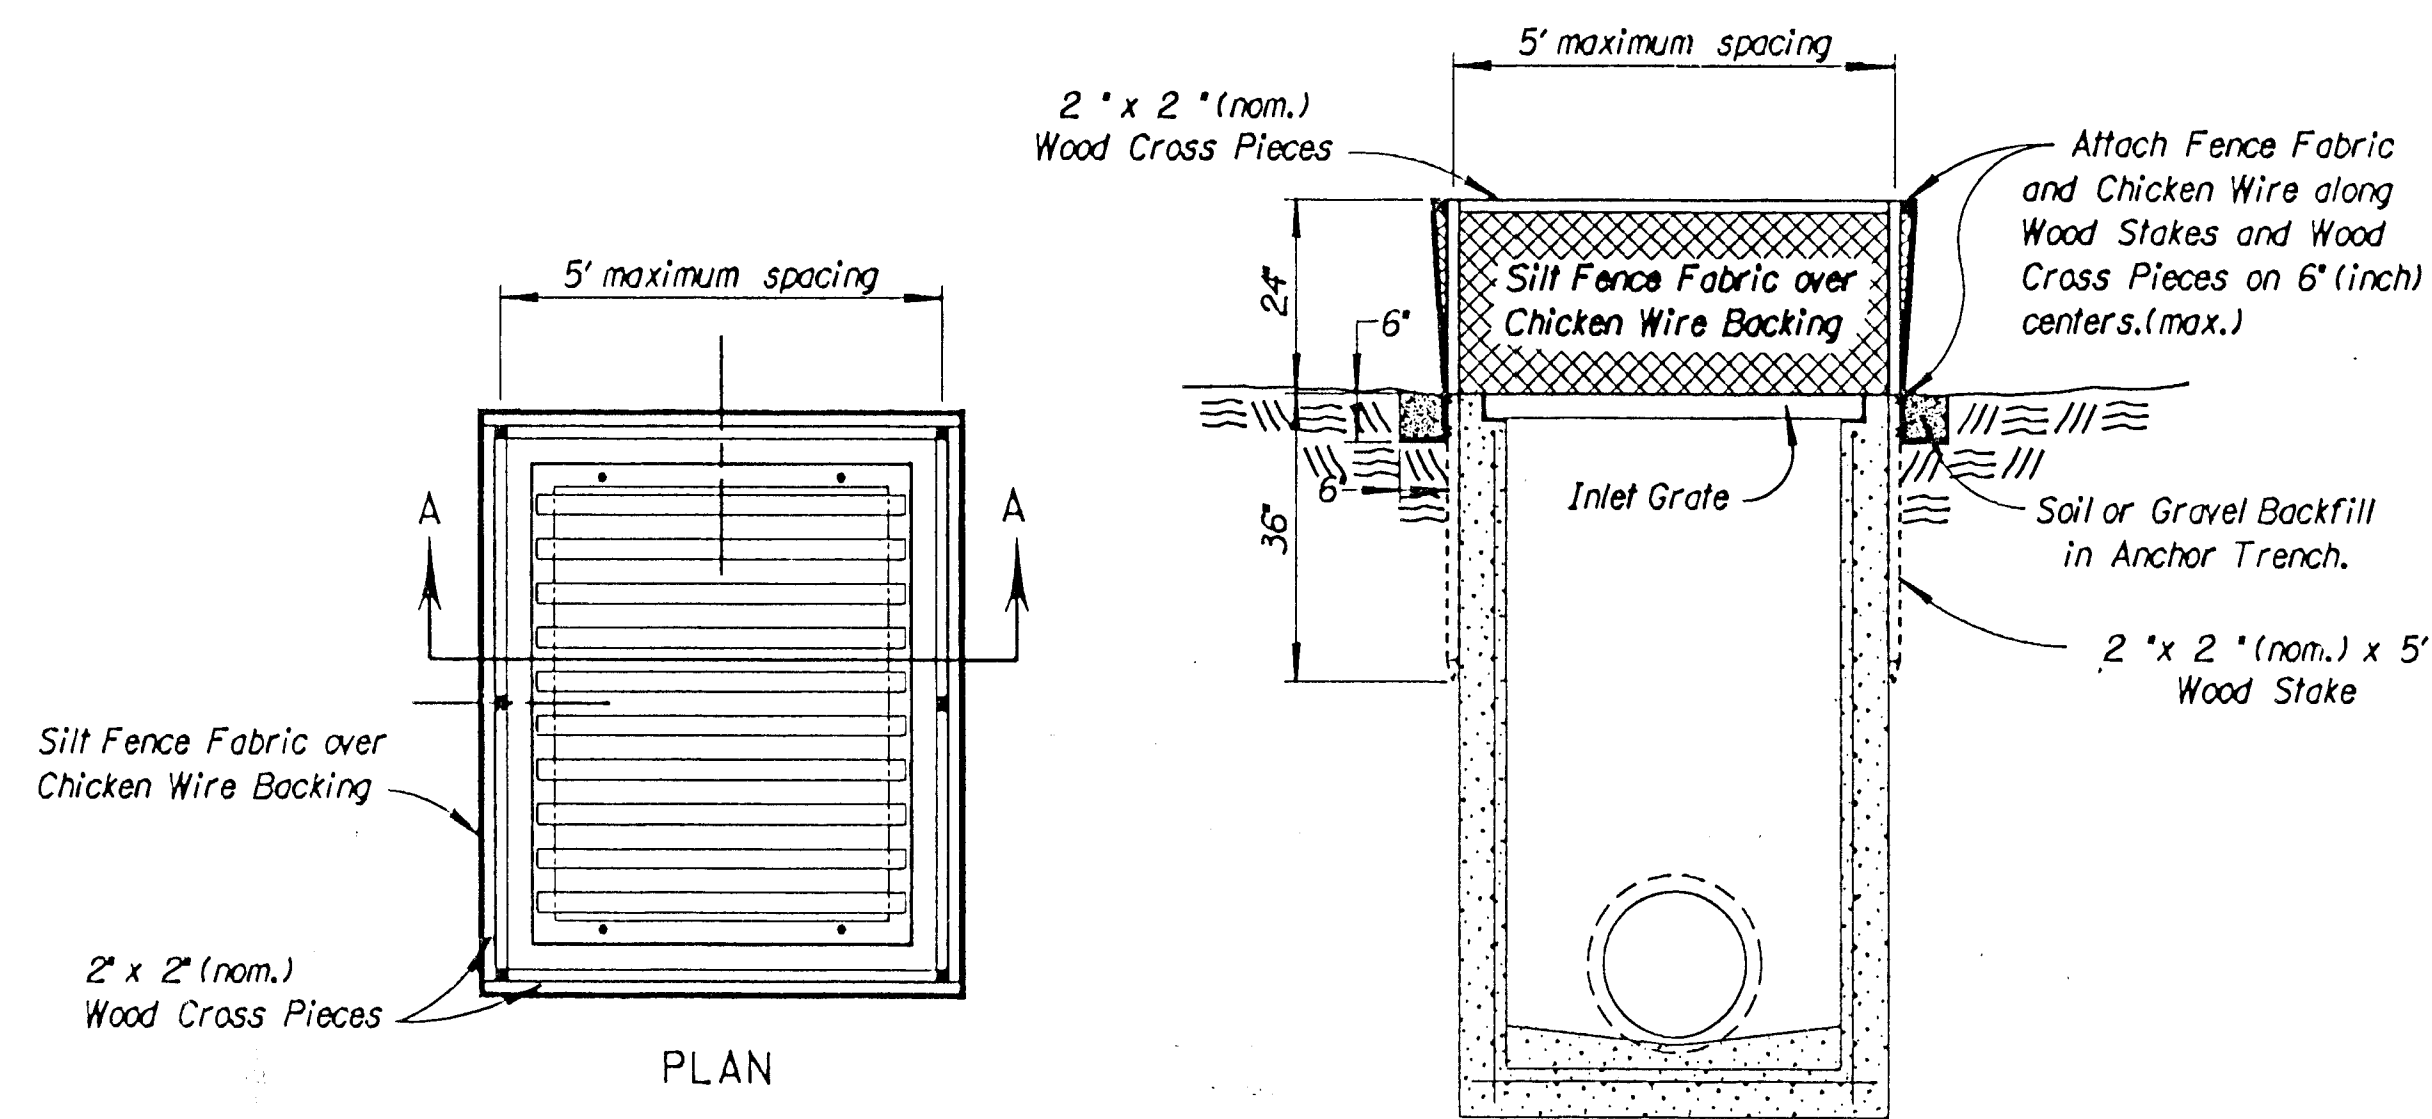

TEMPORARY MEDIAN INLET SEDIMENT BARRIER
NO SCALE

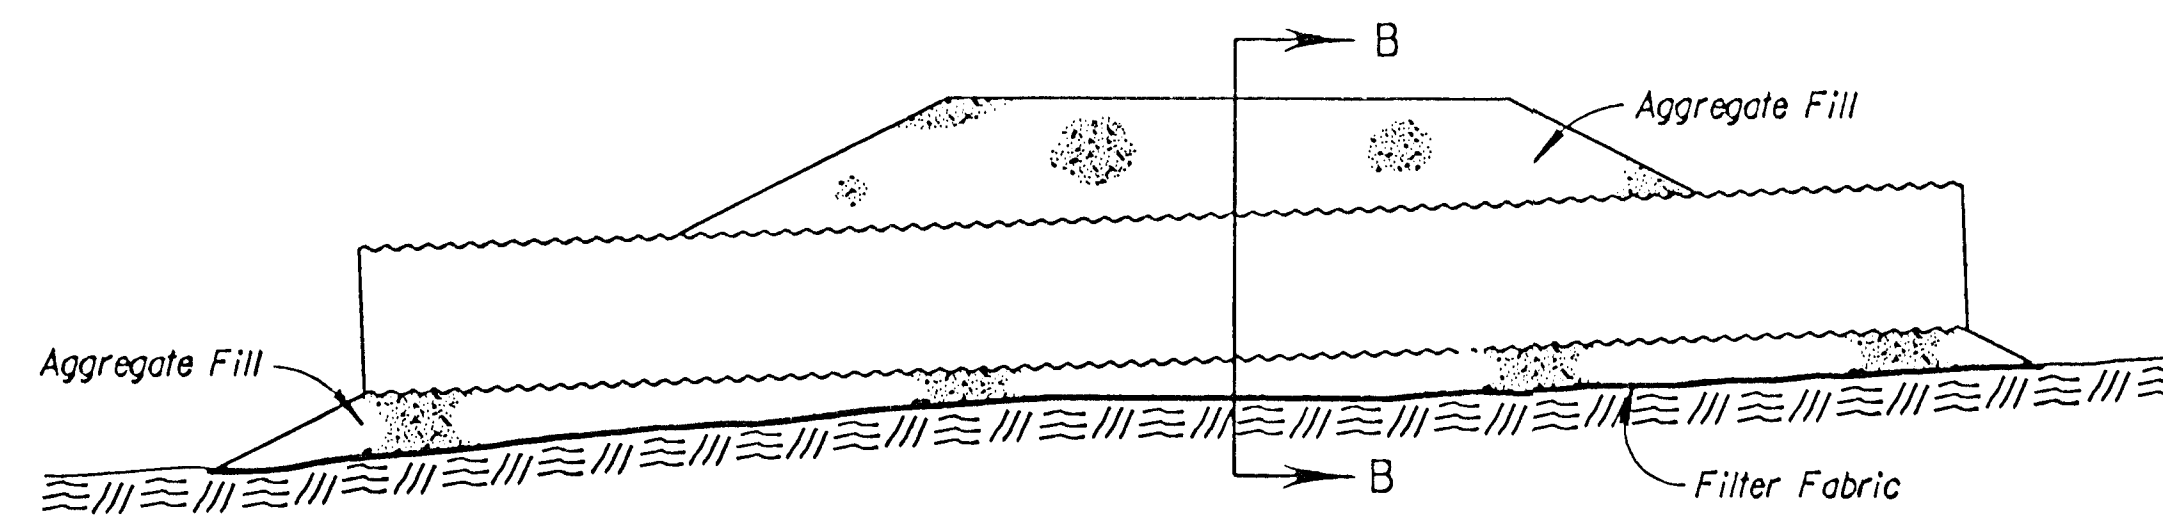

SECTION A-A

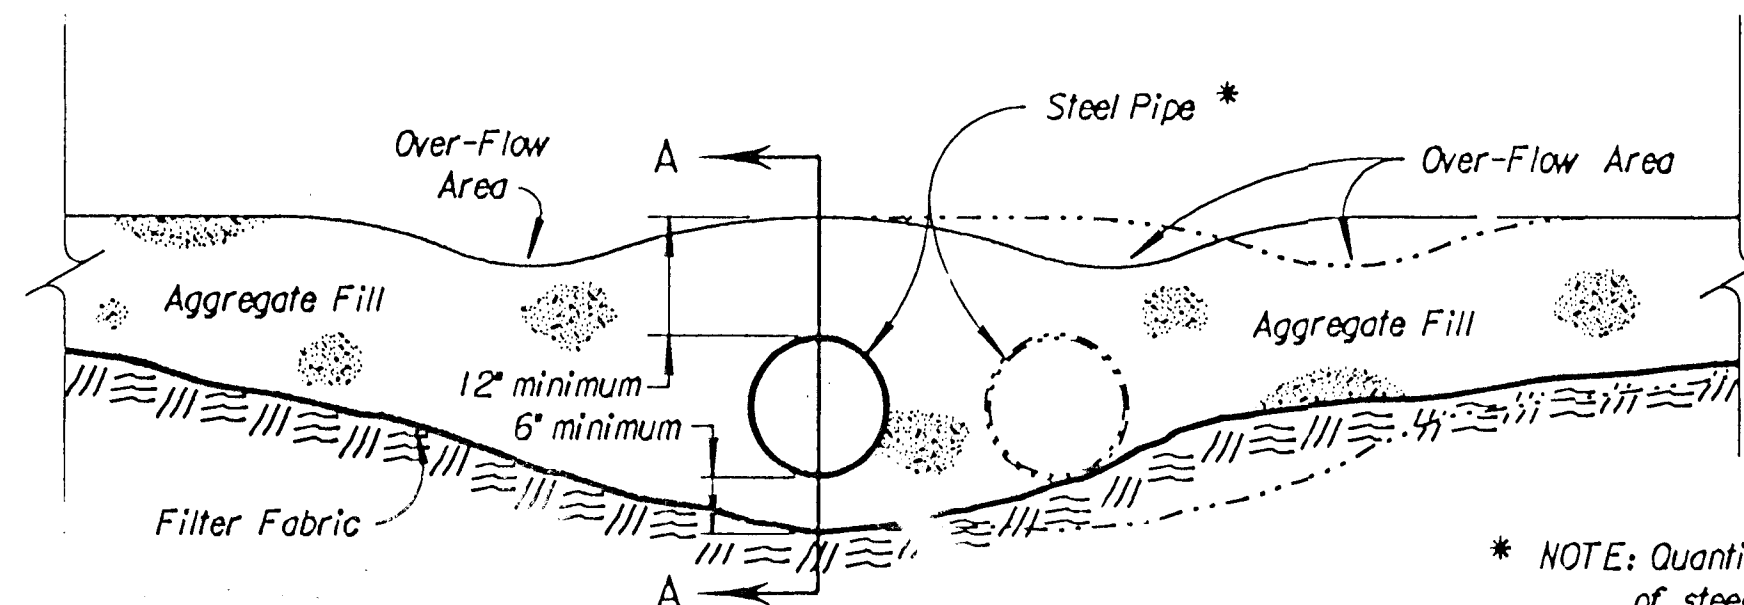

SECTION B-B

TEMPORARY STREAM CROSSING
NO SCALE

* NOTE: Quantity, length and diameter of steel pipe to be determined by design flow calculations.

3					
2					
1					
NO.	DATE	REVISIONS	BY	APP'D	
KANSAS DEPARTMENT OF TRANSPORTATION					
TEMPORARY PROJECT WATER					
POLLUTION CONTROL					
TEMPORARY SLOPE DRAIN, STREAM CROSSING,					
MEDIAN INLET SEDIMENT BARRIER					
STD. NO. LA852C					
DESIGNED	WCL	DET. QUANTITIES	WCL	TRACED	WCL
DESIGN CK.	ROB	DET. CK.	WCL	TRACE CK.	WCL