



STATE	PROJECT NO.	YEAR	SHEET NO.	TOTAL SHEETS
KANSAS	472-2023-085864	2025	97	114

PERFORATED SQUARE STEEL TUBE (P.S.S.T.) POST SETUP

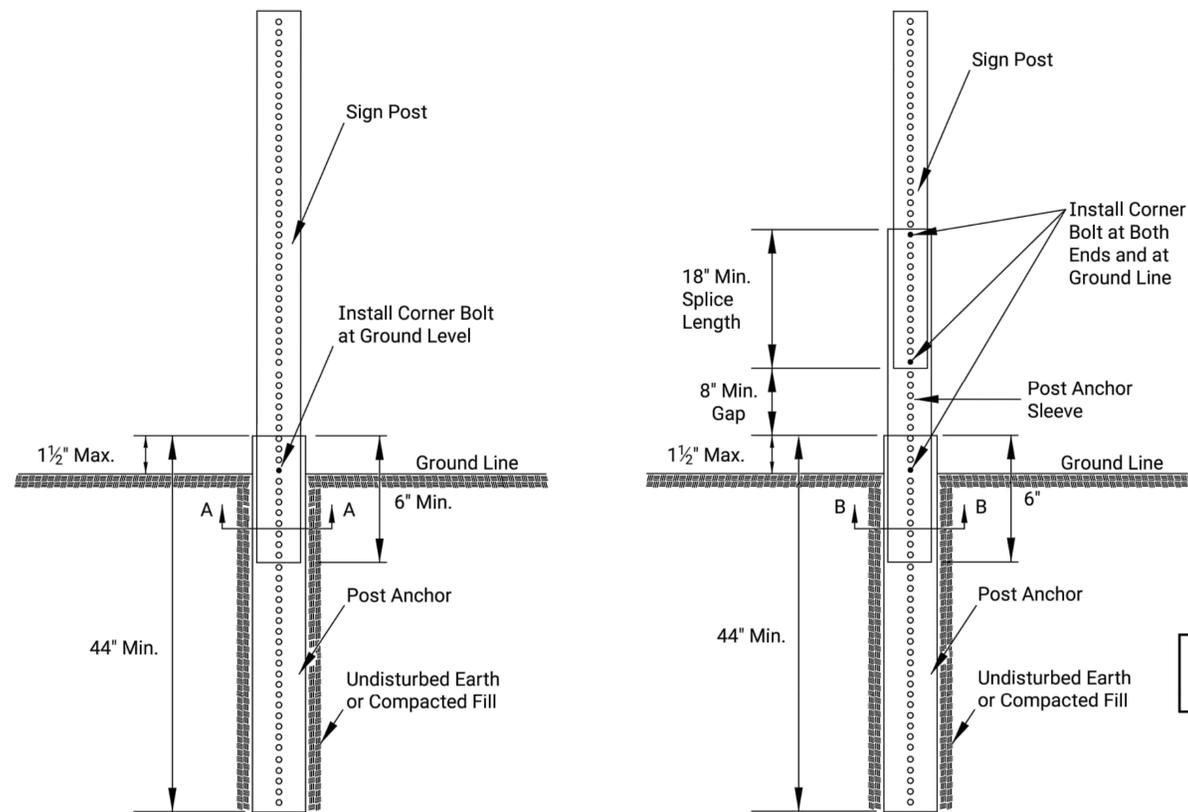


P.S.S.T. Detail

Telescoping P.S.S.T. Detail

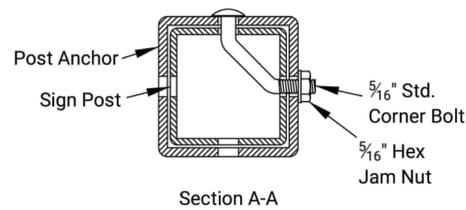

Section A-A

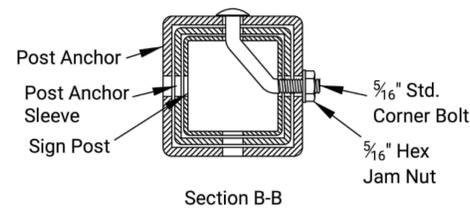


Section B-B

Details for 2", 2 1/4", or 2 1/2" sign posts

Place bolts in the same corner along each sign post.

WOOD POST SETUP

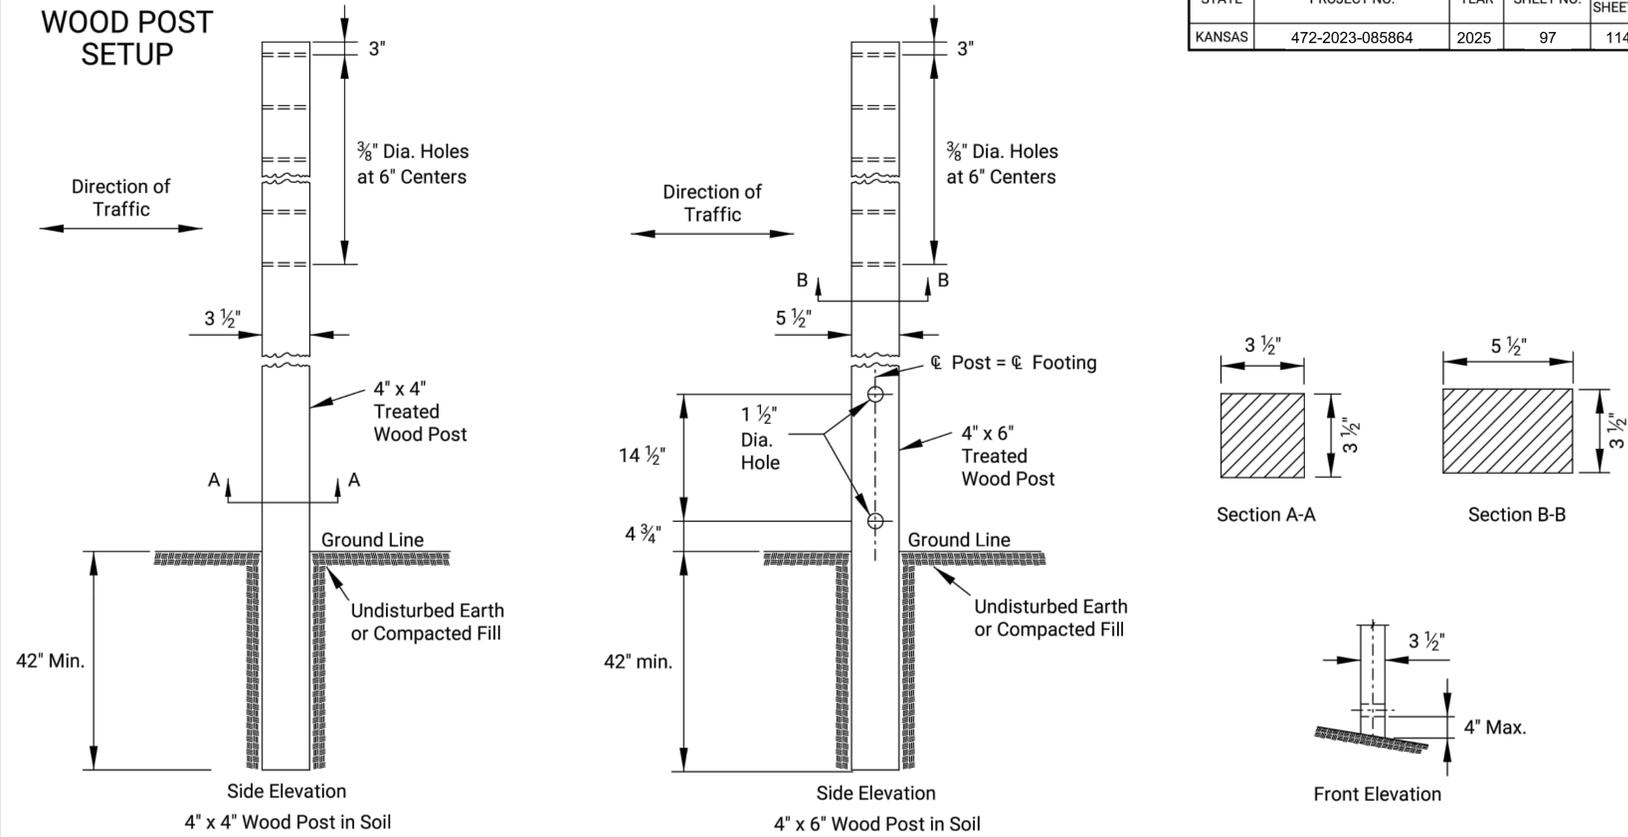


4" x 4" Wood Post in Soil


4" x 6" Wood Post in Soil

See TE710 for Additional Details and Requirements

3 LB/F U-CHANNEL SETUP

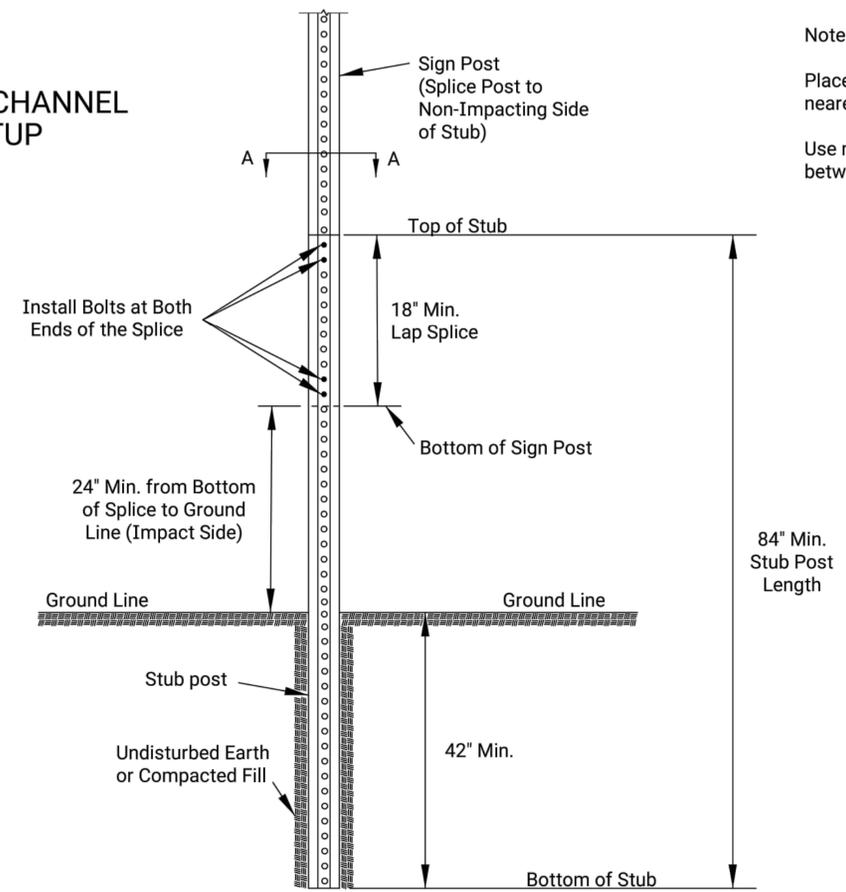

Notes:
Place two bolts at both ends of the splice through the holes nearest the ends of the splice.
Use manufacturer recommended spacers over the bolts between the spliced pieces of U-Channel.

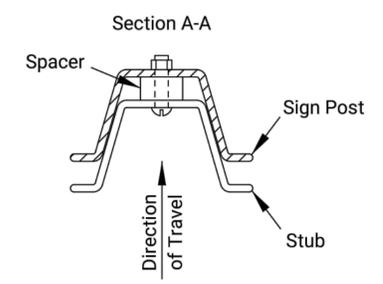

NO.	DATE	REVISIONS	BY	APPD
KANSAS DEPARTMENT OF TRANSPORTATION				
TRAFFIC CONTROL SIGN POSTS				
TE712				
FHWA APPROVAL	06-01-15	APPD.	Kristina Ericksen	
DESIGNED	B.A.H.	Detailed	QUANTITIES	TRACED
DESIGN CK.	DETAIL CK.	QUAN. CK.	TRACE CK.	