


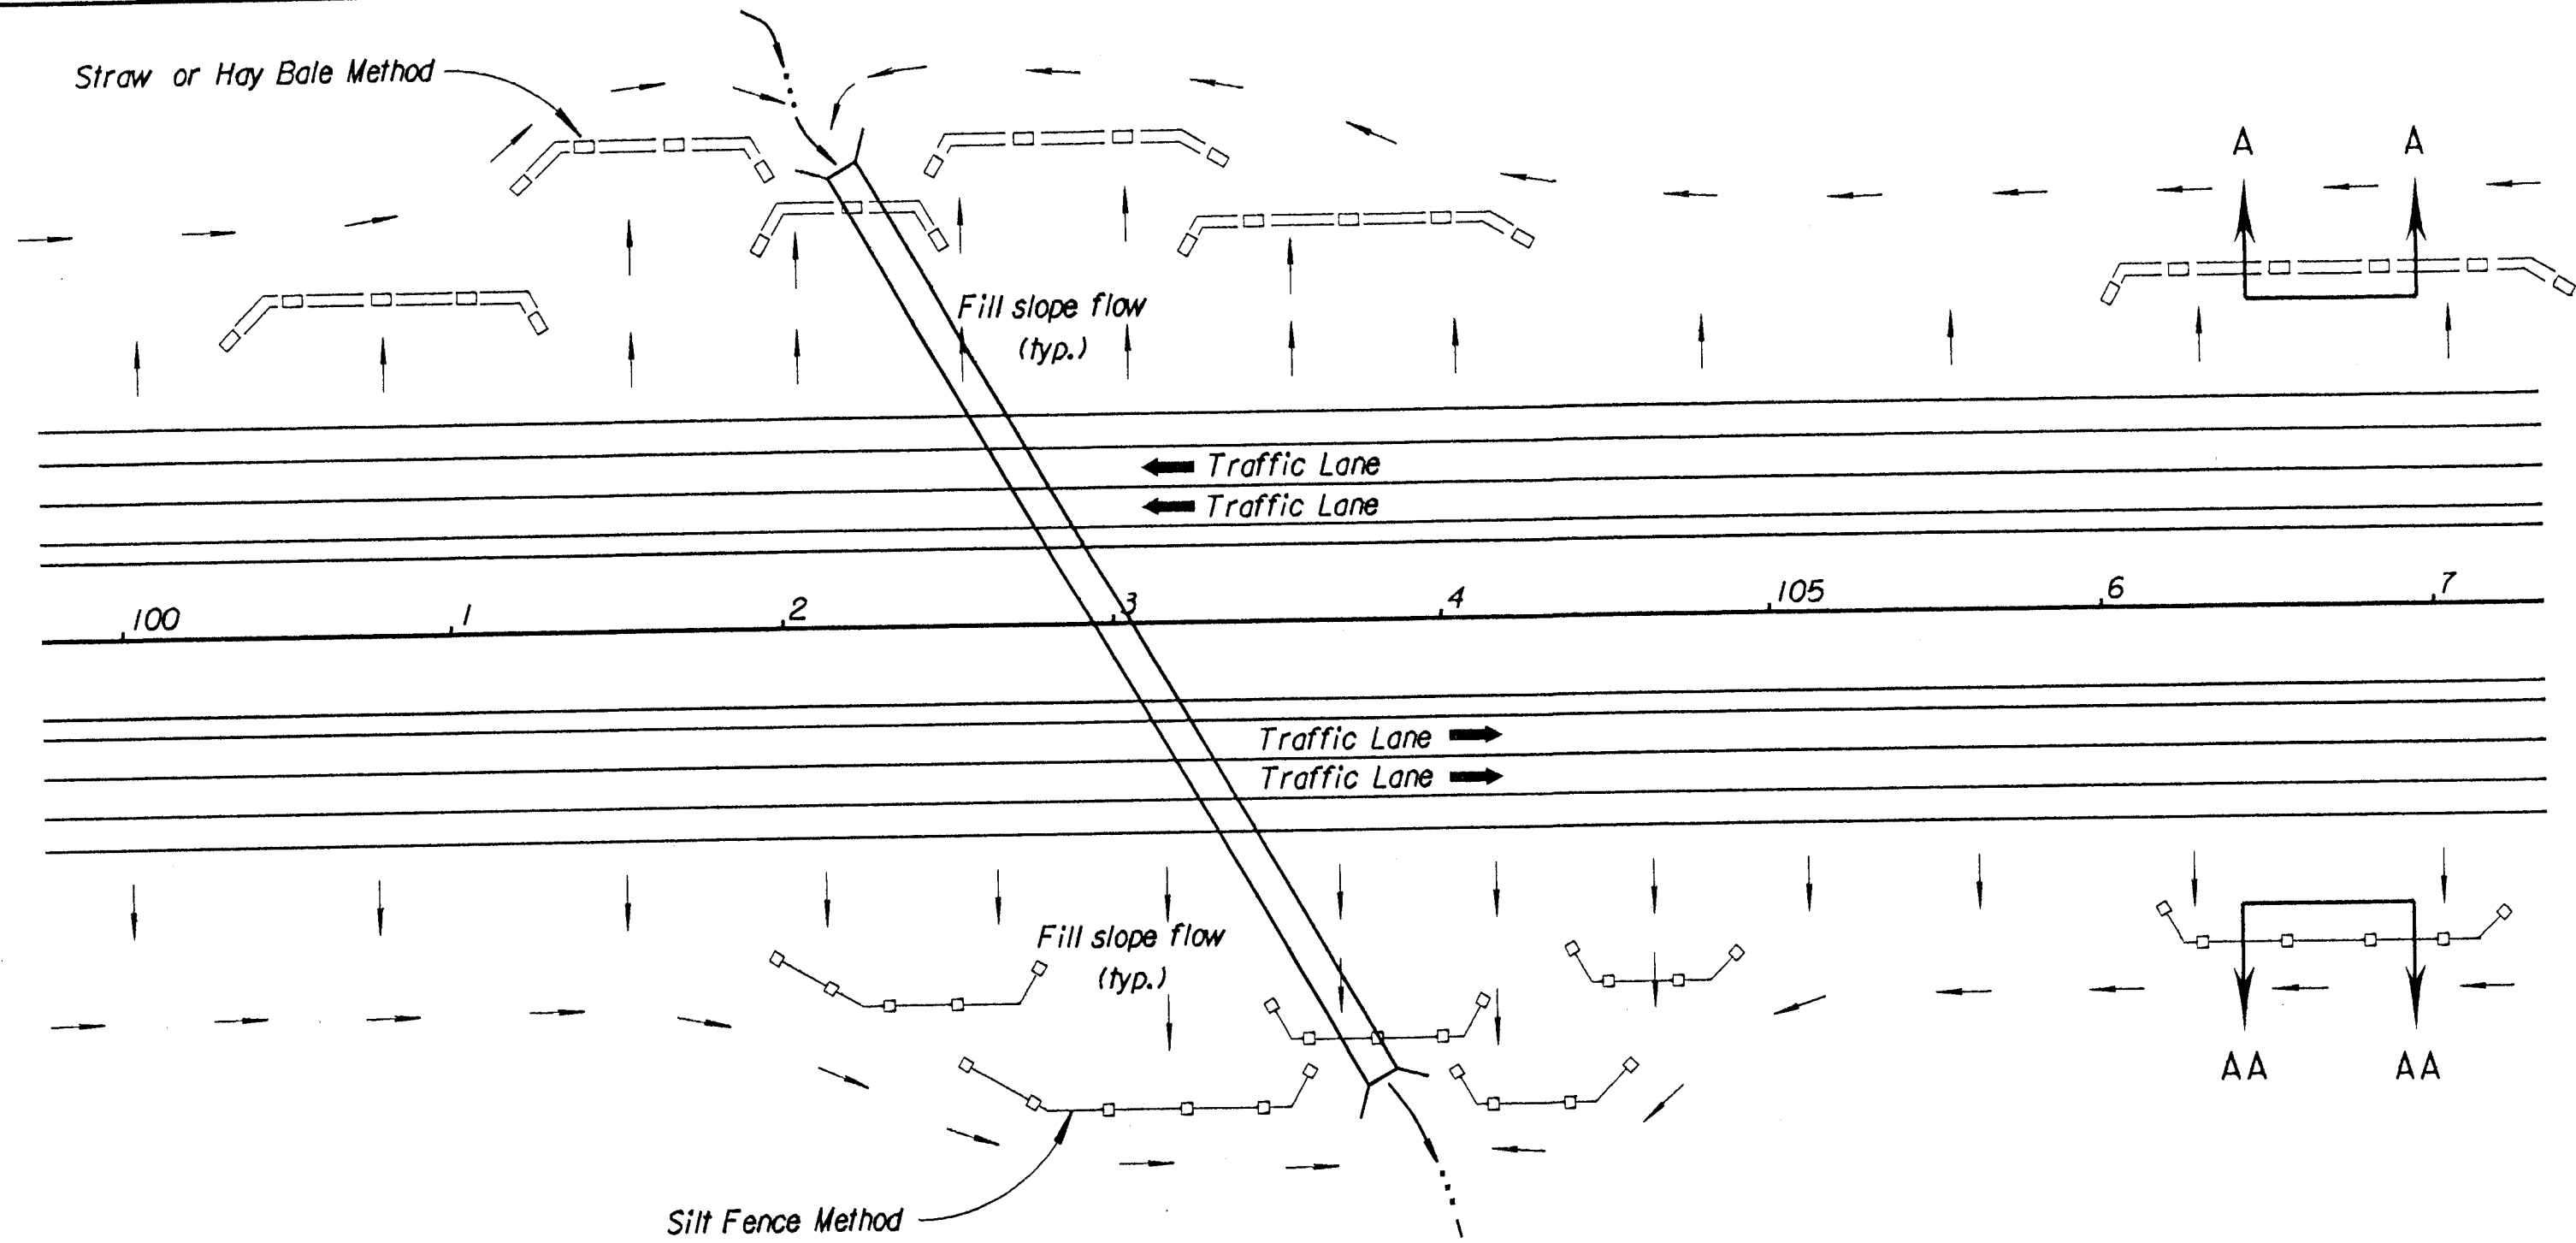

TYPICAL PLAN
NO SCALE

LEGEND OF TEMPORARY
SLOPE SILT CONTROL METHODS

Silt Fence Barrier

Straw or Hay Bale Barrier


GENERAL NOTES

- 1) The usage of Straw or Hay Bales or Silt Fence is at the option of the Contractor. The symbols shown in the Typical Plan shall in no way be interpreted nor implied as to the usage of Slope Barrier Types.
- 2) The slope barriers shall be placed along contour lines, with a short section turned upgrade at each end of the barrier.
- 3) At culverts, the Straw or Hay Bales or Silt Fence shall be placed over the culvert, not through the streambed flowline.


INSTALLATION NOTES

- STRAW OR HAY BALES:
1. Place Bales tightly together, with loose straw or hay wedged between Bales to close off any openings.
 2. Wood Stakes shall be 50 mm x 50 mm (nom.) x 1 200 mm long (min.)
 3. Refer to plan sheets to estimate the linear footage of Bales required.
 4. Use only twine to bind bales. The use of wire binding is prohibited because it does not readily biodegrade.


- SILT FENCE:
1. Wood Stakes shall be 50 mm x 50 mm (nom.) x 1 200 mm long (min.)
 2. Attach Fence Fabric to wood stakes with staples, wire, or nails.
 3. Refer to plan sheets to estimate the linear footage of Silt Fence required.

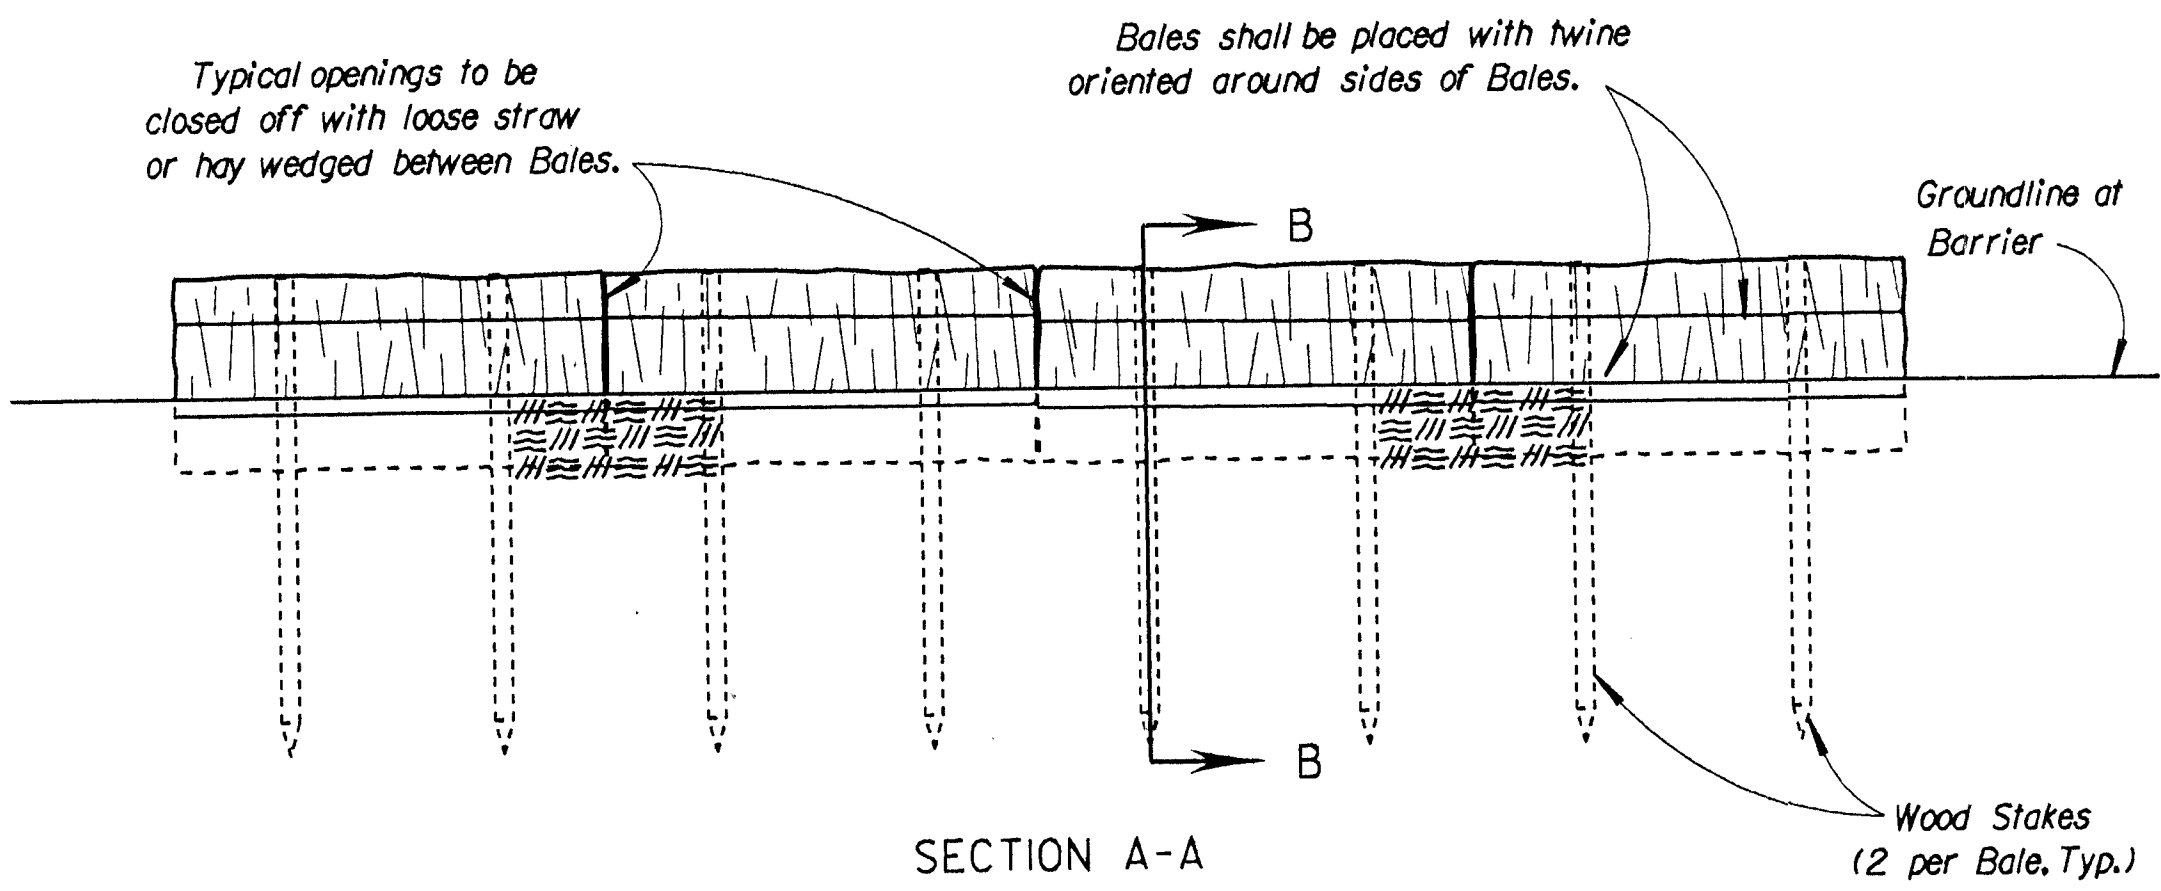


STRAW BALE SLOPE BARRIER
NO SCALE

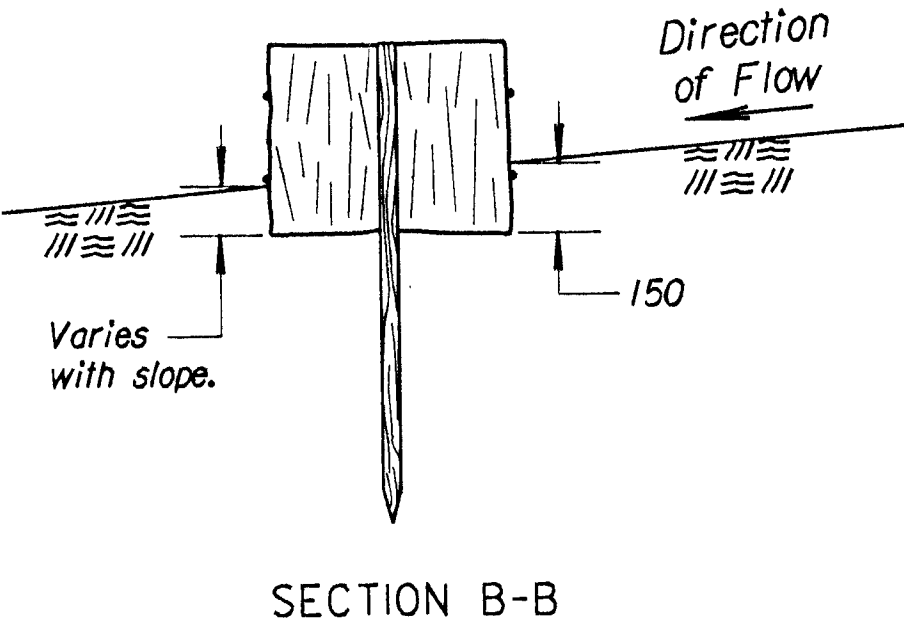

SECTION B-B

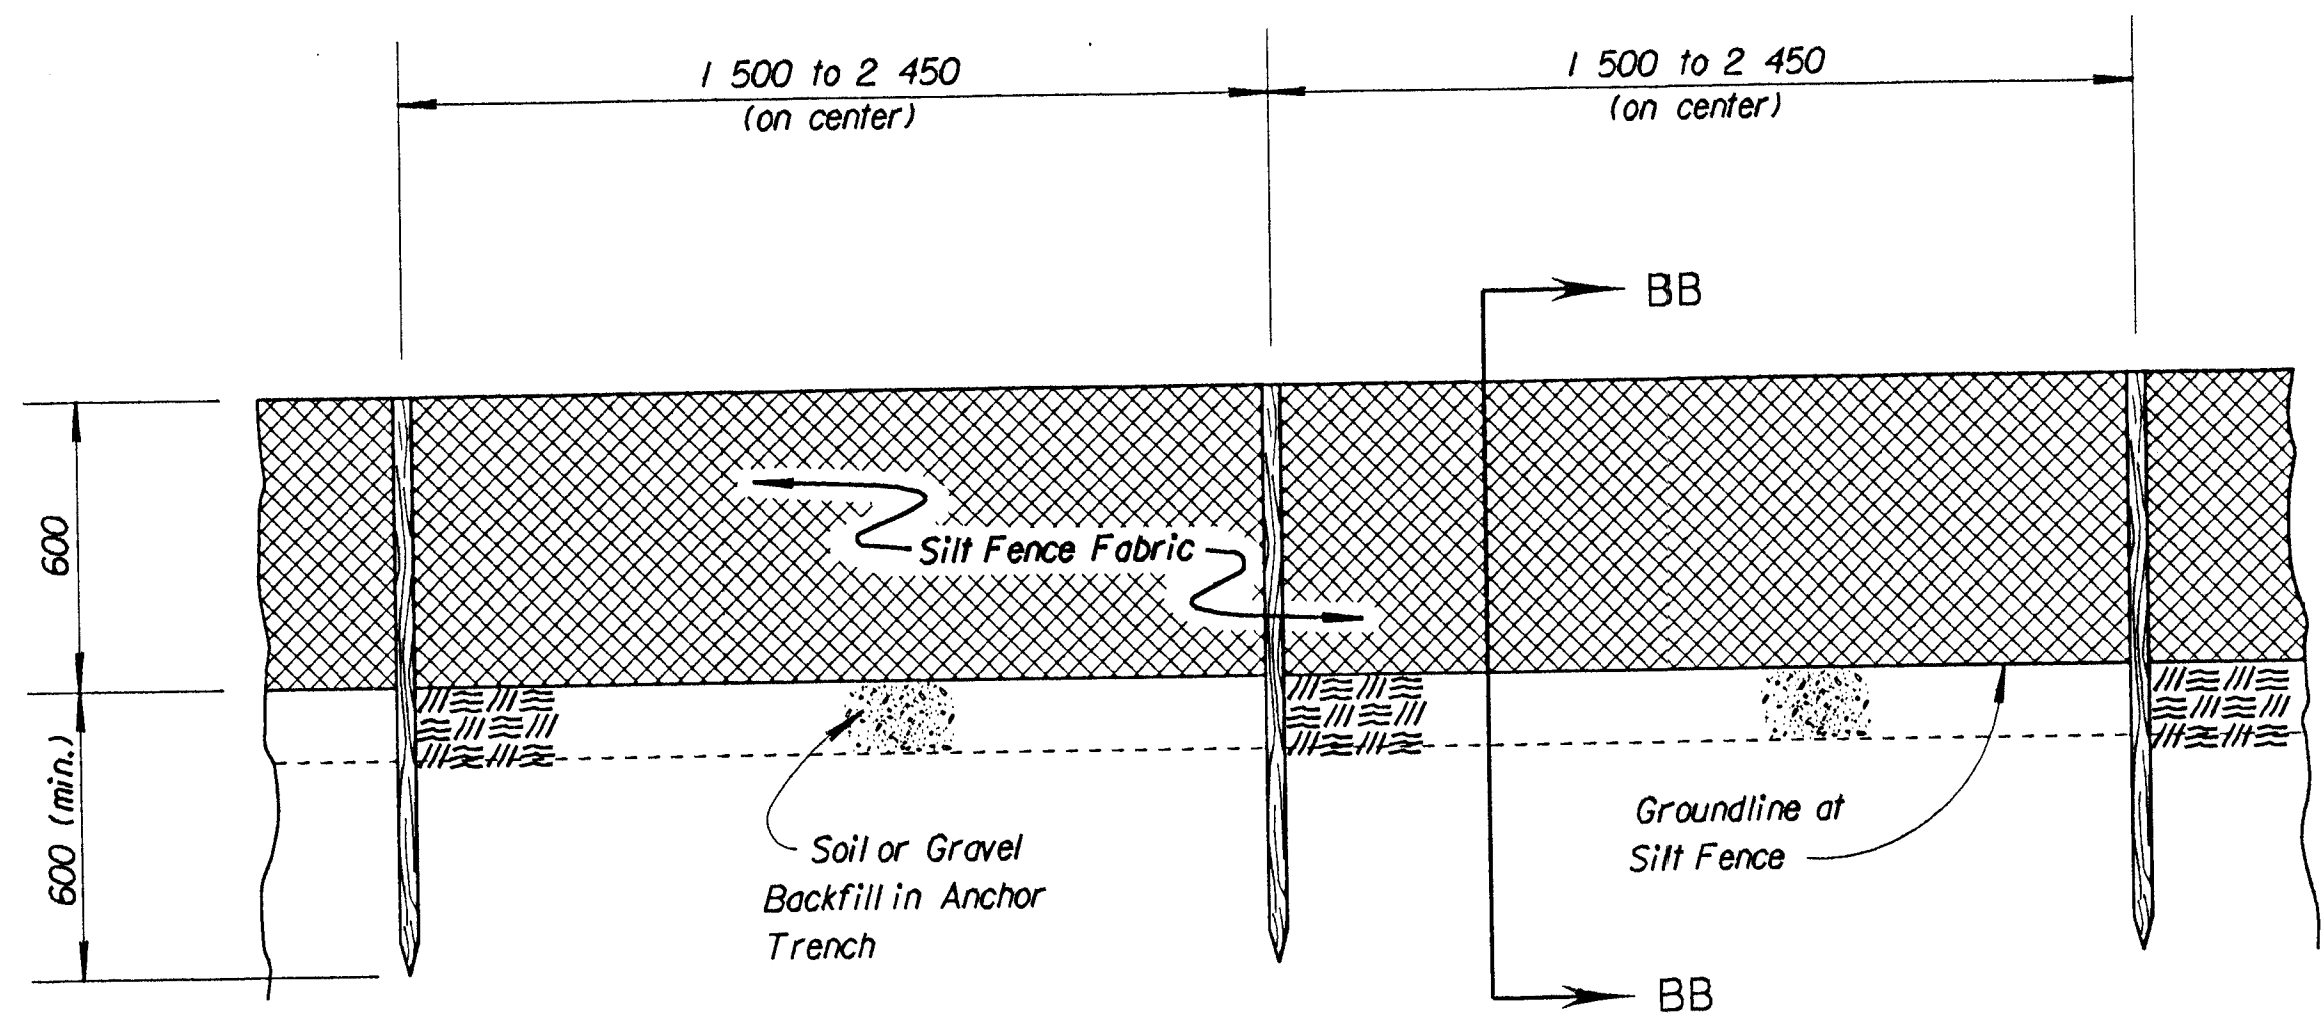

SILT FENCE SLOPE BARRIER
NO SCALE

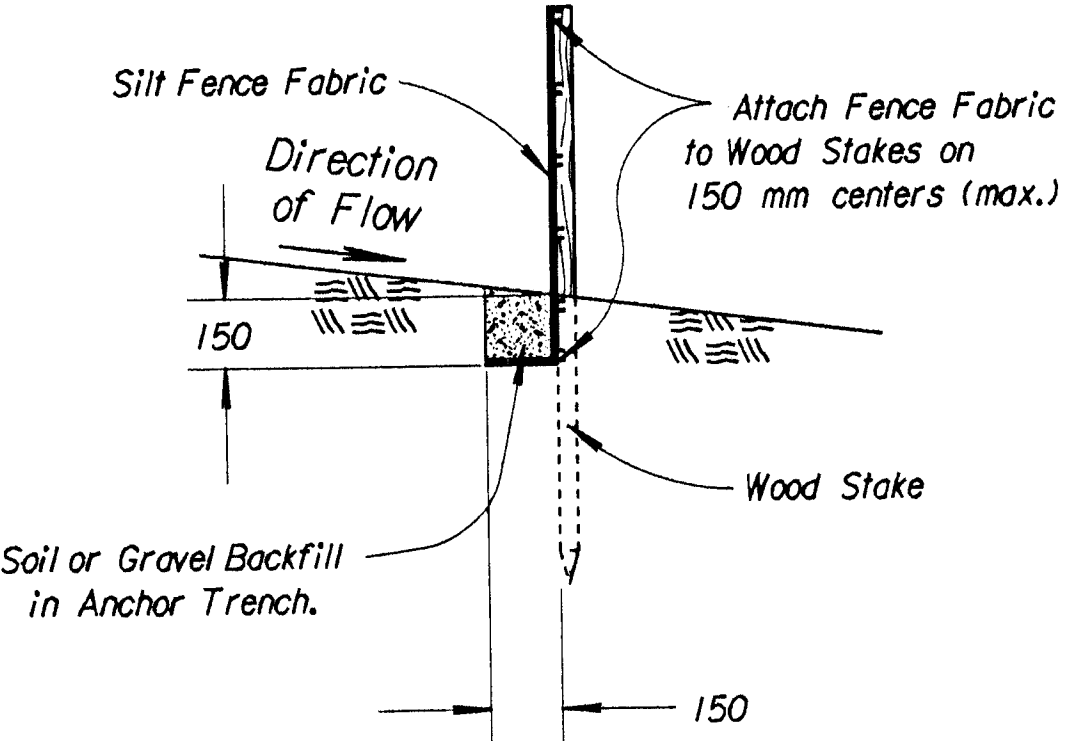

SECTION BB-BB

125
202

3					
2	3/17/97	Revise Silt Fence Stake Length	WCL	RDR	
1	7-5-95	Convert to SI	WCL	RDR	
NO.	DATE	REVISIONS	BY	APP'D	

KANSAS DEPARTMENT OF TRANSPORTATION
TEMPORARY PROJECT WATER
POLLUTION CONTROL
STRAW OR HAY BALE SLOPE BARRIERS
SILT FENCE SLOPE BARRIERS
LA852D SI
F.H.W.A. APPROVAL 4/02/97 APP'D Richard D. Ross
DESIGNED WCL DETAILED WCL QUANTITIES TRACED DAK
DESIGN CK. RDR DETAIL CK. WCL QUAN. CK. TRACE CK. WCL