

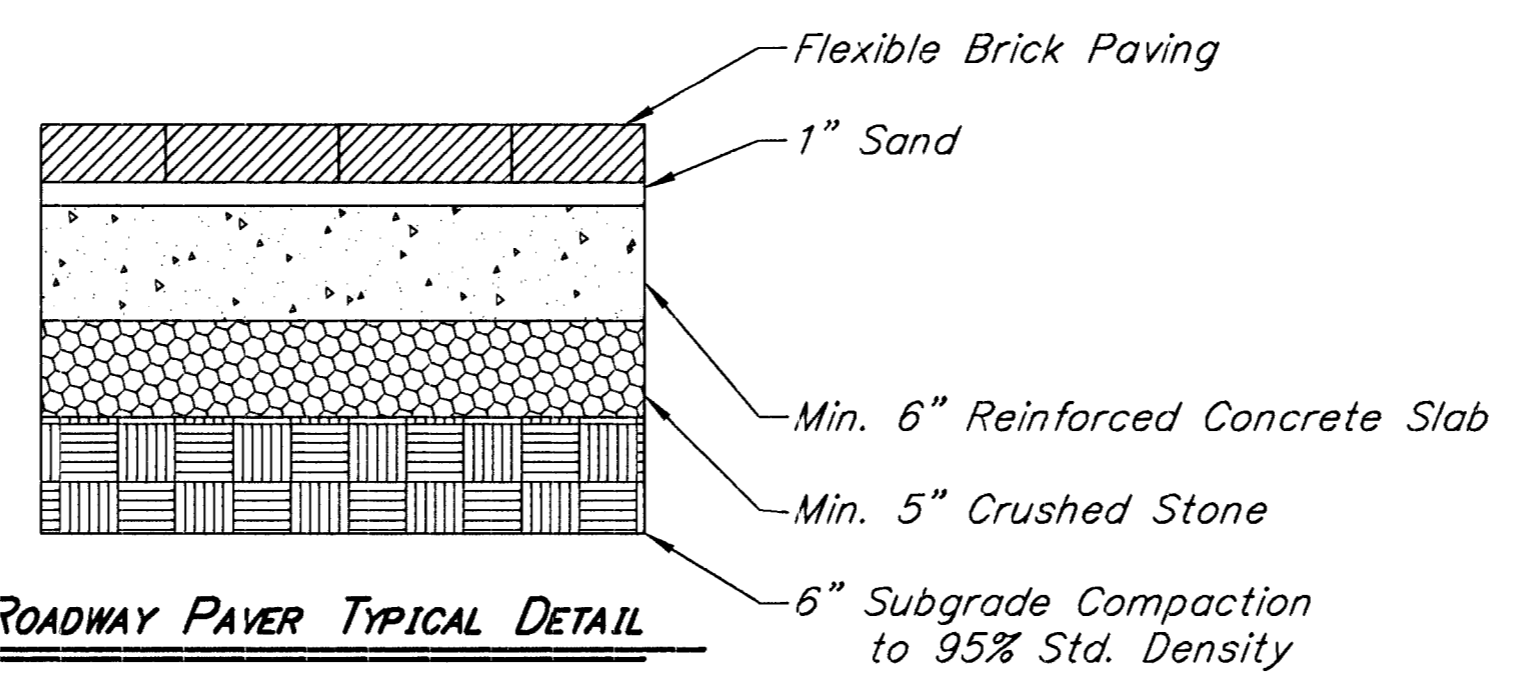


**SIDEWALK PAVEMENT TYPICAL DETAIL**

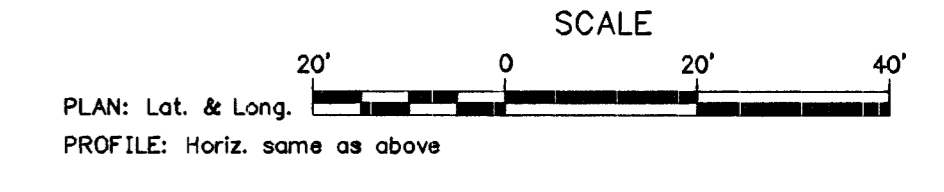



**ROADWAY PAVEMENT TYPICAL DETAIL**

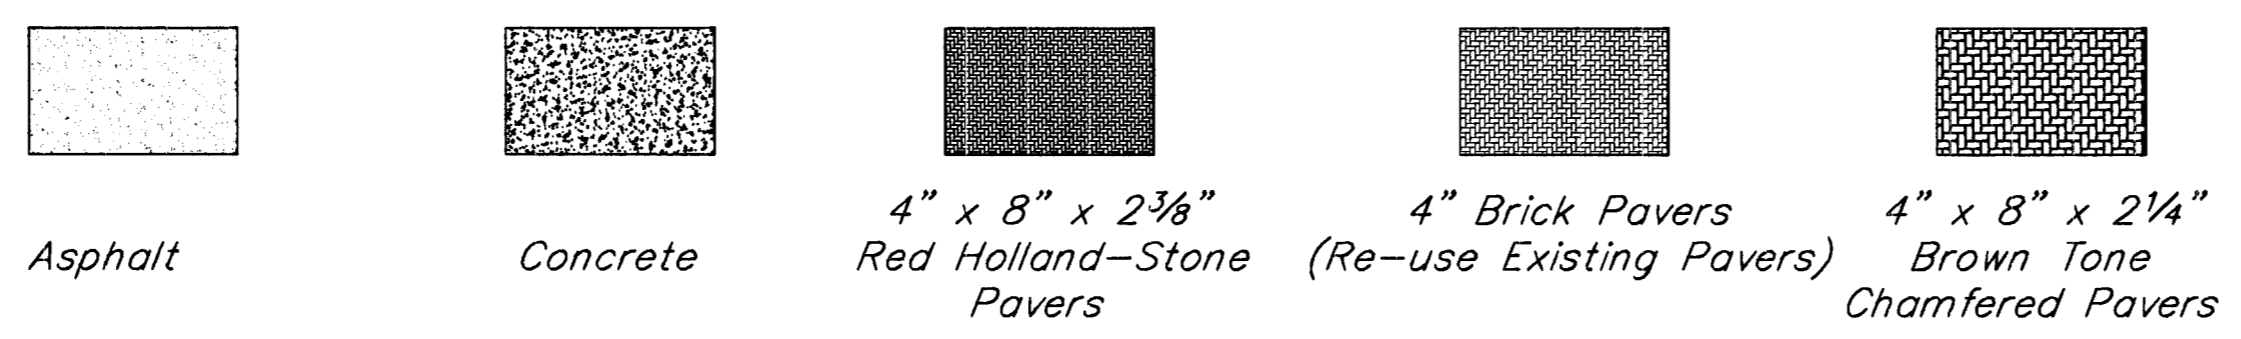

**PAVING BRICK**

- Installation:**
1. Place bedding sand to a uniform depth and level to grade.
  2. Install Paving Bricks with an average 1/8" joint between units, with a minimum 1/16" and a maximum 1/4" joint.
  3. Where required, cut pavers with an approved cutter to fit accurately, neatly and without damaged edges.
  4. Tamp pavers with mechanical vibrator until uniformly level, true to grade, and free of movement.
  5. Fill joints with sand.

**BOND PATTERN**

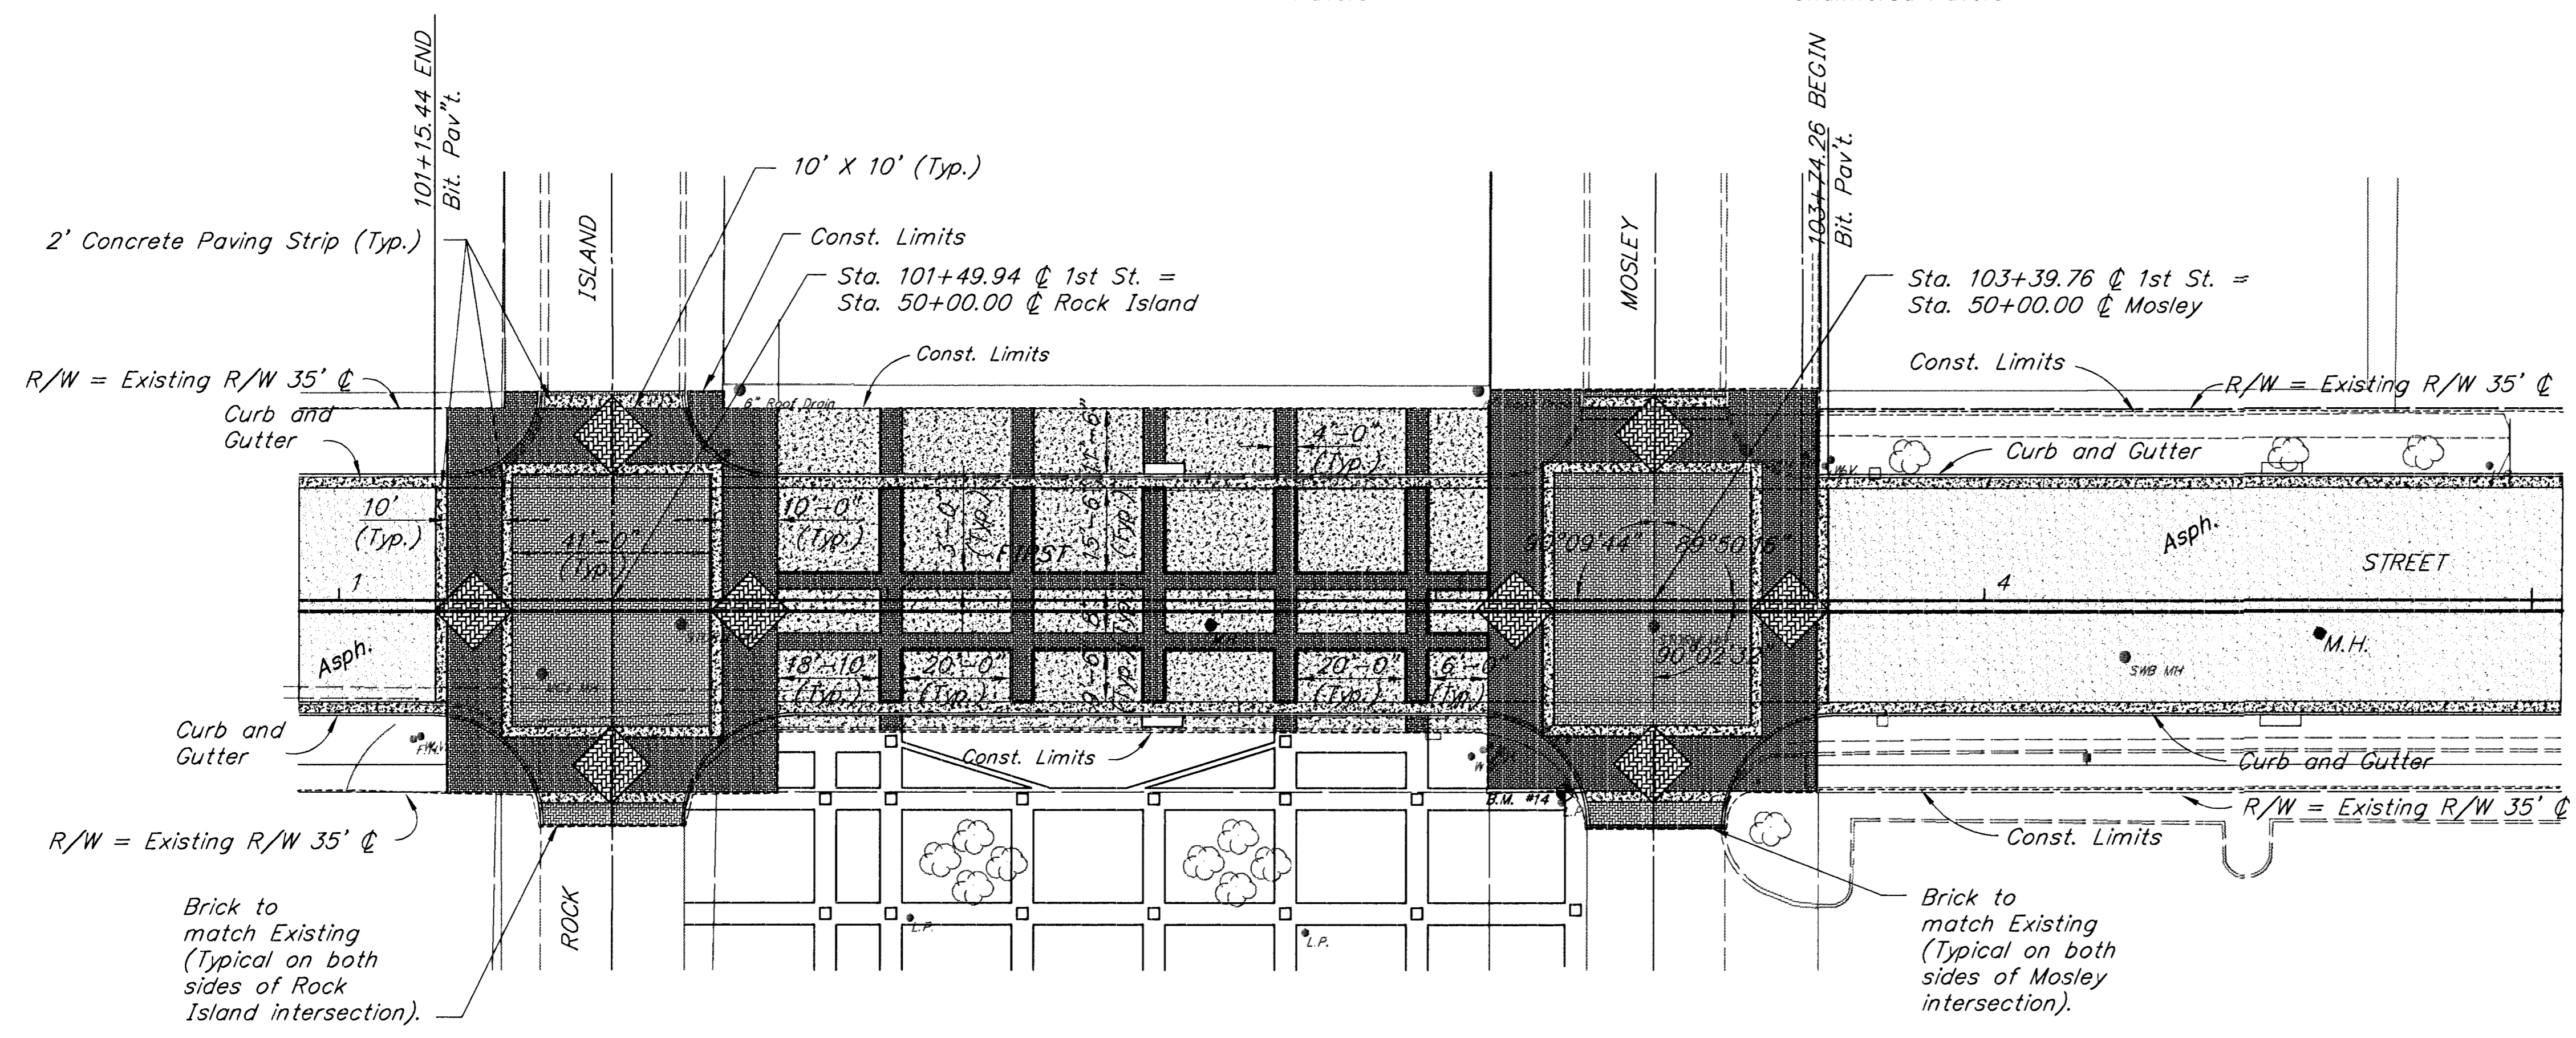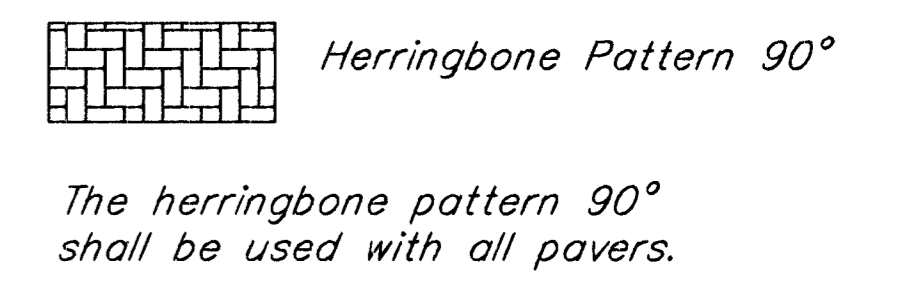

CITY OF WICHITA	
FIRST STREET	
BRICK PAVEMENT DETAIL	
SCALE 1"=20'	DATE MAY, 1997
DWG. NO. K9540	

SURV. PLOT CADD DES. CADD DR. J.R. IR. CKD. M.W. APP. S.K.B. Last Plot-Date: 01/07/97 Plot-Time: 3:30 P.M.

F:\K9540\DETAIL SCALE 1"=20'