



PLOTTED: Wednesday, October 13, 2021 @ 03:31PM

PERFORATED SQUARE STEEL TUBE (P.S.S.T.) POST SETUP

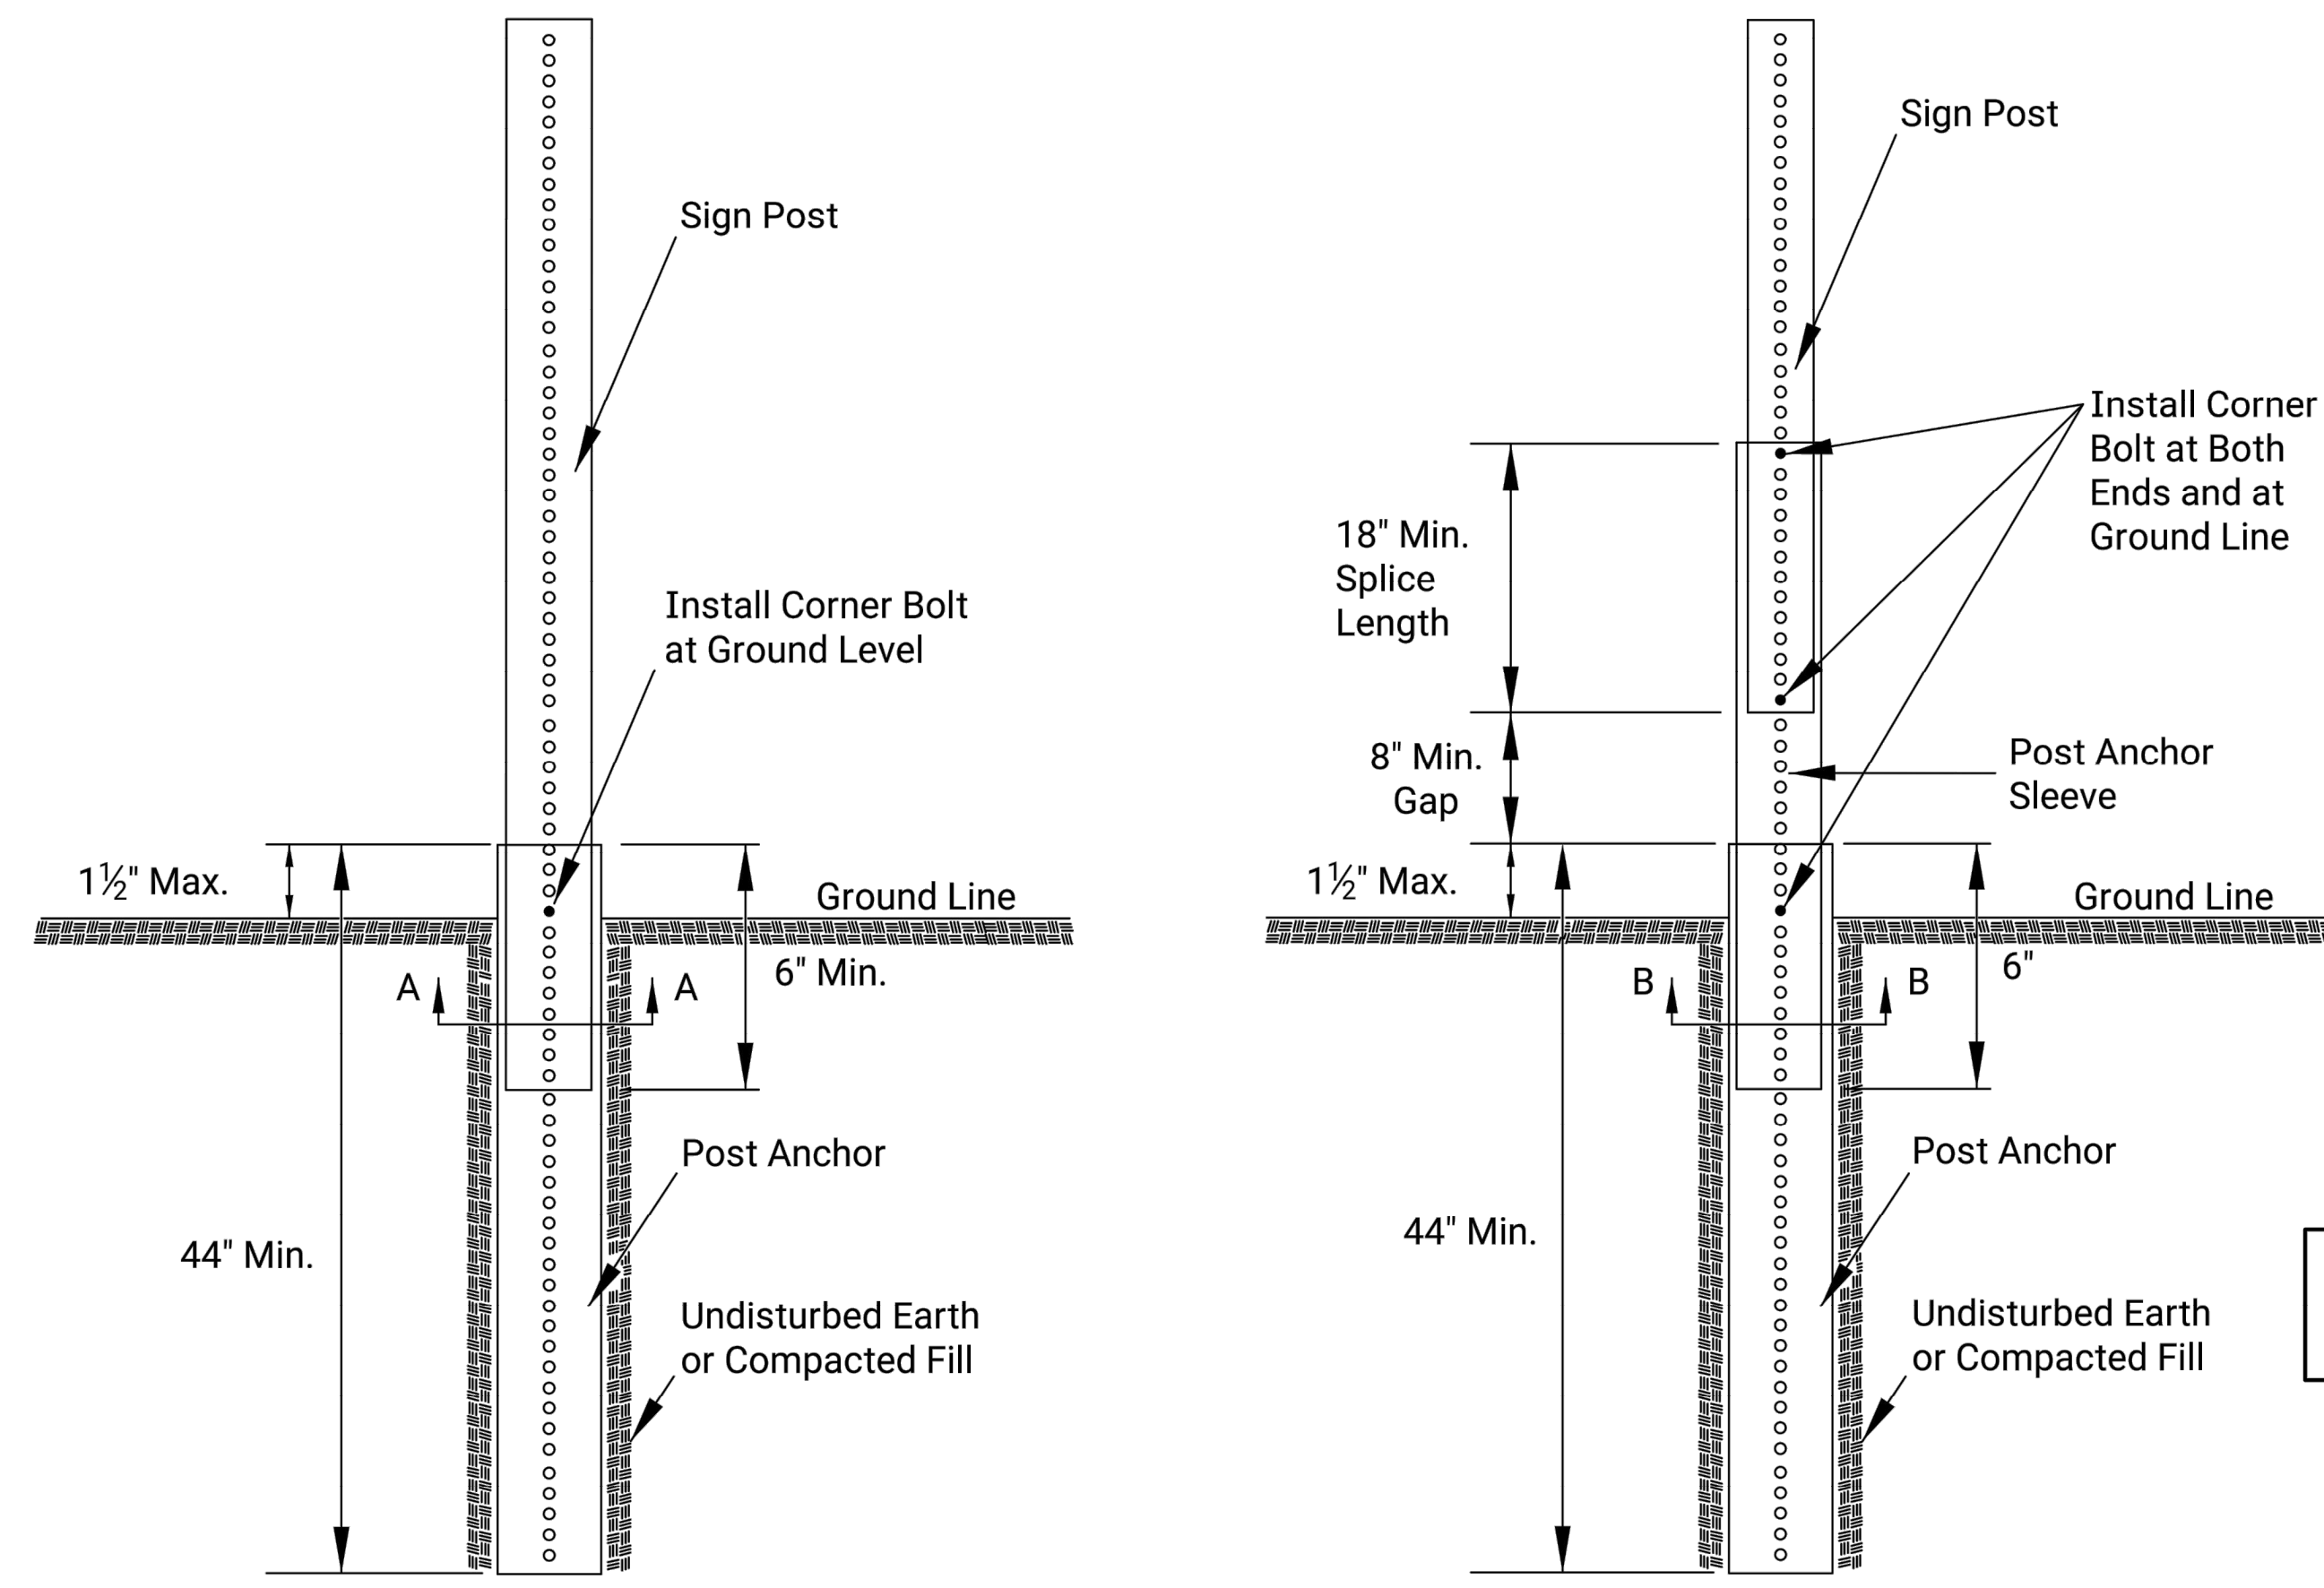


P.S.S.T. Detail

Telescoping P.S.S.T. Detail

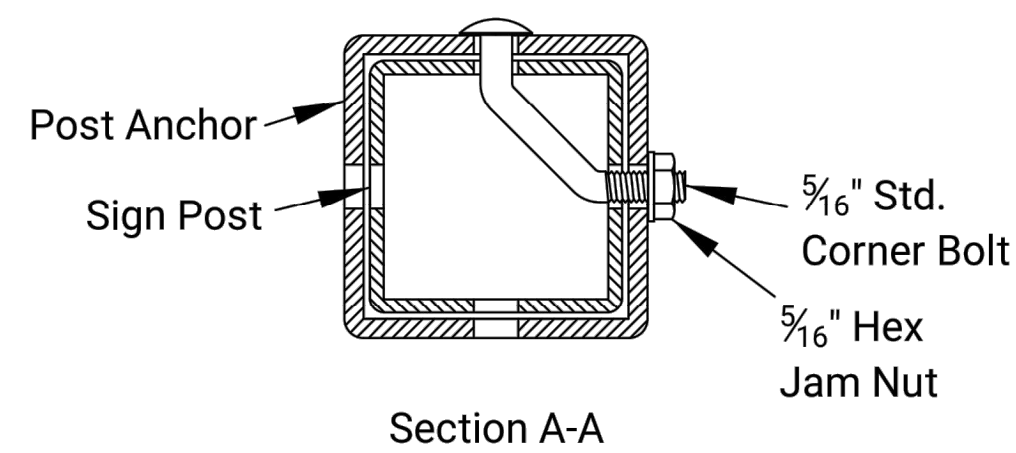

Section A-A

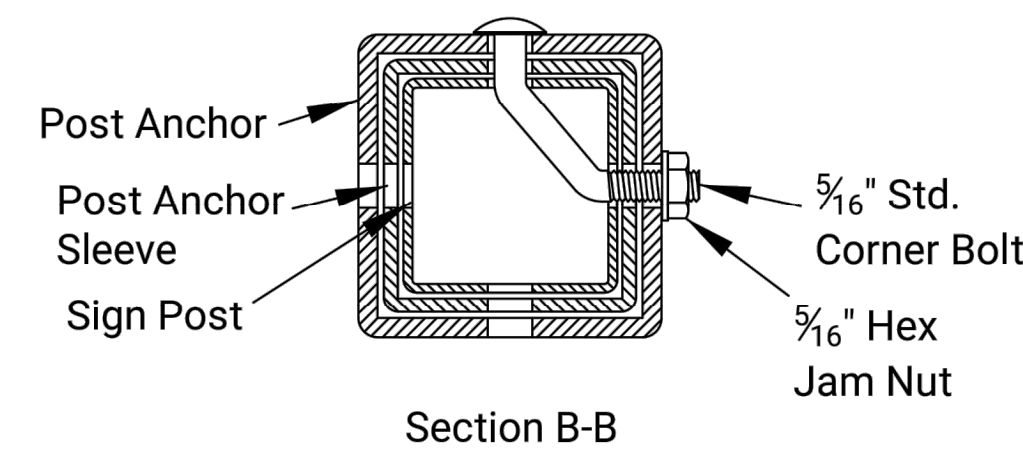


Section B-B

Details for 2", 2 1/4", or 2 1/2" sign posts


Place bolts in the same corner along each sign post.

WOOD POST SETUP

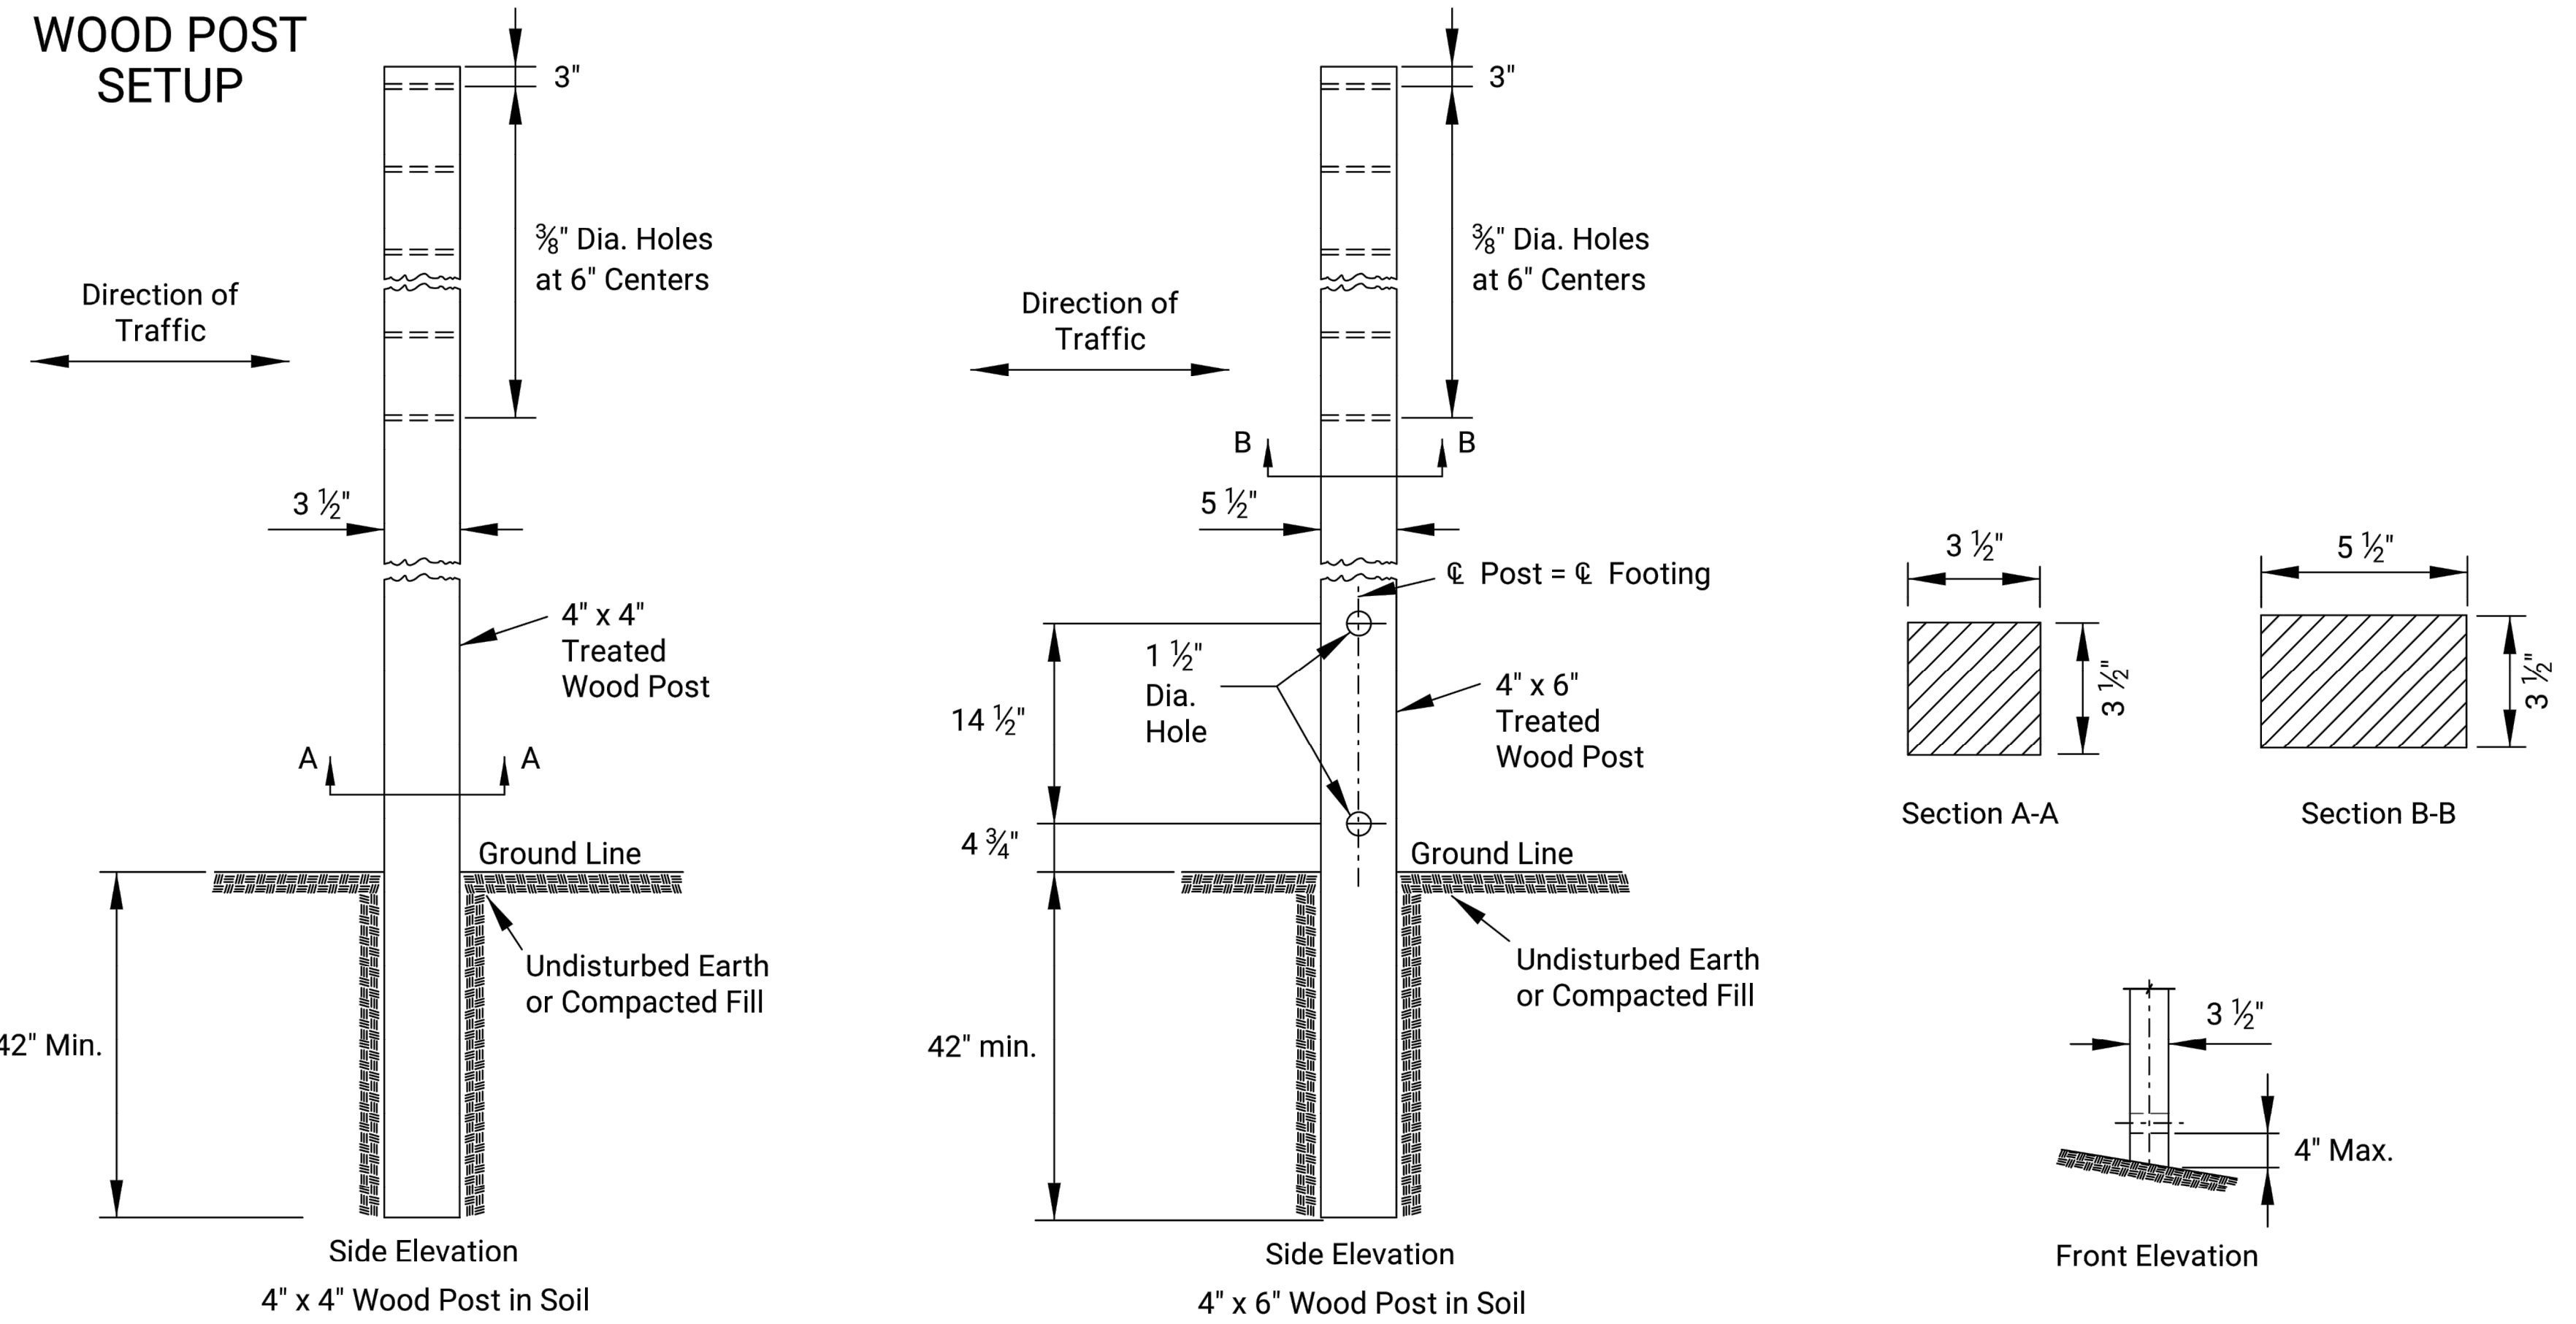


See TE710 for Additional Details and Requirements

3 LB/F U-CHANNEL SETUP

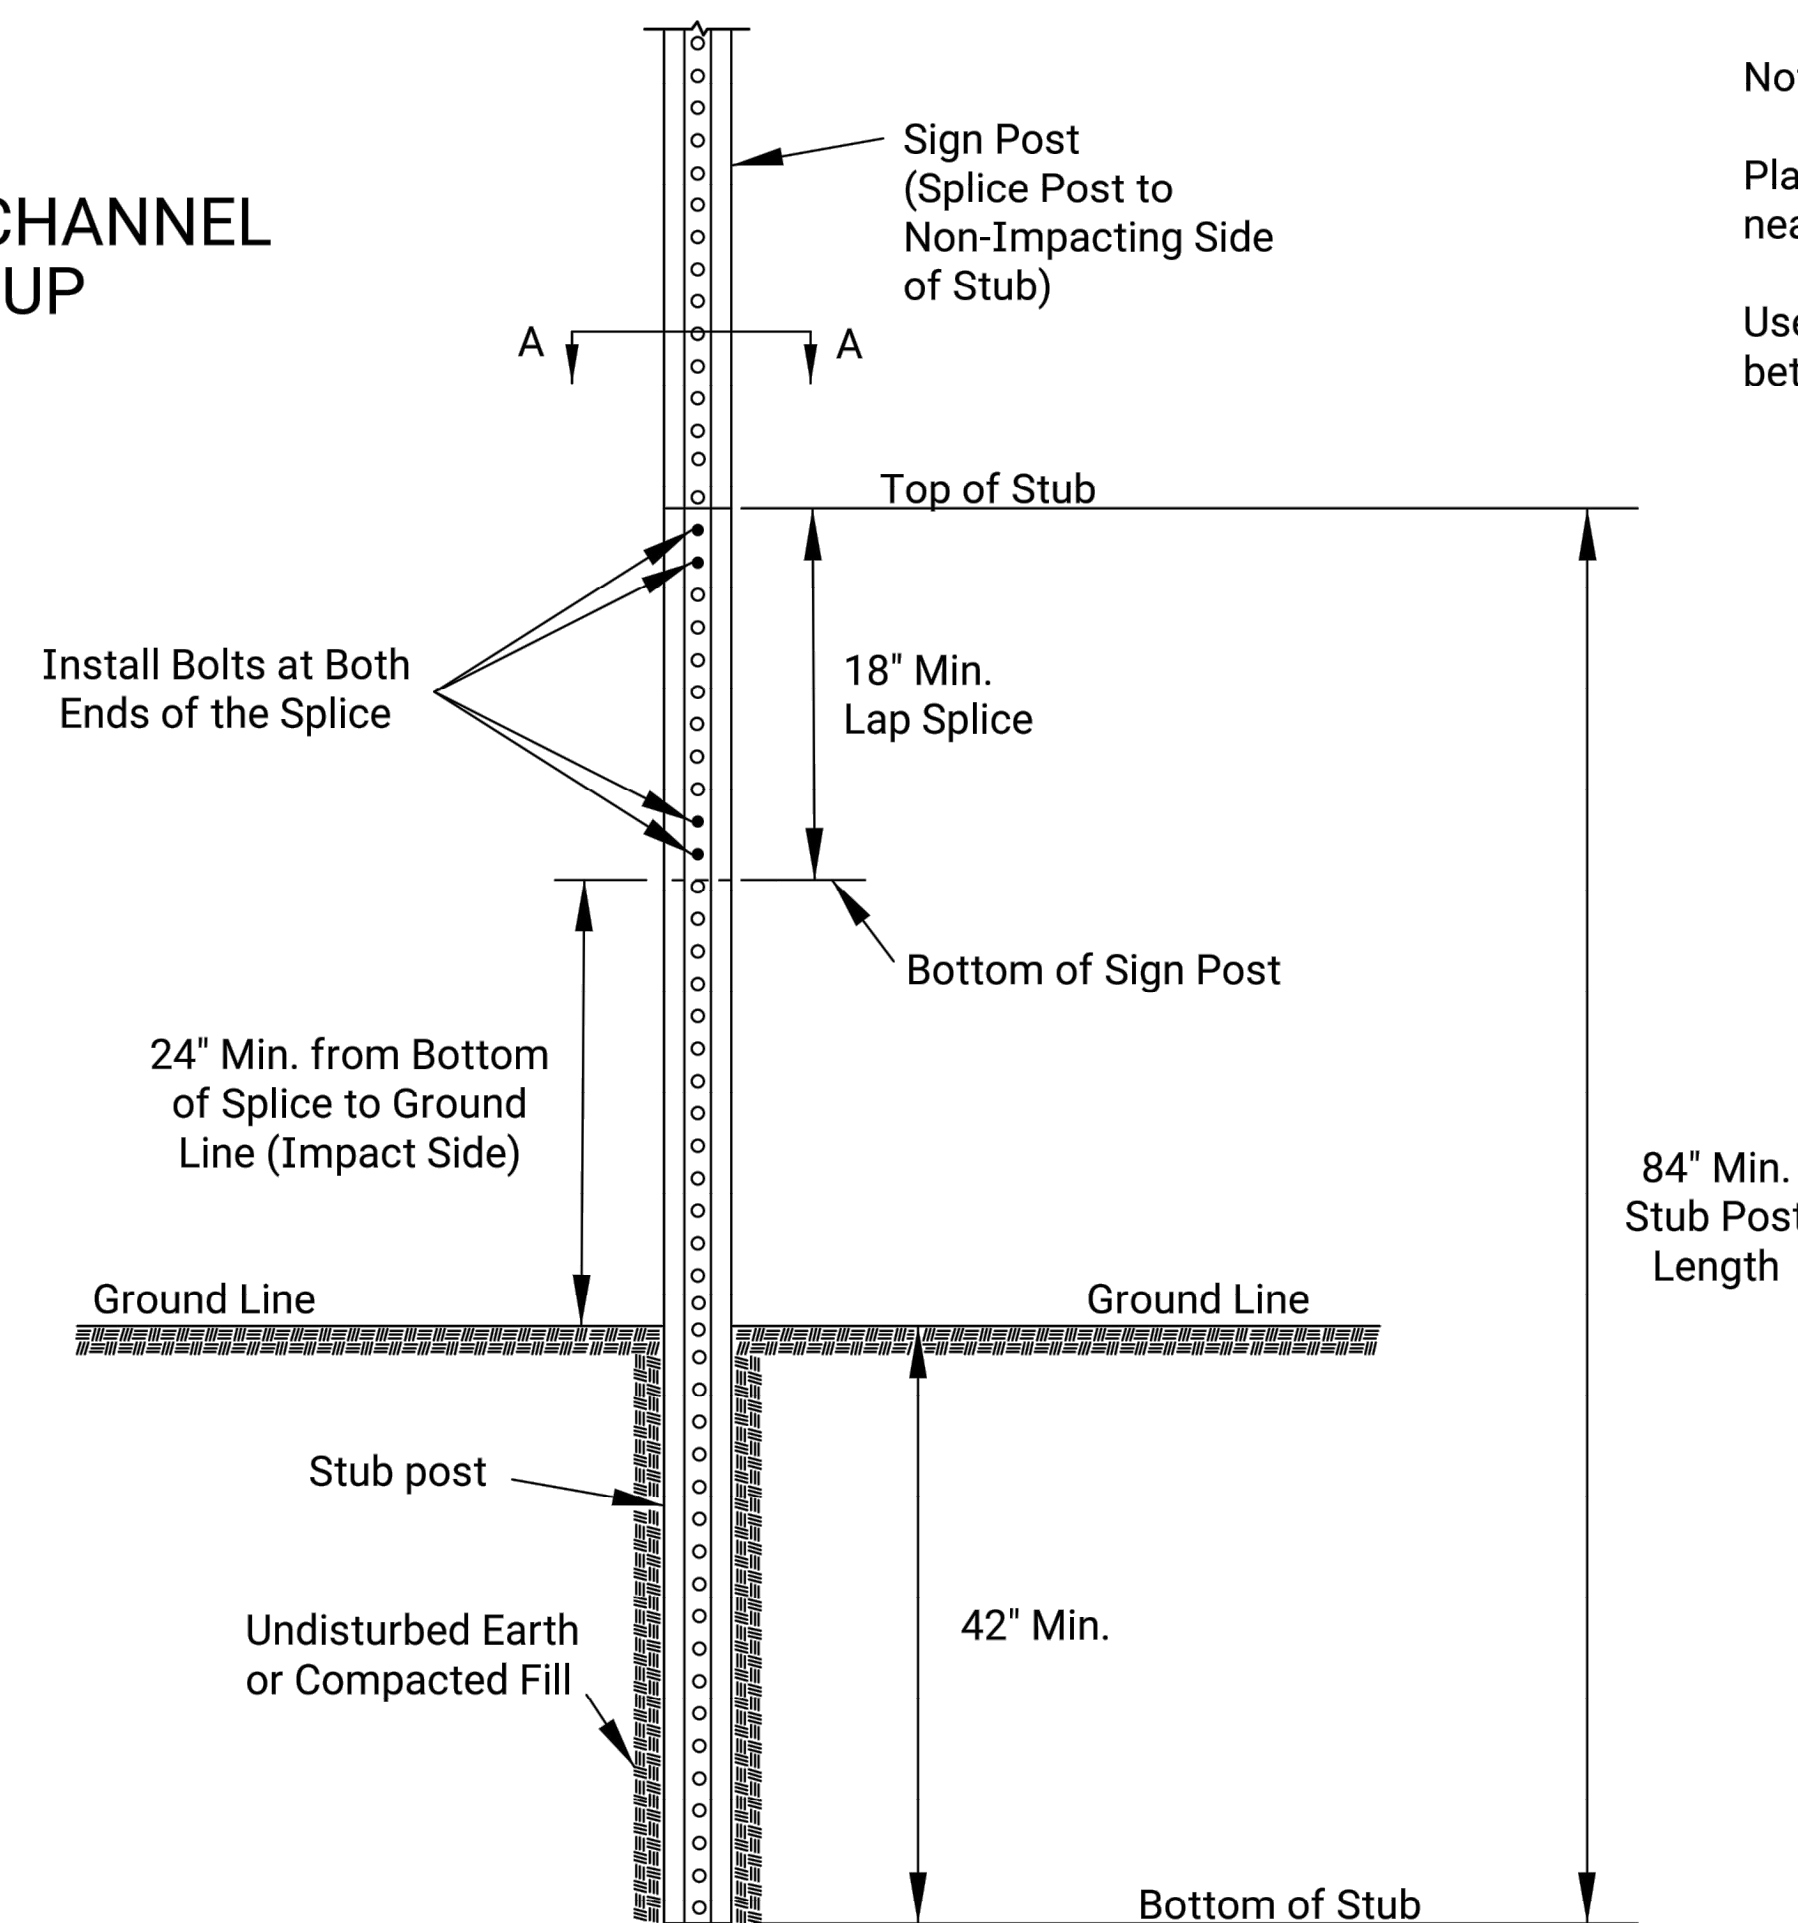

Notes:
Place two bolts at both ends of the splice through the holes nearest the ends of the splice.
Use manufacturer recommended spacers over the bolts between the spliced pieces of U-Channel.

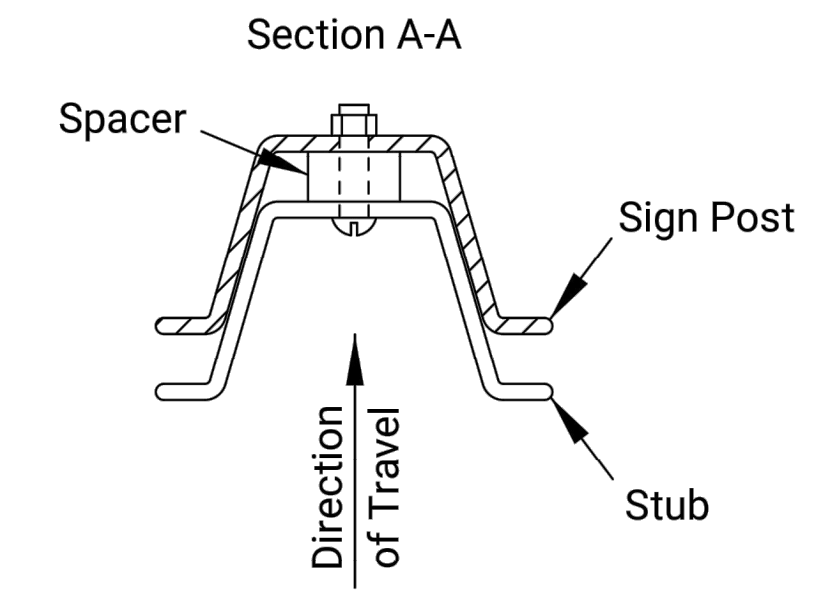

3					
2					
1					
NO.	DATE	REVISIONS	BY	APPD	

KANSAS DEPARTMENT OF TRANSPORTATION

TRAFFIC CONTROL SIGN POSTS

TE712 23

DESIGNED	B.A.H.	DATE	06/01/15	APPD	Kristina Pyle
DESIGN CK.		DETAIL CK.		QUAN. CK.	

J:\PROJECTS\2019\10483_COW_10TH-15TH BRIDGES - 190483 CAD\SHS\05 CIVIL\TRAFFIC\190483_05_5783.DWG