



PLOTTED: Tuesday, April 02, 2024 @ 04:35PM

PERFORATED SQUARE STEEL TUBE (P.S.S.T.) POST SETUP

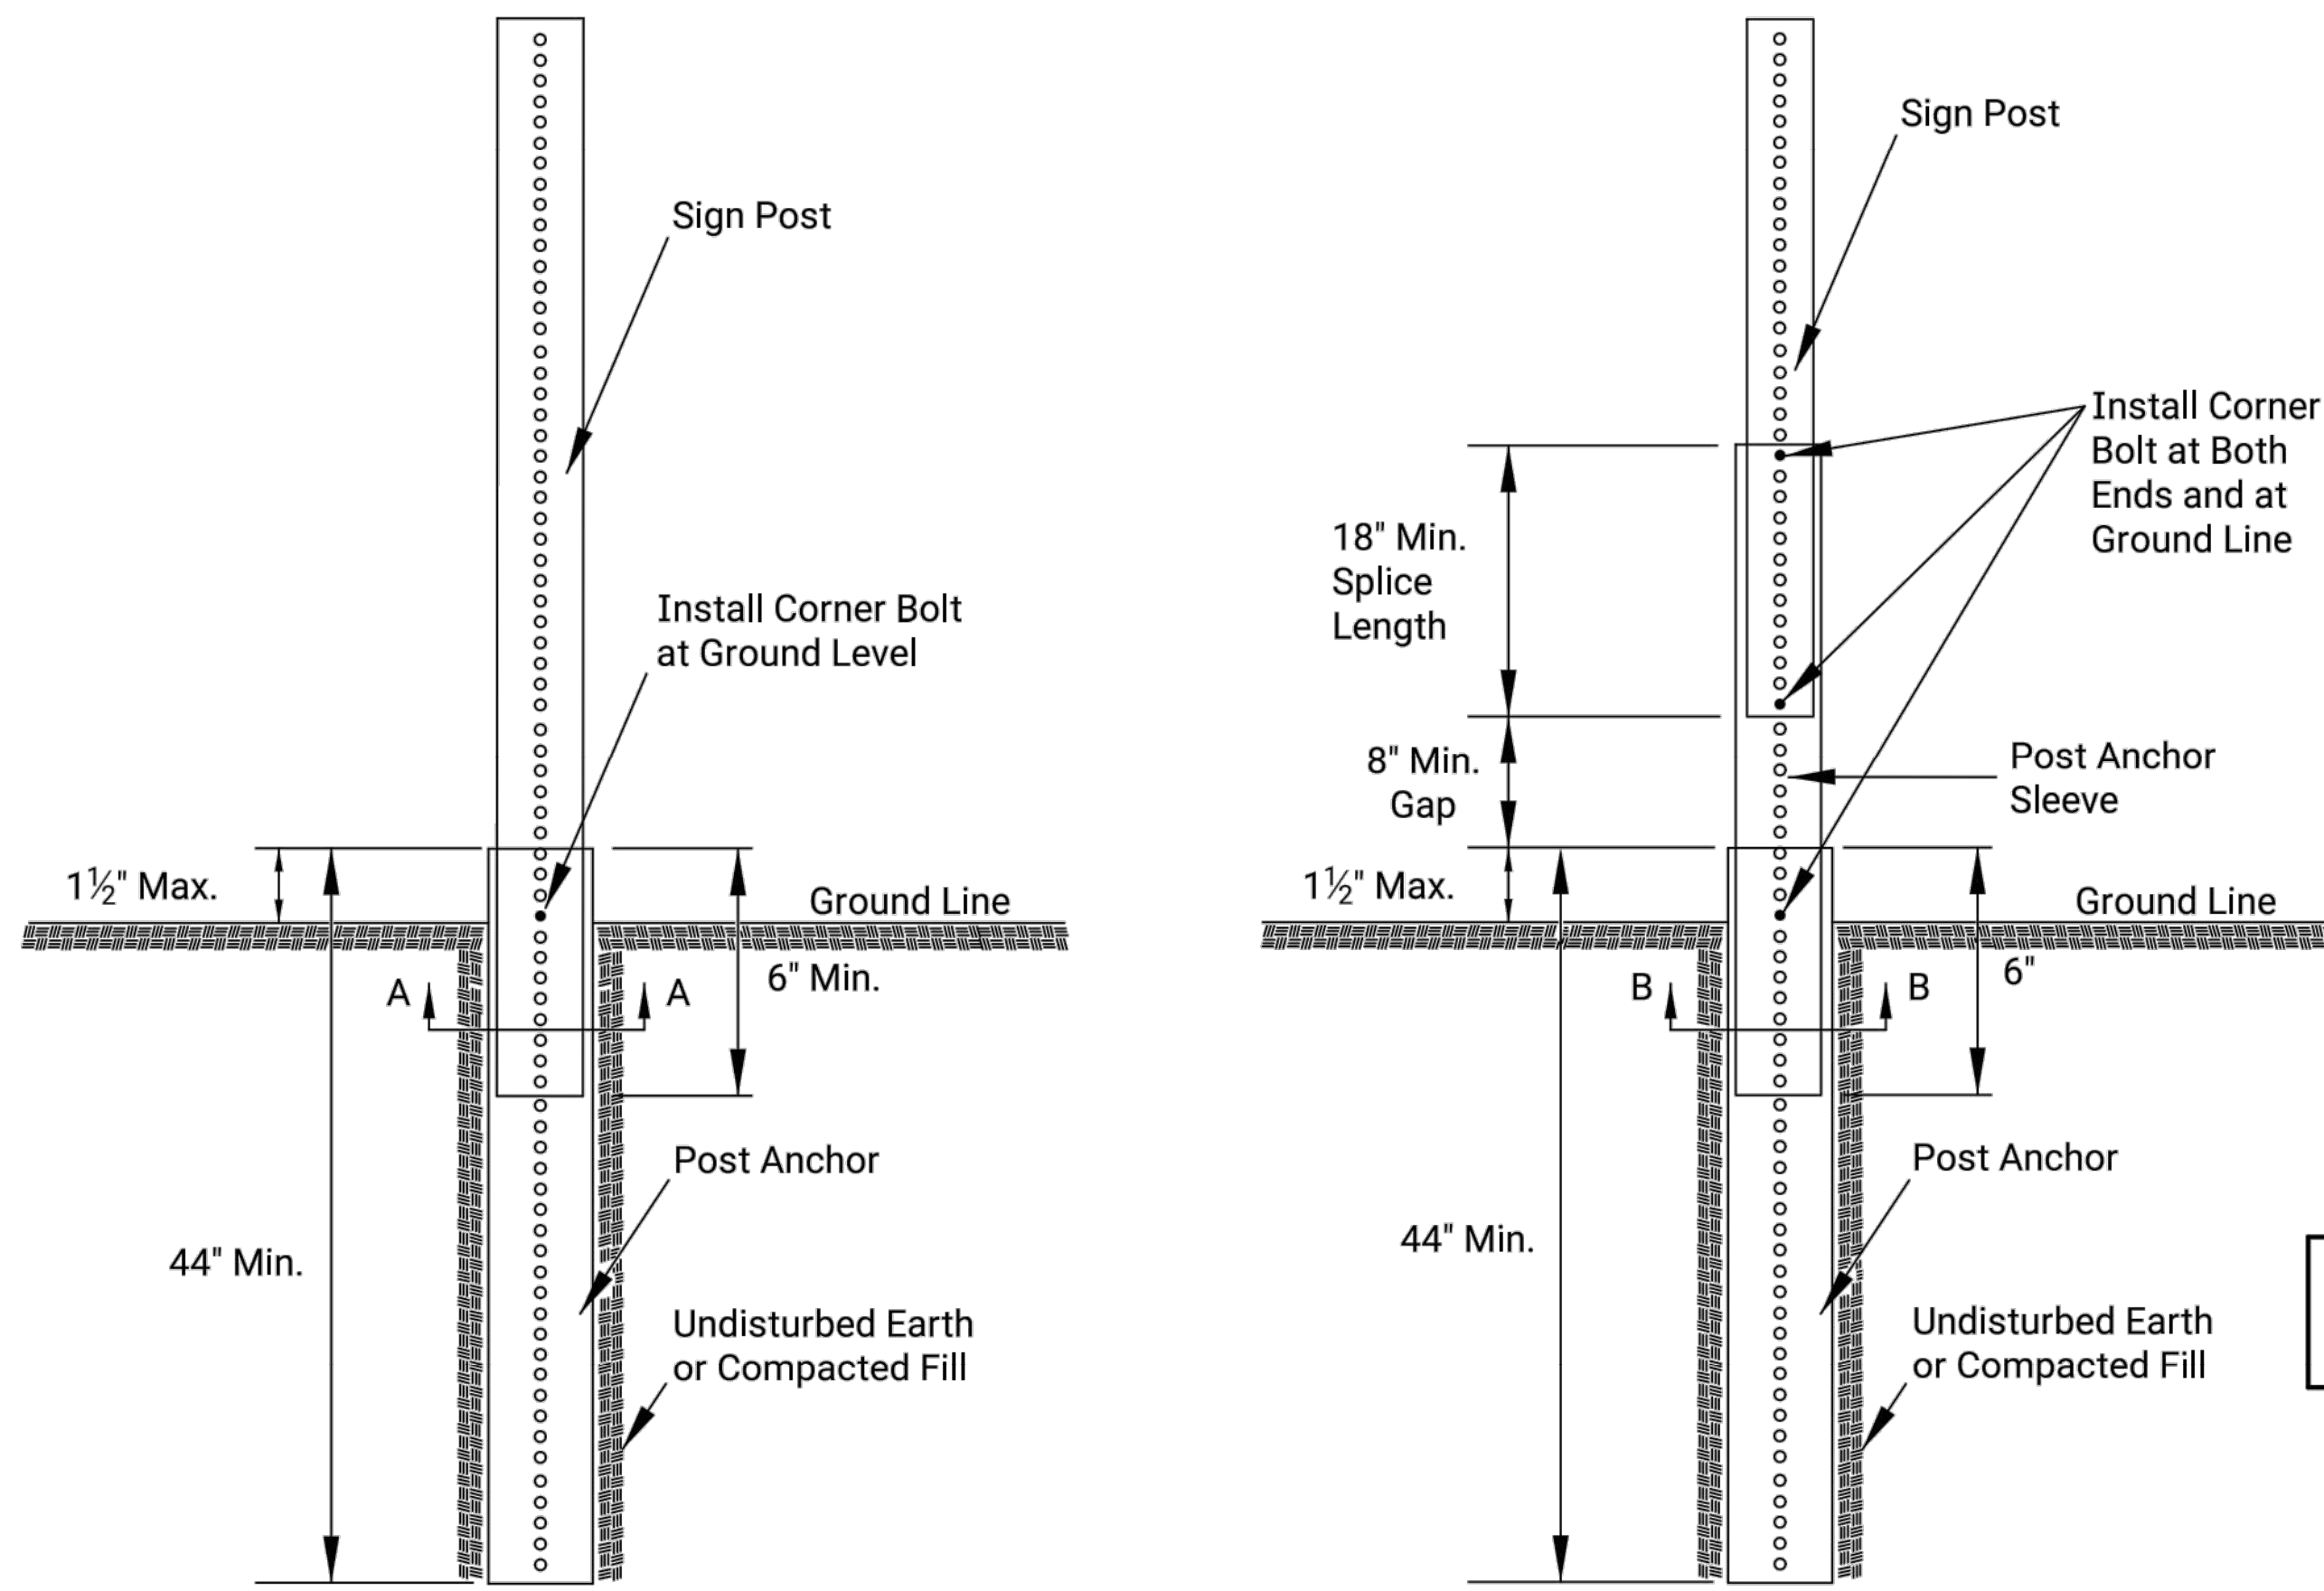


P.S.S.T. Detail

Telescoping P.S.S.T. Detail

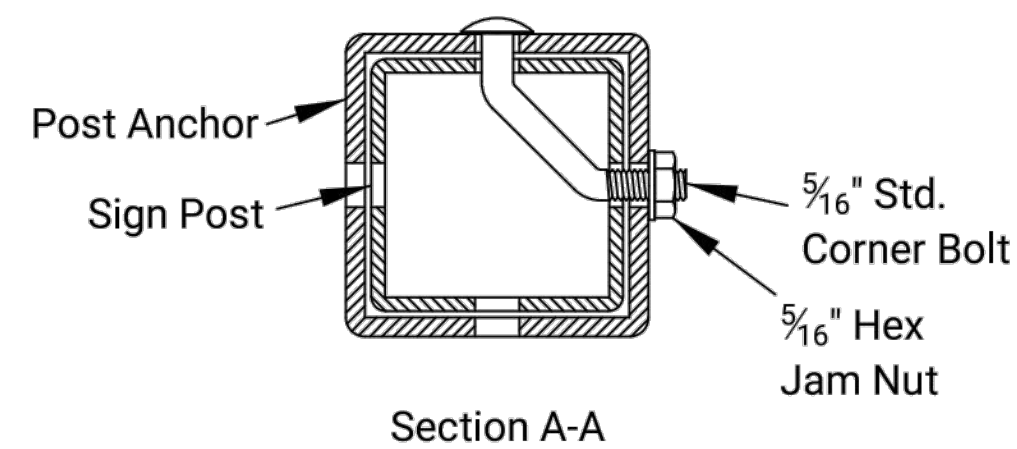

Section A-A

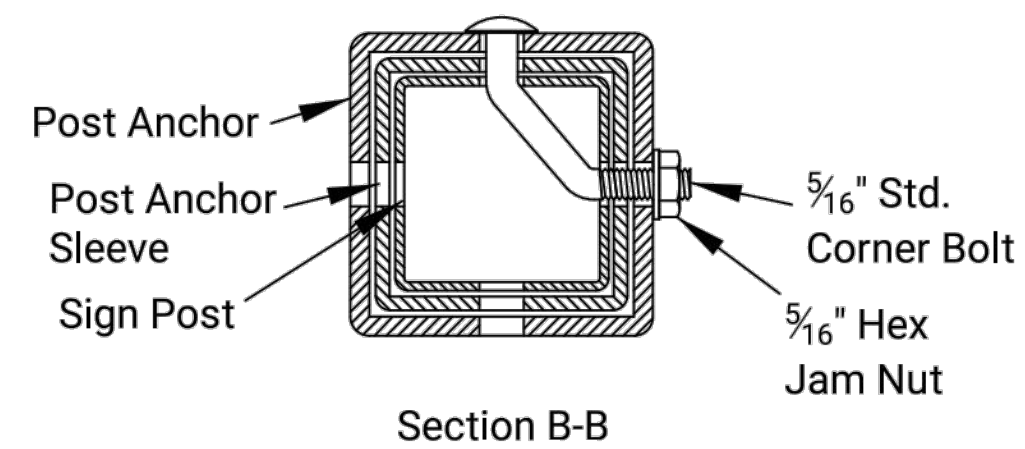


Section B-B

Details for 2", 2 1/4", or 2 1/2" sign posts


Place bolts in the same corner along each sign post.

WOOD POST SETUP

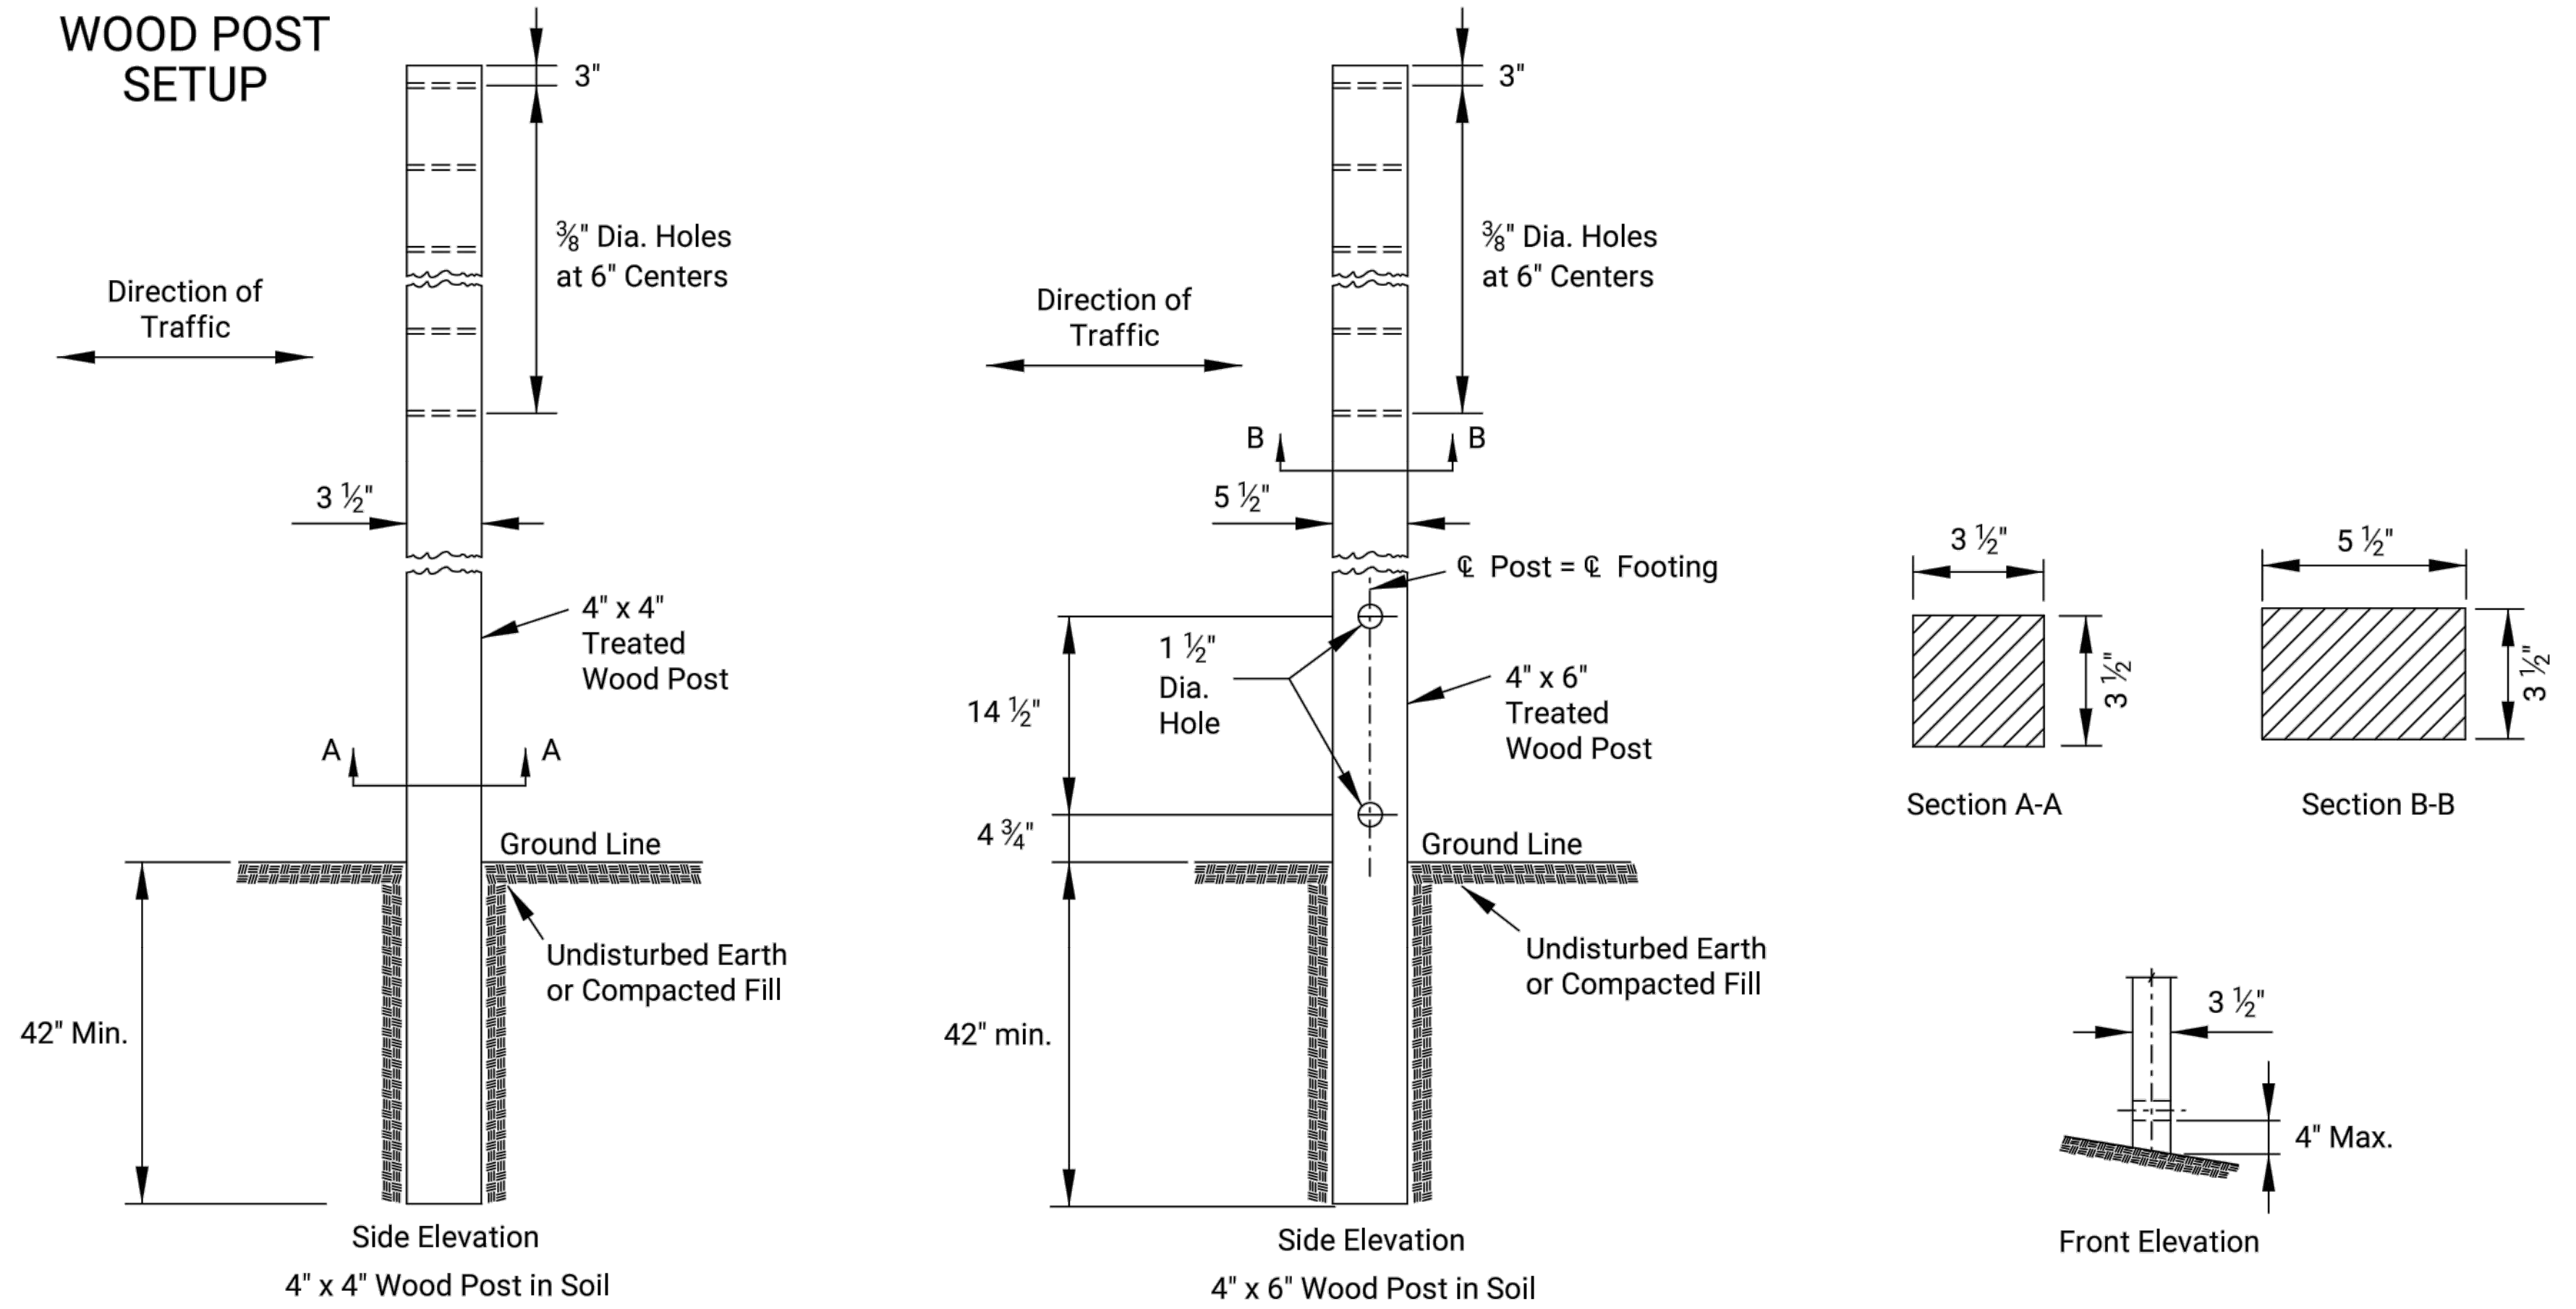


See TE710 for Additional Details and Requirements

3 LB/F U-CHANNEL SETUP

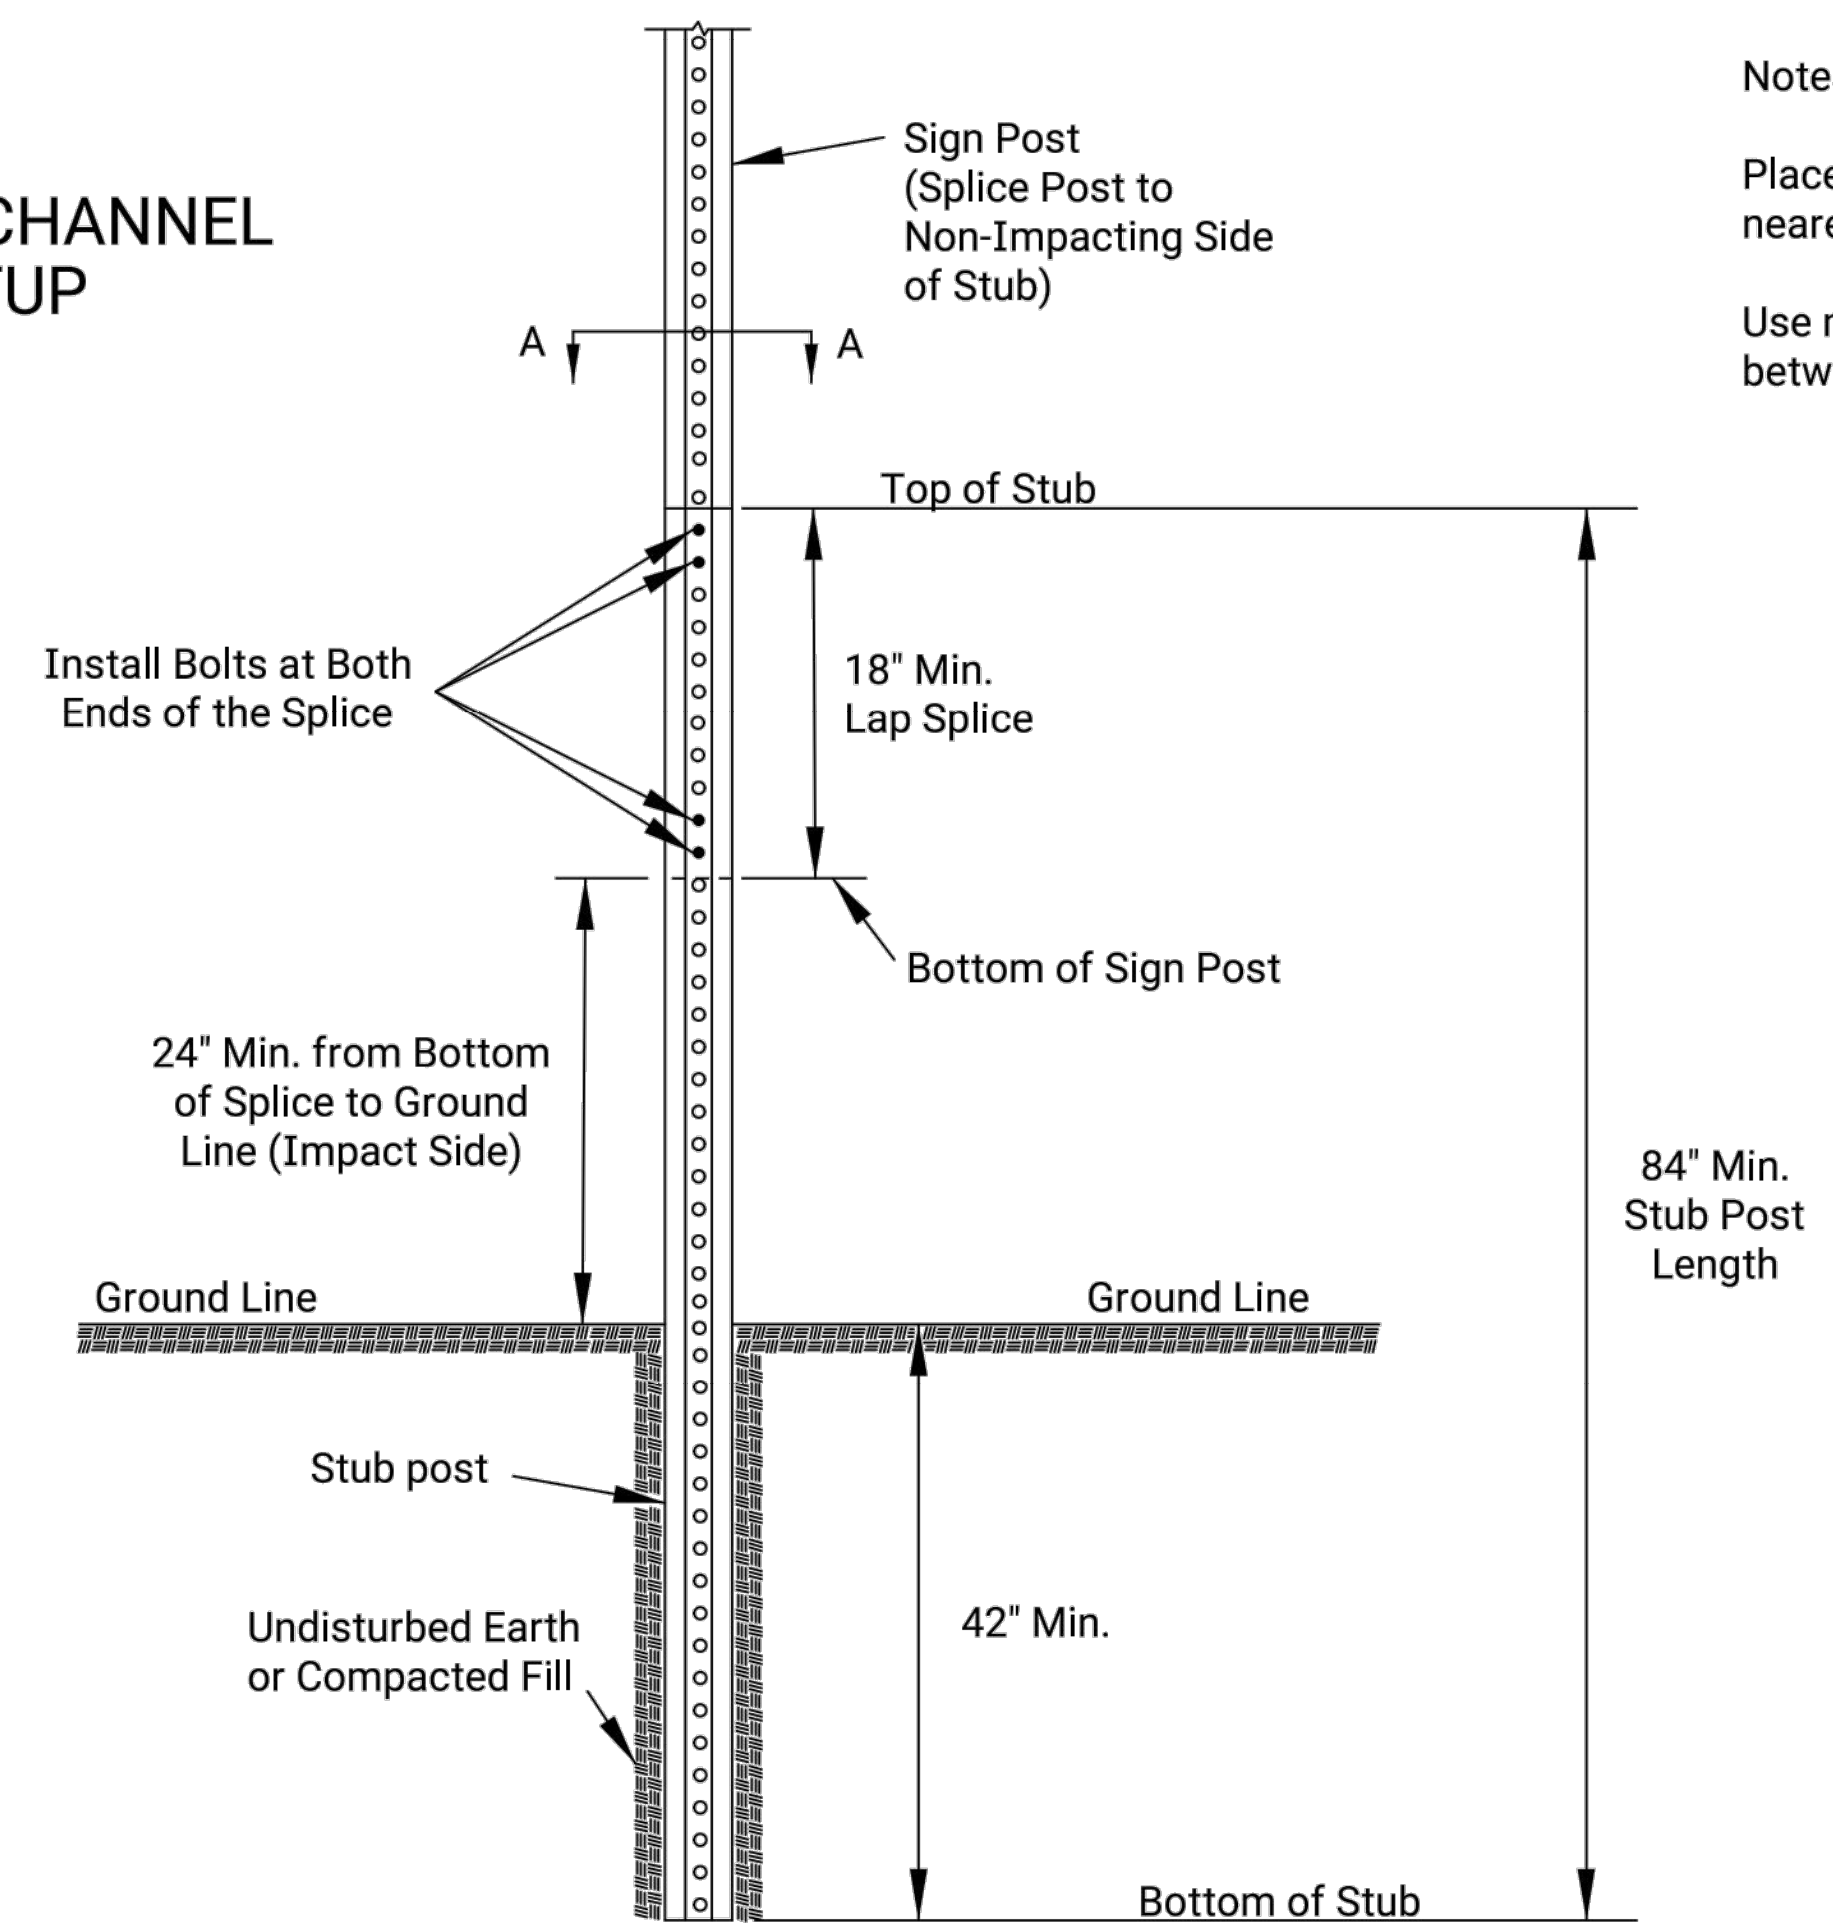

Notes:
Place two bolts at both ends of the splice through the holes nearest the ends of the splice.
Use manufacturer recommended spacers over the bolts between the spliced pieces of U-Channel.

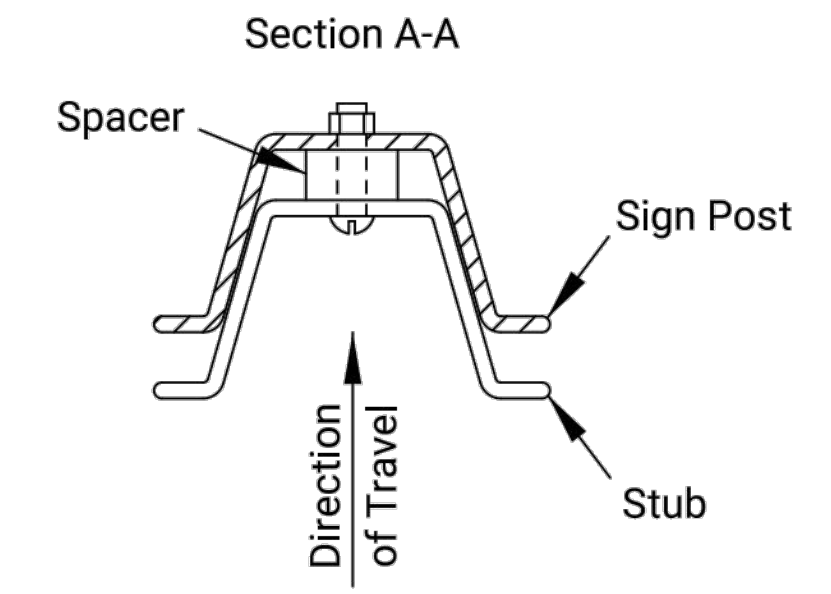

NO.	DATE	REVISIONS	BY	APPD.
KANSAS DEPARTMENT OF TRANSPORTATION				
TRAFFIC CONTROL SIGN POSTS				
TE712		06-01-15		APPD. Kristina Ericksen
DESIGNED	B.A.H.	DETAILED	R.W.B.	QUANTITIES
DESIGN CK.		DETAIL CK.		TRACE CK.

Plotted by: Robert.L.Barron@ks.gov 9-AUG-2022 16:44 File: TE712.dgn

KDOT Graphics Certified